



## TEST EQUIPMENT RENTAL SERVICES

When you rent Test Equipment from TDC, we want you to know that you will have a dedicated personal service from start to finish. Our Customer Service team is here to support you throughout your rental period.

TDC are independent specialists promoting all high quality manufacturers and instrument types. Equipment can be delivered Next Day or Same Day to suit your requirements.

When you are finished, simply contact us to arrange your equipment collection or alternatively you can despatch it back to us – we make it easy.

## RENTING FROM TDC JUST MAKES SENSE

By using TDC Test Equipment Rental Solutions, you benefit from our extensive rental inventory that is second to none. We constantly refresh our equipment range with branded equipment manufacturers such as Megger, FLUKE, Chauvin Arnoux, OMICRON, FLIR, b2 HVA, Agilent Technologies, Dranetz BMI, Fujikura, JDSU, Ametek Jofra, GE DRUCK, RAE Systems, TSI Airflow, Rohde & Schwarz, NORBAR, PANAMETRICS, Tektronix and many more.

You can utilise our rental equipment to suit your own requirements, from one week to as many months as you need. You only pay for what you use down to the day. Renting with TDC is straightforward and easy. Our expert Sales and Applications Engineers will find the best solution to suit your application.

Delivery & Collection is arranged by us - we make it hassle free and easy.

## TDC 6 POINT RENTAL GUARANTEE - OUR REPUTATION MATTERS



### 1 SAME DAY DISPATCH

Many of our customers operate to very strict deadlines. Providing the order is placed and confirmed before 3pm, your equipment will be despatched the same day.



### 2 QUALITY

All Equipment is checked prior to dispatch to ensure it is servicable and in safe working order. Certification checks are standard.



### 3 SUPPORT

We will provide you with enough information to make an informed choice of the correct equipment required for your application.



### 4 PRICE

We offer a simple price match promise. We'll match any genuine competitor quote.



### 5 CUSTOMER SERVICE

We can promise that throughout your rental period, we will do our utmost to provide you with the best customer service. All information we provide is in good faith and free of charge. We will provide a quote for any consultancy or professional advice that may be required.



### 6 REPUTATION

We know we are only as good as our last job. We don't just want regular customers - we want to build loyal customers.



For all enquiries, please contact: Gordon Thow (Test Equipment Rental Manager)

t: +44 (0)1224 710077 | e: [gordon.thow@tdcaberdeen.co.uk](mailto:gordon.thow@tdcaberdeen.co.uk) | w: [www.TDCaberdeen.co.uk](http://www.TDCaberdeen.co.uk)

a: TDC Aberdeen Ltd | Bankhead Industrial Estate | Bankhead Avenue | Bucksburn | Aberdeen | AB21 9ET



**TEST EQUIPMENT RENTAL SERVICES**

**CA1950 DiaCam 2**

**User Manual**

■ THERMAL CAMERA

# C.A 1950

DiaCAM<sup>2</sup>



ENGLISH

User's manual



## ATTENTION

An infrared camera is a sensitive optical measuring device. Pay special attention to the following points:



***Do not aim the camera at the sun, a laser welding, or other source of powerful thermal radiation.***

If parts of the camera are damaged or present problems following failure to heed the warnings listed above, neither the manufacturer nor the distributor shall be held liable, and all costs incurred shall be borne solely by the operator.

---

## INTRODUCTION

Infrared thermography detection technology has been in existence for many years in industrialized countries, where it has become an indispensable means ensuring safety in industrial production. It is used in sectors of industry as diverse as metallurgy and steel-making, electric power, petroleum, automation, the exploitation of natural gas, and transportation, and in other committed professions such as fire-fighting and border surveillance. In all of these activities, characterized by just-in-time operating procedures, high-voltage production equipment, powerful electric currents, and/or high operating speeds, infrared thermal imaging provides a real-time non-contact inspection method.

This detection method does not require you to cut off the power, shut down the machines or interrupt production. It can diagnose latent malfunctions in advance, and so forestall their occurrence and prevent production incidents. Thermal imaging is an innovative non-contact evaluation technique that is safe, reliable, and rapid.

Compared to the contact-based detection instruments still widely used, this new technology is revolutionary. Infrared thermal imaging detection technology has major applications in the following fields:

- surveillance of electrical equipment and high-voltage transformers
- locating leaks from thermal equipment and heat exchangers; analysis of heat losses
- identification of thermal failures in rail transport
- in the micro-electronics industry, rationalization of circuits by detection of systematic hot spots
- fire-fighting, locating latent fire sources
- at a fire, aid to victims and tactical command
- security professionals, night time surveillance

This is why infrared thermal imaging detection technology is currently regarded by all concerned as the cutting edge in industrial surveillance.

Thank you for purchasing a **C.A 1950** thermal camera.

For best results with your device:

- Read these operating instructions carefully,
- Comply with the precautions for use.

### **Meanings of the symbols used on the device:**



The CE marking indicates compliance with the European "Low Voltage" and "Electromagnetic Compatibility" directives (2006/95/EC and 2004/108/EC).



In the European Union, this product is subject to selective collection and recycling at end-of-life as waste electrical and electronic equipment under directive 2002/96/EC (WEEE): this equipment must not be treated as ordinary household waste. The spent batteries must not be treated as household waste. Take them to the appropriate collection point for recycling.



This product is designed to allow recovery and recycling of most of its constituents.

---

# CONTENTS

---

<b>1. GETTING STARTED .....</b>	<b>5</b>
1.1. Elementary precautions.....	5
1.1.1. Never aim the camera at the sun, a laser welding, or other source of powerful thermal radiation .....	5
1.1.2. Avoid exposing to dust with the lens flap open.....	5
1.1.3. Do not touch the lens with your fingers. ....	5
1.1.4. Avoid jolting or dropping the camera. ....	5
1.2. Powering the camera .....	6
1.3. Inserting the micro SD memory card.....	6
1.4. Organization of the display.....	7
1.4.1. Battery management.....	7
1.4.2. Main screen.....	8
1.4.3. Displaying the menus.....	11
1.5. Configuring the camera .....	11
1.5.1. Changing the language of the camera .....	11
1.5.2. Changing the camera's date and time .....	11
1.5.3. Changing the units of temperature and of distance.....	12
1.5.4. Changing the function associated with the trigger of the camera .....	12
1.5.5. Setting the time before automatic switching off of the camera .....	12
1.5.6. Adjusting the brightness of the screen .....	12
1.5.7. Changing the image backup location .....	13
1.5.8. Changing the colours used in the images .....	13
<b>2. CAMPAIGN OF MEASUREMENTS .....</b>	<b>14</b>
2.1. Estimating the temperature of an object without a cursor.....	14
2.2. Locating the cold and hot spots in the image .....	14
2.3. Measuring the temperature of a point in the image.....	14
2.4. Determining the characteristics of a zone on the screen.....	14
2.5. Displaying the temperature profile of a line in the image.....	14
2.6. Displaying points at the same temperature in the image.....	14
2.7. Freezing the colours representing the temperatures.....	15
<b>3. CAMPAIGN OF MORE PRECISE MEASUREMENTS .....</b>	<b>16</b>
3.1. Good practices .....	16
3.2. Use influencing parameters consistent with the conditions of measurement .....	16
3.2.1. Using the default compensation for the influencing factors .....	16
3.2.2. Using the user compensation for the influencing factors.....	17
3.3. Using a tripod.....	17
<b>4. SAVING AND RECALLING IMAGES.....</b>	<b>18</b>
4.1. How are the image files named?.....	18
4.2. Saving an image .....	18
4.3. Where are the images saved? .....	19
4.4. Adding a vocal remark.....	19
4.5. Changing the vocal remark of an existing image.....	19
4.6. Recalling an image.....	20
4.7. Playing back a vocal remark .....	21
4.8. Deleting an image .....	21
4.9. Transferring an image to a PC .....	21
4.9.1. With the micro SD memory card .....	21
4.9.2. Via the USB cable .....	22
4.10 Creating a report of intervention including images from the camera .....	22

<b>5. BACKUP AND RECALL OF USER CONFIGURATIONS .....</b>	<b>23</b>
5.1. Where are the configurations saved? .....	23
5.2. Saving the current setup of the camera.....	23
5.3. Recalling a saved setup .....	23
5.4. Deleting a saved setup .....	23
5.5. Returning to the default setup of the camera .....	24
<b>6. BLUETOOTH FUNCTION .....</b>	<b>25</b>
6.1. Activating/deactivating the Bluetooth function .....	25
6.1.1. Activating Bluetooth.....	25
6.1.2. Deactivating Bluetooth .....	25
6.2. Using the headset .....	25
6.2.1. How many headsets can be connected at a time? .....	25
6.2.2. Connecting a headset .....	25
6.2.3. Changing headsets .....	26
6.2.4. Disconnecting a headset .....	26
6.3. Using Bluetooth measurement peripherals .....	26
6.3.1. How many peripherals can be connected? .....	26
6.3.2. How many measurements can be recovered from a peripheral? .....	26
6.3.3. What peripherals does the camera recognize? .....	27
6.3.4. Connecting a Bluetooth measurement peripheral .....	27
6.3.5. How are the Bluetooth peripherals chosen?.....	27
6.3.6. Replacing one peripheral by another.....	27
6.3.7. Changing the frequency of reading of a Bluetooth peripheral .....	27
6.3.8. Displaying the measurements of the various Bluetooth peripherals .....	28
6.3.9. Using a Bluetooth measurement as an influencing parameter .....	28
6.3.10. Displaying the Bluetooth measurements on the main screen .....	29
6.3.11. Can the Bluetooth measurements be saved at the same time as an image? .....	29
<b>7. UPDATING THE FIRMWARE OF THE CAMERA.....</b>	<b>30</b>
7.1. Where can the firmware version of the camera be read?.....	30
7.2. How update the firmware? .....	30
<b>8. ARE YOU HAVING DIFFICULTIES? .....</b>	<b>301</b>
8.1. The IR image I obtain is solid-colour .....	31
8.1.1. The palette of colours is frozen .....	31
8.1.2. Inconsistent "user" influencing parameters .....	31
8.2. The contrast of my IR image is wrong .....	31
8.3. I am unable to save the current image .....	31
8.4. The file manager takes a very long time to respond.....	31
8.5. I cannot connect my headset .....	31
8.6. I cannot connect my Bluetooth peripheral .....	31
8.7. My Bluetooth measurements are not displayed or are not refreshed in the measurements manager.....	32
<b>9. SERVICING AND MAINTENANCE .....</b>	<b>33</b>
9.1 Cleaning the housing and screen of the camera .....	33
9.2 Cleaning the infrared optics.....	33
9.3 Metrological check .....	33
9.4 Unpacking, re-packing.....	33
9.5 Repair.....	33
<b>10. WARRANTY .....</b>	<b>34</b>
<b>11. DELIVERY CONDITION .....</b>	<b>35</b>

**APPENDIX I - Menu tree**

**APPENDIX II - Emissivity table**

**APPENDIX III - Technical specifications**

---

# 1. GETTING STARTED

---

## 1.1. Elementary precautions

---

### 1.1.1. Never aim the camera at the sun, a laser welding, or other source of powerful thermal radiation

Direct exposure to sunlight or other strong thermal radiation can impair the operation of the camera and make the infrared sensor partially or totally inoperative for as long as several months.

We therefore recommend closing the lens flap when the camera is not in use, to avoid any accidental exposure.

### 1.1.2. Avoid exposing to dust with the lens flap open

Even though it is rated IP54 (dust and splash protected), it is best not to use the camera in a dusty environment: dust deposited on the lens can not only perturb the measurements (absorption of part of the thermal flux and spurious diffusion) but also impair the sharpness of the images.

To clean your lens, refer to § 9.2. [Cleaning the infrared optics](#).

### 1.1.3. Do not touch the lens with your fingers

Finger marks must be carefully avoided, because acids from the skin attack the coatings and the glass of the lens; they can leave indelible traces. Refer to § 9.2. [Cleaning the infrared optics](#).


### 1.1.4. Avoid jolting or dropping the camera

The camera is rugged, but even so it is a delicate precision instrument which should not be jolted or dropped.

## 1.2. Powering the camera



- The camera accepts AA batteries of two types:
  - either alkaline batteries
  - or Ni-MH rechargeable batteries.
- The latter must be recharged with an external charger.
- When the batteries are withdrawn, the internal clock has enough power for 15 hours.
- The batteries are inserted through the end of the handle.
- Open the cover using a coin while pressing down on the locking tab:

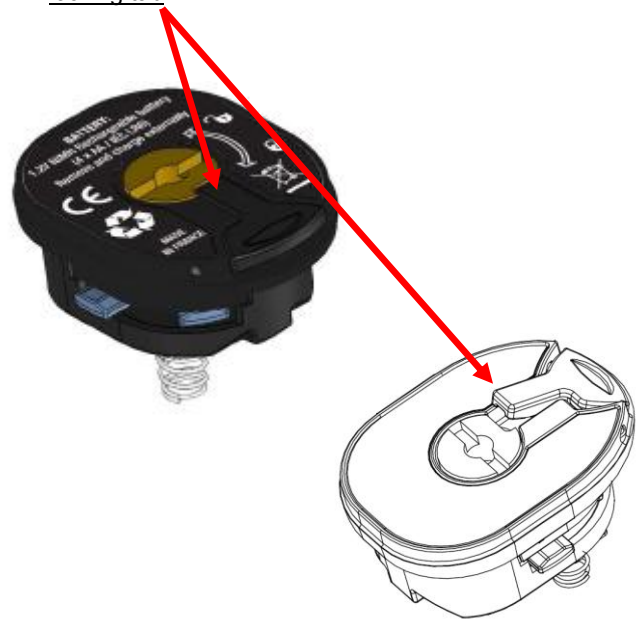

## 1.3. Inserting the micro SD memory card



Micro SD memory card

The files created by the camera (image, audio, and setup files) are stored only on the micro SD memory card located on the left side of the head.

If this card is missing, an error message appears as soon as access to it becomes necessary.

The memory card must be formatted:

- either in FAT16 format,
- or in FAT32,

or it cannot be read.

To insert the card, open the rubber flap and push the card into its slot. Refer to the diagram opposite.

***Take care to insert it in the right direction.***

***If the card cannot be inserted:***

- ***either it is in the wrong direction and must be turned around;***
- ***or there is already a card in the slot.***

## 1.4. Organization of the display

In principle, the camera starts up:

- in its main display,
- in continuous acquisition mode,
- with the setup loaded when it was last switched off.

However, after the batteries have been withdrawn, when the camera is started up, a "[Battery Management](#)" menu is displayed.

It can be displayed on demand, by keeping the **F2** key pressed when the camera is started up.

Information messages may be superimposed on this screen (*example: messages for reconnection of the Bluetooth peripherals if they had been used, or error/information messages, as the case may be*).


The system date and time entry menu is displayed if the power supply to the internal clock has been interrupted. It is recommended in this case to update this information, which is used in the names of the image files.

### 1.4.1. Battery management

To inform the operator of the state of the batteries during operation, the camera has a battery indicator in the status bar of the main screen (see § 1.4.2.1. [Status bar](#)). The battery manager can be controlled in two ways:

#### 1. default mode:

the operator is not required to enter any information, but is informed when the charge level of the batteries is low:

- no display before this low level is detected,
- display of  approximately 30 minutes before automatic shutdown of the instrument.


#### 2. advanced mode:


This allows precise tracking of consumption, provided that the necessary data are correctly entered, namely:


- the type of batteries used,
- their theoretical capacity.


This battery manager assumes that the batteries inserted before the data are entered are fully charged.

The "Battery Management" menu selects the operating mode:

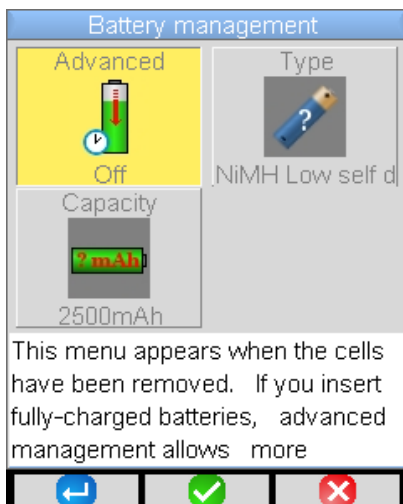



**F1**  confirms the information entered, closes the window and initializes the battery manager with these settings.

**F2**  edits and confirms entry of the selected item.

**F3**  cancels an entry or closes the window without resetting the battery manager.

The "Advanced" item determines whether the advanced mode is active or not:

- Pressing **F2**  edits the value of the item.
- The Up/Down arrows select a value and **F2**  confirms entry.


**Type of batteries:** The camera is delivered with low-self-discharge Ni-MH rechargeable batteries with a capacity of approx. 2500 mAh. These are the default parameters.



**If the user always uses the same set of rechargeable batteries, it may be useful to operate until the camera automatically switches off because the batteries are low. In this case, the theoretical capacity of the batteries entered at the outset is automatically adjusted in light of the actual discharge. This new capacity is proposed by default the next time the menu is displayed.**

### 1.4.2. Main screen



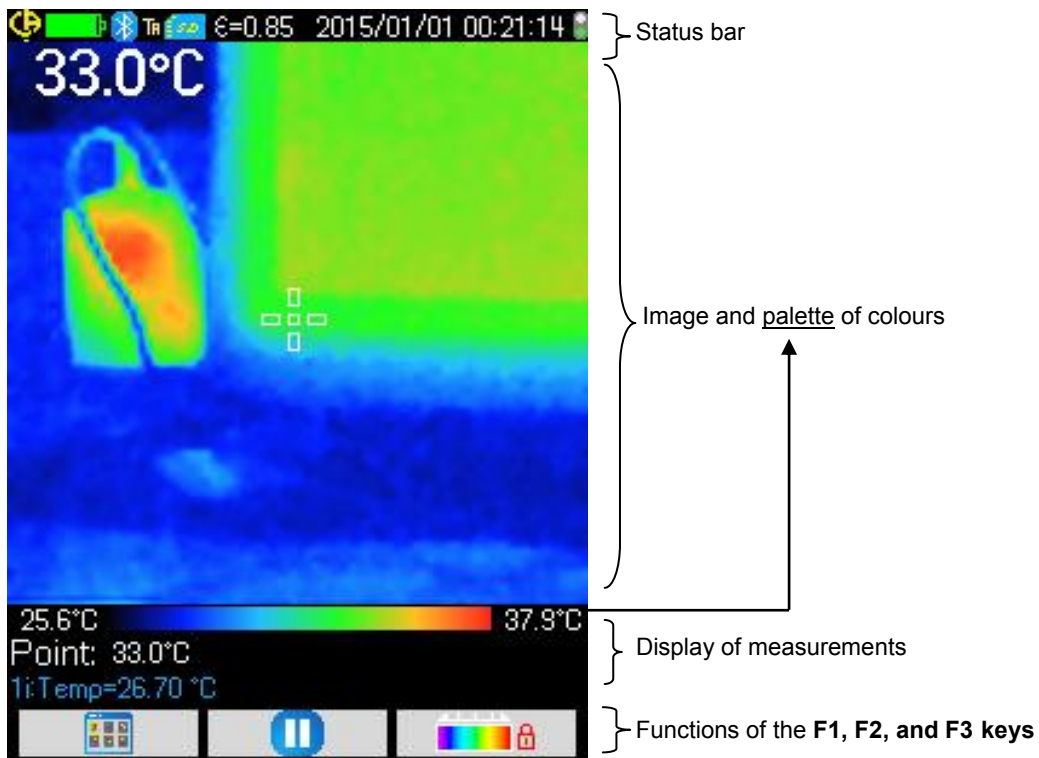




 




The screen is divided into 4 zones:












### 1.4.2.1. Status bar

This bar tells the operator the current operating mode of the camera.

In normal operation, it contains the following information → 

no display 	Batteries OK Batteries discharged	} Default management
  	Batteries OK Batteries low Batteries discharged	
 no display	Bluetooth function activated Bluetooth not activated	
TA TF TS	Function of the trigger → <b>Aim</b> Function of the trigger → <b>Freeze</b> Function of the trigger → <b>Save</b>	
 	Presence of micro SD detected Absence of micro SD detected	
 	Value of the emissivity, user correction for influencing factors activated Default correction for influencing factors	
	Date and time of acquisition of the current image	
 	Continuous acquisition Acquisition stopped → Image frozen	

When an image is recalled, the information becomes → 

no display 	Batteries OK Batteries discharged	} Default management
  	Batteries OK Batteries low Batteries discharged	
 no display	Bluetooth function activated during creation of the file Bluetooth not activated during creation of the file	
TA	Function of the trigger → <b>Aim</b> , forced when an image is recalled	
 	Recall of infrared image in progress Recall of visible image in progress	
no display 	The correction of user influence factors is activated The correction of default influence factors is activated	
	Recalled file name	

### 1.4.2.2. Image & palette of colours

This zone is reserved: -either for display of the infrared image with the associated palette of colours,  
-or for display of the visible image, depending on the display which is chosen.

 
The colour palette is used to identify the temperatures of the various colours used on the thermogram. By default, this temperature/colour assignment is done automatically as a function of the minimum and maximum temperatures read in each image. But the operator can also fix this relation by forcing the min. and max. temperatures: imposing a "frozen" palette (see § 2.7. [Freezing the colours representing the temperatures](#)).

In the automatic mode, the palette is represented as follows: 

When the palette is frozen, the min. and max. temperatures are shown in red and a padlock appears in the centre: 

### 1.4.2.3. Display of the measurements

This space is used to display the measurements of the various cursors, along with the Bluetooth measurements when a peripheral measurement device is connected and enough space is left on the screen.



See § 2. [Measurement campaign](#) and § 6.3.10. [Display of Bluetooth measurements on the main screen](#)

### 1.4.2.4. Functions of the F1, F2, and F3 keys




The F1, F2, and F3 keys have different functions depending on the display and camera operation context.

These functions are identified by the icons displayed in this space above the keys in question:

	Opens the menu or re-opens the last menu opened
	Closes all open menus
	Validates an item, an entry, closes a message, adds the selected character...
	Closes a menu, cancels an entry, a record
	Freezes the image
	Restarts continuous acquisition
	Saves the current image
	Validates the entry in the text editor or the selection in the working directory
	Deletes the file or folder selected in the file manager
	Opens the file or folder selected in the file manager
	Exits from image recall
	Information concerning the recalled file
	Freezes the colour palette
	Edits the min or max value of the palette or restores automatic mode
	Displays the infrared image
	Displays the visible camera image
	Plays back the vocal message
	Records a new vocal message
	Stops playing or recording the vocal message
	Searches for new Bluetooth peripherals
	Connects all Bluetooth peripherals in the current list

### 1.4.3. Displaying the menus

The menus are accessed by pressing the **F1** key with the  function. When a menu is displayed, new functions are assigned to the **F1**, **F2** and **F3** keys.

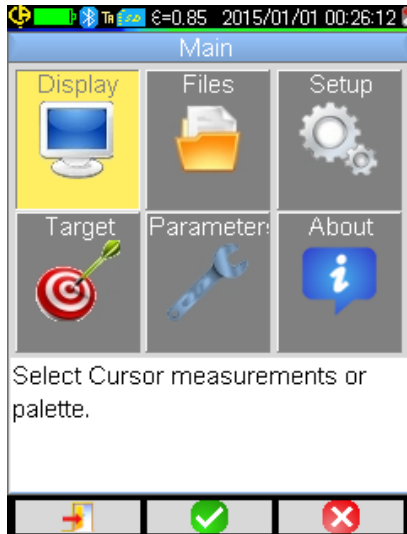



Select an item in the menu using the arrow keys. The selected items appear in yellow.


The **F2**  key is used:


- either to open the corresponding sub-menu
- or, in some cases, to modify the parameter represented.

The menus form a tree structure which is recalled in the title of the window.

The **F1**  key closes all open menus, without action, and is used to return to the main screen.

The **F3**  key closes the current window, without action (return to the previous menu, if any, or to the main screen).

When a parameter is being modified, it appears on a blue background with the symbol  to the left; the possible values can be scrolled using the Up/Down keys.


**F2**  pressed again → the value is accepted.

An item that is displayed shaded cannot be modified.

## 1.5. Configuring the camera

When the camera is first started up, all parameters are initialized to "default" values; the operator can modify these settings to meet his/her needs.

Once these adjustments have been made, they are stored in permanent memory each time the device is switched off and recovered when it is switched back on.

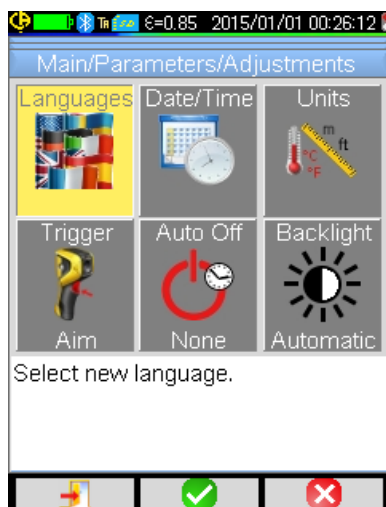

Most of these settings are accessible from the "Main/Parameters/Adjustments" menu.

### 1.5.1. Changing the language of the camera

The menus are translated into languages which can be selected from the Main/Parameters/Adjustments menu by validating the




item.

 
### 1.5.2. Changing the camera's date and time

The camera's clock is reset from the Main/Parameters/Adjustments menu by validating the  item.






This menu opens automatically at start-up if the power supply of the internal clock has been interrupted. It is essential to update the date and time, in order to identify the records, because the thermogram file names depend directly on this information (see § 4.1. [How are the image files named?](#)).

The information entered and validated is applied by **F2** .

### 1.5.3. Changing the units of temperature and of distance


	<p>From the Main/Parameters/Adjustments menu, validate the item opposite to select the unit in which temperatures or distances are displayed:</p> <ul style="list-style-type: none"> <li>-the temperature is displayed in degrees Fahrenheit (°F) or Celsius (°C),</li> <li>-the distance in feet (ft) or metres (m).</li> </ul>
---	--

### 1.5.4. Changing the function associated with the trigger of the camera

	<p><b>Three functions</b> are associated with the trigger. They are selected from the Main/Parameters/Adjustments menu by validating the items described below:</p>	
<p>↩</p> <p><b>1. Aim</b></p> 	<p>This function is used to toggle the display from the infrared image to the visible camera image, to make it easier to aim at a target.</p> <p>When this function is selected, the "TA" icon is displayed in the status bar at the top of the screen.</p> <p>When an image is recalled, the trigger is automatically assigned to this function. Upon exit from the recall, the function programmed by the operator is restored.</p>	
<p>↩</p> <p><b>2. Freeze</b></p> 	<p>This function is used to stop on an image: in this case, both images, infrared and visible, are frozen; you can toggle between them by pressing <b>F3</b>.</p> <p>When this function is selected, the "TF" icon is displayed in the status bar at the top of the screen.</p> <p>Pressing again restarts continuous acquisition.</p>	
<p>↩</p> <p><b>3. Save</b></p> 	<p>This function starts by freezing the infrared and visible images, then records them on the micro SD card (if one is present).</p> <p>When this function is selected, the "TS" icon is displayed in the status bar at the top of the screen.</p> <p>Each press entails another save, creating derivative files if acquisition is not restarted in the meantime.</p> <p>To restart continuous acquisition, simply press <b>F2</b> .</p>	

### 1.5.5. Setting the time before automatic shutdown of the camera

To extend its battery life, the camera switches itself off automatically (no operator action: key press, etc.) after a time that can be set to between 15 and 60 minutes (15min being the default value).


	<p>This function is accessible from the Main/Parameters/Adjustments menu, by validating the item opposite.</p>
---	--

It is possible to deactivate this function (choose "None"), in which case the camera will switch itself off (if the operator does nothing) when the batteries are too low to supply it.

### 1.5.6. Adjusting the brightness of the screen

For greater convenience of use, it is possible to adjust the screen lighting level. For example, the lighting can be lowered when it is dark to avoid being dazzled, or turned up for use outdoors on a sunny day.


By default, the camera is configured in automatic mode: a luminosity sensor adjusts the lighting level at all times.

	<p>This adjustment, which directly affects the battery life, can be accessed from the Main/Parameters/Adjustments menu by validating the item opposite.</p>
---	---

### 1.5.7. Changing the image backup location



The images are saved to a working directory which can be selected by the operator in the Main/Files menu, by validating the item opposite.

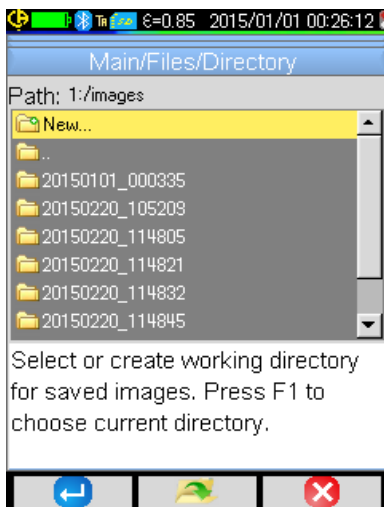

The working directory must be located on the micro SD card, which must be present in the device.

A default directory, "1:/images", is defined.

Since the time it takes to access the micro SD card is rather long, it is best to organize the records into several directories and to limit the number of files in each of them; this will make the time needed to display the content of each directory shorter.

The current directory is chosen as working directory after **F1** is pressed to close the window.

Pressing **F2** opens the selected item of the list. Thus, to move back up the tree to the previous level, open the "... " item of the list, and to create a new directory, open the "New..." item.



The Create menu is used to enter the directory name; the number of characters is limited to 20:

Select the letter to be insert using the arrows, add it with **F2** , and confirm the entry with **F1** .

**Note:** *The button can be used to insert the current date and time.*

#### Attention!


**We recommend creating a directory in the root of the SD card to store the images: in the case of FAT16 formatting, if long names are used, only 256 entries are available in the root (any combination of 256 files and directories); the card will very quickly be considered full, even though its full capacity has not been reached.**

 
### 1.5.8. Changing the colours used in the images



The camera has several palettes of colours, one of which can be selected by validating the item of the Main/Display menu.

## 2. MEASUREMENT CAMPAIGN

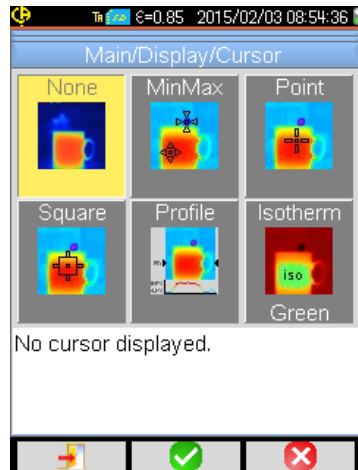

By default, no measurement cursor is selected (selection of the  item in the Main/Display/Cursor menu), and the camera produces only infrared images.

### 2.1. Estimating the temperature of an object without a cursor

It is possible to evaluate a temperature from the information of the colour palette. The distribution of the colours between the minimum and maximum temperatures displayed at the ends of the palette is linear, so simply interpolating based on the position of the colour in the palette gives the temperature sought.

*Example: if the colour of the zone of which the temperature is to be determined lies at the centre of the palette, the temperature corresponding to this colour will be approximately  $T_{min} + (T_{max} - T_{min}) * \frac{1}{2} = (T_{min} + T_{max})/2$ , in other words the mean of the min. and max. temperatures of the palette; if the colour lies in the 1st quartile,  $T_{min} + (T_{max} - T_{min}) * \frac{1}{4}$  etc.*

### 2.2. Locating the cold and hot spots in the image



In the Main/Display/Cursor menu, choose the **Min/Max** cursors → they represent the minimum and maximum temperatures in the image and display their values.

### 2.3. Measuring the temperature of a point in the image



In the Main/Display/Cursor menu, choose the **Point** cursor → it gives the temperature of a point. It can be moved on the image using the arrow keys. Place the cursor in the centre of the screen and aim so as to shift the point to the centre.

### 2.4. Determining the characteristics of a zone on the screen



In the Main/Display/Cursor menu, choose the **Square** (area) cursor → it indicates the mean value and the minimum and maximum temperatures of the square area highlighted by the cursor. Place the area in the centre of the screen, then aim so as to shift the target zone into this area.

Move this area using the arrow keys or adjust its size using the following combinations of keys: Up + Left to reduce it and Down + Right to enlarge it.


### 2.5. Displaying the temperature profile of a line in the image



In the Main/Display/Cursor menu, choose the **Profile** cursor →; it highlights a horizontal line in the image (Up/Down keys) and shows its profile. This cursor also identifies a point on this line (Left/Right keys) and indicates its temperature.

### 2.6. Displaying points at the same temperature in the image



In the Main/Display/Cursor menu, choose the **Isothermal** cursor → it marks with the same colour points at the same temperature to within a given tolerance. Selection of this mode requires two validations of the menu item with the **F2**  key: one to activate selection of the colour representing the temperature (Up/Down keys to scroll through the colours) and one to validate the choice and start the function).

The Up/Down keys adjust the temperature and the Left/Right keys the tolerance.

---

## 2.7. Freezing the colours representing the temperatures


---

By default, assignment of the colours is automatic and is recalculated for each image as a function of the temperatures of the hot and cold spots in the image.

In consequence, a given colour does not necessarily represent the same temperature from one image to another, if the hot and/or cold spots change.


If you want the colours always to represent the same temperatures, the palette must be frozen (the min. and max. temperatures of the palette remain constant, whatever the hot and cold spot temperatures in the image).

- **There are two ways to freeze the palette:**



- either using the **F2** or **F3** key, when its function is 

- or from the Main/Parameters menu, by validating the item  with the **F2** key to change its value to "Manual" (Up/Down keys).


When the palette is frozen, a red padlock appears on the palette; the min and max values are also red.


When the mode is entered, the minimum changes to edit mode for a few seconds (on a blue ground with the  symbol) so that its value can be changed (Up/Down keys).

To modify the max., a simple press on Right (when min. is in edit mode) edits the value. If there is no action on the keypad for a few seconds, the edit mode disappears.

To re-edit a value, another press on the **F2** or **F3** key with the  function, or another validation of the item  in the Main/Parameters menu, returns the min. value to edit mode.

- **To exit from the frozen palette mode, the following steps are necessary:**

- if not in edit mode→ two successive presses on **F2** or **F3** having the function 

- if in edit mode→ a single press from the edit mode or, from the Main/Parameters menu, by editing the item  of the Main/Parameters menu to restore the value "Automatic".

## 3. MORE PRECISE MEASUREMENT CAMPAIGN

### 3.1. Good practices

- Make the measurement in the central zone of the screen.
- Aim head on, not at an angle.
- Measure scenes that are large enough. Avoid point-like scenes.
- Following a variation of ambient temperature, wait for the camera to stabilize.
- If the storage batteries have warmed up during charging, wait before putting them back in the camera.

### 3.2. Use influencing parameters consistent with the conditions of measurement

The flux received by the camera depends:

- on the **emissivity** of the object observed,
- on the **temperature** of the environment,
- on the **distance** to the target,
- on the relative **humidity** of the air.

The emissivity is the most crucial of the adjustments, whatever the measurement context.


The higher the relative humidity and the greater the distance, the larger the influence of the relative humidity.

The relative humidity, the ambient temperature, and the distance are likely to vary more significantly outdoors.

The measurement context may not match the default settings, leading to measurement errors that may be large. For this reason, manual or "user" compensation is proposed to allow adjustment of these parameters.


**Attention!** *Incorrect settings of the various parameters can lead to an aberrant result, possibly worse than that obtained with the default parameters.*

#### 3.2.1. Using the default compensation for the influencing factors

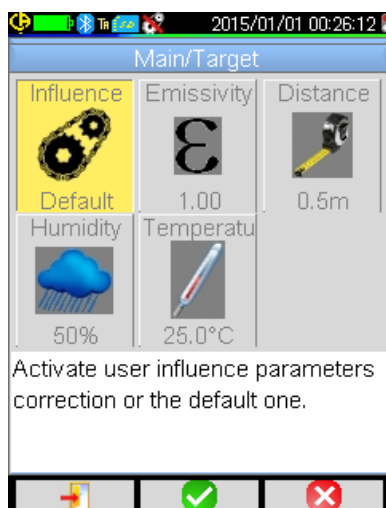

The default compensation for the influencing factors matches the context of calibration of the camera (example: the emissivity is set to 1.00, the distance to 0.5m, the relative humidity to 50%, and the ambient temperature to 25°C).

In this case, the parameters cannot be customized and are displayed shaded in the Main/Target menu.


The value of the emissivity in the status bar is replaced by the  symbol.

If the emissivity of the object observed is close to this, and so are the environment parameters, this calculation mode can be used.


This is also the case if the operator does not need very precise measurements (search for thermal bridge or temperature difference).

### 3.2.2. Using the user compensation for the influencing factors

This calculation mode is necessary when the measurement conditions are significantly different from the calibration conditions (emissivity, relative humidity) and the operator wants accuracy.

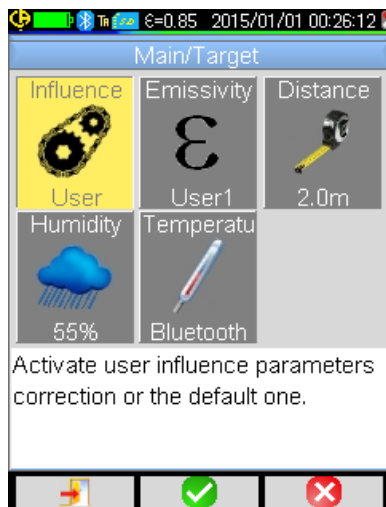


When user compensation is selected, the various parameters can be adjusted:

- **emissivity**: it is necessary to choose from a list of materials or enter a value. There are 3 user values that can be modified (press the Right key to enter the value, the Up/Down keys to change it, and **F2**  to validate the entry). Once it is validated the menu closes and the value of the emissivity appears in the status bar.  
→ it is adjustable from 1.00 to 0.05
- **distance**: the default is 2m,  
→ it is adjustable from 0.5m to 999.9m
- relative **humidity**: the default is 55%,  
→ it is adjustable from 0 to 100%
- ambient **temperature**: the default is 25°C,  
→ it is adjustable from 0°C to +55°C

### 3.3. Using a tripod

To improve the sharpness of the images and therefore the accuracy of the measurements, it is possible to use a support that prevents extraneous movements.

The camera can be attached to the tripods used in photography using the 1/4-inch-diameter insert on the underside of the handle, on the battery compartment cover.

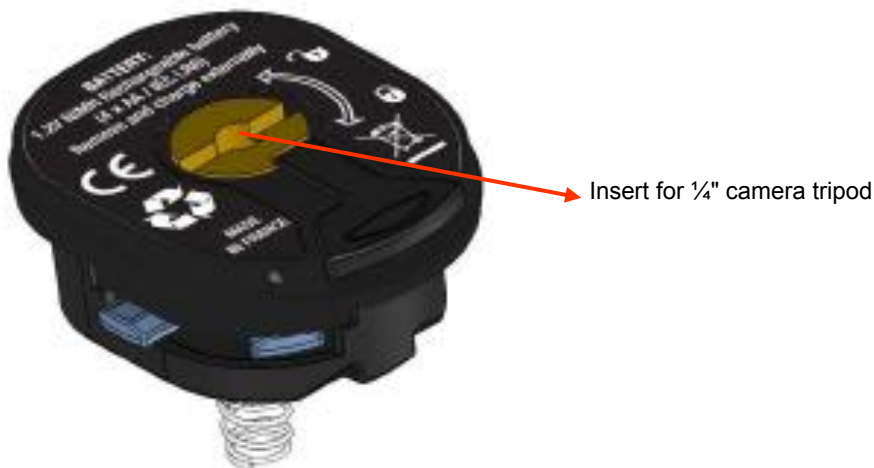

---

## 4. SAVING AND RECALLING IMAGES

---

If there is a micro SD memory card in the drive, it is possible to **store**, then **recall** the current image and measurements displayed.

### 4.1. How are the image files named?

---

The camera has two objectives, one for infrared images, the other for entering a photograph in the visible domain. In consequence, when an image is recorded, two files are created, one for the infrared image, named "yyyymmdd\_hhmmss\_IR.BMP", the other for the visible image, having the same name but without the IR extension ("yyyymmdd\_hhmmss.BMP"), where yyyymmdd\_hhmmss is the date and time of acquisition of the image (the operator must take care to reset the system date and time in advance, see § 1.5.2. [Changing the camera's date and time](#)).

A third file may be added to the other two if a Bluetooth headset is connected to the camera and the operator accepts the proposal to create a vocal message (see § 4.4. [Adding a vocal remark](#)). This file will be given the same name as the associated IR image, with the extension .WAV instead of .BMP (e.g. yyyymmdd\_hhmmss\_IR.WAV).


When the image is frozen, it is possible to make several backups of the same image (addition of cursors, change of palette, etc.). These are referred to as "derived" images: to differentiate these infrared images, which have the same date of acquisition, an index from "a" to "z" is added after the date (e.g. 20141020\_131254a\_IR.BMP). When all indexes from "a" to "z" have been used, the index "z" is re-used and the file that already bears this name is overwritten by the new one.


As for the visible image, it does not change and so is not duplicated. A single visible image can therefore be associated with several infrared images (when erasing visible images other than via the camera's file manager, take care not to create orphan IR images). Here again it is possible to add a vocal message, which will have the same name as the IR image (e.g. 20141020\_131254a\_IR.WAV).

### 4.2. Saving an image

---


It is possible to save an image when there is a micro SD memory card in the drive.


**In normal operation** → if the function associated with the trigger is Aim or Freeze (see § 1.5.4. [Changing the function associated with the camera's trigger](#)), it is first necessary to stop acquisition (if this has not already been done, press **F2** ) to freeze the image.

Either the **F2** or the **F3** key then takes on the  function, allowing backup of the current image in the working directory. If the trigger is assigned to the Save function, each press freezes the image (if it is not already frozen) and records the frozen image in memory.

If acquisition is stopped, each further press creates a new "derived" image (same date of acquisition), differentiated by the addition to its name of an index (see § 4.1. [How are the image files named?](#))

**If an image is recalled** → it is possible to create a new image (derived, because from the same acquisition) by

selecting the item  in the Recall menu; a new index (see § 4.1. [How are the image files named?](#)) will be used, since the date of acquisition is unchanged.

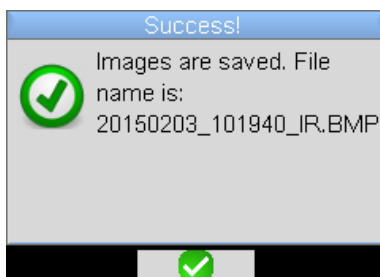

When the backup is terminated, a message reports the name of the file that has just been created.



If a Bluetooth headset is connected (see § 6.2.2. [How to connect a headset](#)) a second message proposes adding a vocal remark to this file.

As the case may be, 1, 2, or 3 files are saved:

<b>1 file</b>	for a derived image (same date of acquisition) with no headset connected (the visible image already exists, only the IR file is created)
<b>2 files</b>	for the creation of an image from a new acquisition (new date of acquisition) with no headset connected (the IR and visible image files are created)
<b>3 files</b>	for the creation of an image from a new acquisition with a vocal file

### 4.3. Where are the images saved?


The images are saved in the working directory selected by the operator in the Main/Files/Directory menu (see § 1.5.7. [Changing the image backup location](#)).

The working directory must be located on the micro SD card present in the device; if it is missing, an error message informs the operator.

### 4.4. Adding a vocal remark

The vocal functions are performed by means of a Bluetooth headset, which must be connected to the camera (see § 6.2.2. [How to connect a headset](#)).

The vocal message can be added only at the end of a backup of an image, after the display of the message indicating the name of the file created. If the headset is connected, another message proposes recording a vocal message (see above). The duration of a vocal message is limited to 30 seconds.

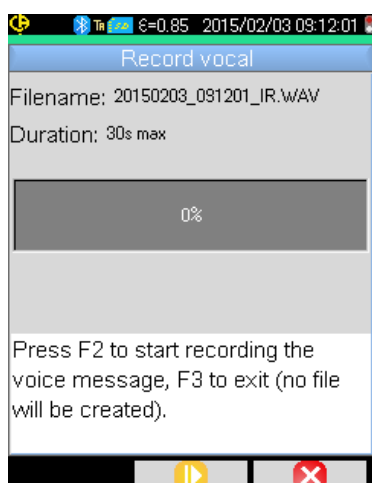

- The vocal message recording window uses the **F1**, **F2** and **F3** keys, which receive the following functions:
- : to start recording (or adding another message)
- : to stop recording or playback
- : to play back the message
- : to close the window (without creating a file if the press was before the start of recording or during recording).

### 4.5. Changing the vocal remark on an existing image

The only way to change a vocal file, apart from the record menu, is to create a new file and delete the old one.



First of all, the image concerned must be recalled (see § 4.6. [How to recall an image?](#)), then saved by selecting the item in the Recall menu.


A new derived image (with a new index, "a" to "z") is then created.

If the headset is connected, a message proposes creating an associated vocal record.

All that remains is to create the new message (see above) and erase the old image (see § 4.8. [How to delete an image?](#)).



## 4.6. Recalling an image

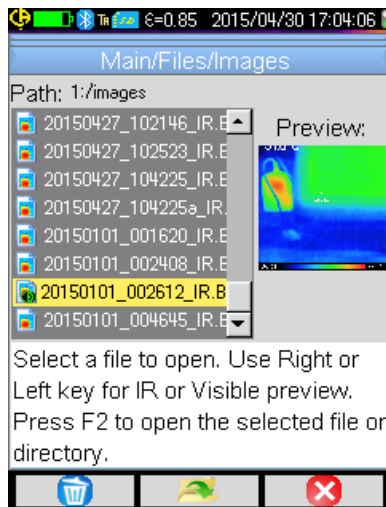An image is recalled from the Main/Files/Images menu, provided that the micro SD card is in its slot.






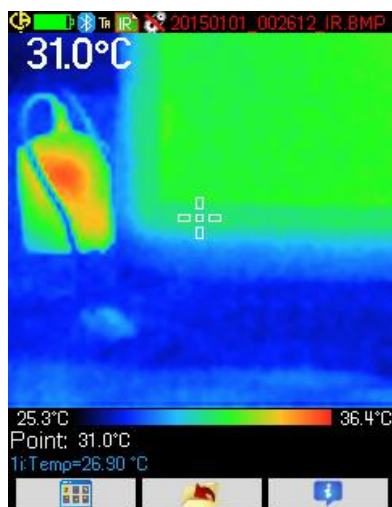
The file manager lists only infrared images generated by the camera bearing a name in the form yyyyymmdd\_hhmmssX\_IR.BMP, along with the folders, to allow browsing in the tree of the SD card.

A preview of the image is provided, and the Right/Left keys can be used to go from the infrared display to the associated visible image.

Images that have an associated vocal message are identified in the file manager by the  icon, while the other images are identified by the  icon.

### **The F1, F2, and F3 keys associated with the file manager are:**




	deletes the selected file or directory (only empty directories can be deleted)
	opens the selected directory or file (opening a file recalls it)
	closes the file manager.



Opening an image closes the menus and the display of the image on the main screen.

The status bar changes (see § 1.4.1.1. [Status bar](#)) and the file name is displayed in red.

### **The F1, F2, and F3 keys associated with the main image recall screen are:**


	opens the recall menu, which allows the operator to modify the palette, the cursors, to toggle from the IR to the visible image, to save the current image, to change the influencing parameters, or display the Bluetooth measurements (if there were any when the recalled image was saved).
	exits from image recall and returns to the file manager.
	displays the complementary information concerning the file and gives access to playback of the associated audio file as the case may be.



During a file recall, the trigger is used to toggle from the infrared image to the photograph of the target in the visible domain.

## 4.7. Playing back a vocal remark





A vocal message is played back using the Bluetooth headset, which must be connected to the camera (see § 6.2.2. [How to connect a headset](#)).

To play back the vocal message associated with an image, the image must be recalled (see § 4.6. [How to recall an image](#)) and the **F3**  key used to open the window of information on the file.

The **F2** key then takes on the following functions: to play back the vocal message  or to stop playing it back .

## 4.8. Deleting an image

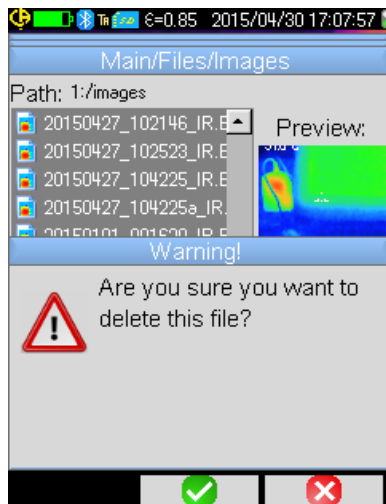

An image is deleted from the file manager (Main/Files/Images menu) by pressing the **F1**  key.

A message appears confirming the definitive deletion of the file.

Deletion of a file deletes the IR file, the associated audio file (if any), and the visible image, if there are no more IR images associated with it.

## 4.9. Transferring an image to a PC

The images are always saved to the micro SD memory card.

**Attention!** *An image that is modified and/or renamed on the PC becomes unusable on the camera:*

- Part of the information contained in the image may disappear
- The file manager screens the names.

### 4.9.1. With the micro SD memory card

The micro SD memory card is withdrawable, so it can simply be removed from its slot and inserted in a card reader on a PC. The image files can therefore be transferred like any other files, by copying from one directory to another.

---

#### 4.9.2. Via the USB cable

- The camera, in normal operation, has a mass storage type USB port: when the camera is connected to a PC via the USB cable, the content of the micro SD memory card is directly accessible from the PC, with images transferred by copying from one directory to another.
- If the file manager of the camera is open and the PC modifies the content of the SD card, the file manager of the camera must be re-opened so that the latter can apply the modifications.
- Conversely, any modification from the camera requires disconnection/reconnection of the USB cable to force an update of the file manager of the PC.

### 4.10 Creating an operating report including images from the camera

---

The instrument is delivered with an application **CamReport** allowing post-processing of the images taken with the camera and automatic generation of reports.

To use an image, simply transfer the image files from the SD card (infrared image, visible image, and audio file) to the PC and open it with the application (see the documentation of the software).

---

## 5. BACKUP AND RECALL OF USER CONFIGURATIONS

---

The setup files contain a complete backup of the current parameters of the camera, enabling the operator to return to an operating mode defined earlier (user setup) or to a predefined setup (factory setup). The setup stores the list of BT peripherals connected and their statuses, to allow their re-use.


### 5.1. Where are the configurations saved?



Like the images, the setup files are saved in the micro SD card. The files are stored in a single directory named "1:/config/" placed in the root of the memory card.

Their names are entered by the operator at the time of the backup and have the extension ".CFG".


### 5.2. Saving the current setup of the camera

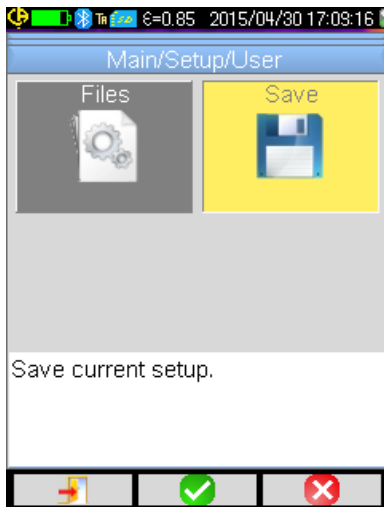

---



The backup is started by validation by **F2**  of the item  in the Main/Setup/User menu.


A new menu then opens for entry of the name of the file to be created (up to 20 characters without extension).

The character to be inserted is selected using the arrow keys and added using the **F2**  key.


The name entered is confirmed by the **F1**  key, while **F3**  cancels the entry and the request for backup of the setup.

### 5.3. Recalling a saved setup

---

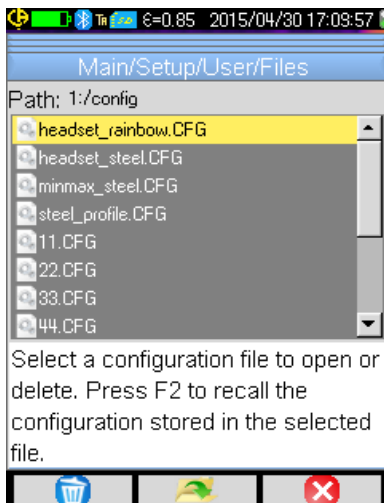

A setup file is recalled from the Main/Setup/User/Files menu, by means of the file manager, which lists all of the configuration files (extension .CFG) found in directory 1:/config/.

When the file has been selected (Up/Down keys), a press on **F2**  opens the file and updates all of the camera's parameters with the values stored in the file.

### 5.4. Deleting a saved setup

---


A configuration file is deleted from the Main/Setup/User/Files menu, by means of the file manager, which lists all of the configuration files (extension .CFG) found in directory 1:/config/.

When the file has been selected (Up/Down keys), a press on **F1**  activates the deletion. A message requesting confirmation appears and must be accepted for definitive deletion of the file to take place.


---

## 5.5. Returning to the default setup of the camera

---

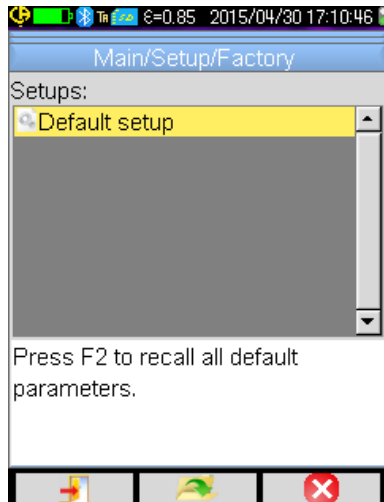

The default setup is one of the predefined configurations proposed in the Main/Setup/Factory menu.

To restore the programming as defined upon leaving the factory, simply open the default setup with **F2** .

---

## 6. BLUETOOTH FUNCTION


---




### 6.1. Activating/Deactivating the Bluetooth function


---


#### 6.1.1. Activating Bluetooth

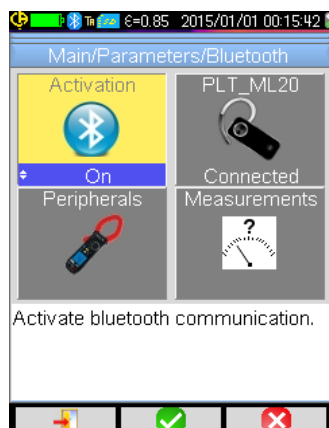To prolong battery life, the Bluetooth function can be deactivated (in fact it is the default). In this case, it is not powered and so consumes no energy.




To use this function, you must first activate it from the Main/Parameters/Bluetooth menu by setting the Activation item  to "On" (validate the item with **F2** , to allow entry, use Up/Down to change the value, and **F2**  to validate the entry).

A pictogram  then appears in the status bar at the top of the screen (see § 1.4.1.1. [Status bar](#)).

If peripherals or a headset have already been identified during a previous activation, they attempt to reconnect during the activation. This automatic reconnection sometimes fails; it is then necessary to restart it manually from the Bluetooth peripherals manager (Main/Parameters/Bluetooth/Peripherals menu) by pressing **F2** .

#### 6.1.2. Deactivating Bluetooth

Deactivation is performed in the same way, this time by setting the Activation item  to "Off".

All of the communicating peripherals are then disconnected, but their identifications are stored in memory, and upon the next activation the camera will attempt to reconnect them.

### 6.2. Using the headset

---

The headset can be used to create or/and play back vocal messages associated with the saved images.

#### 6.2.1. How many headsets can be connected at a time?

The camera allows the connection of only one headset at a time.

#### 6.2.2. Connecting a headset


For it to be possible to connect a headset, the Bluetooth function must be activated (see above).




The connection of a Bluetooth headset to a system differs according to whether the peripheral is known (has already been connected) or not.

##### 6.2.2.1. Case of first connection of a headset


Because the headset is not yet known, it must give the camera all of the information necessary for its connection.

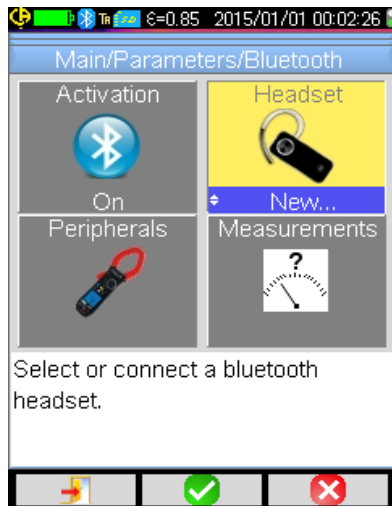To do this, the headset must be started in the coupling or pairing mode (see the headset data sheet for information on how to select this mode).





When the item  has been selected in the Main/Parameters/Bluetooth menu, validation by **F2**  makes it possible to choose the "New..." value (Up/Down arrows) and another validation by **F2**  applies it.

The pairing starts; after a few seconds, the connection is made.



The menu item  changes: the name of the headset is displayed and its value becomes "Connected".

### 6.2.2.2. When the headset is already known

If the headset is known, there is no need for pairing → simply power up.

Connection is requested by selecting the value "Connect" for the item  (validation by **F2** , Up/Down arrows, and another validation to apply). The headset should connect after a few seconds (the value of the item becomes "Connected").

If connection fails, switch the headset off and back on and repeat the operation.


 **If the name of the headset does not appear in the title of the  item, pairing has failed and you must try again.**

### 6.2.3. Changing headsets

To change headsets, you must first switch off the headset currently connected, then proceed as indicated in § 6.2.2. [Connecting a headset](#) with the new headset, which is assumed to be unknown to the camera.

### 6.2.4. Disconnecting a headset

There are several possibilities:

If ...	Then ...
measurement peripherals are connected to your camera and you want to leave them connected	the simplest solution is to switch off the headset or disconnect it from the Main/Parameters/Bluetooth menu by forcing the value of the item to "Disconnect" (validation by <b>F2</b>  , Up/Down arrows, and another validation to apply).
no other peripheral is connected to your camera	we recommend deactivating the Bluetooth function as explained in § 6.1. <a href="#">How to activate/deactivate the Bluetooth function</a> and thereby deactivate your headset. This eliminates the power drain associated with this function.

## 6.3. Using Bluetooth measurement peripherals

### 6.3.1. How many peripherals can be connected?

The camera allows the simultaneous connection of 3 measurement peripherals and one headset.

### 6.3.2. How many measurements can be recovered from a peripheral?

Three measurements for the clamps and one measurement for the ASYC IV multimeter can be read on each of the measurement peripherals, for a maximum of 9 measurements if 3 clamps are connected.


**6.3.3. What peripherals does the camera recognize?**

In the current version, the camera recognizes the following instruments:

- ASYC IV multimeters: MTX 3292/3BT (1 measurement read)
- current clamps: C.A 607 (3 measurements read)
- current clamps: C.A 407 (3 measurements read)

**6.3.4. Connecting a Bluetooth measurement peripheral**

For a measurement peripheral to be connected, the Bluetooth function must be activated (see § 6.1. [How to activate/deactivate the Bluetooth function](#)).

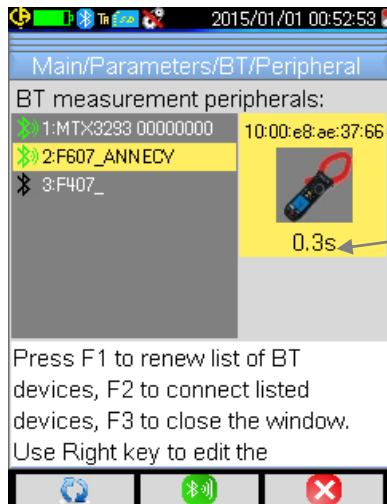

Bluetooth address of the F607\_ANNECY clamp

Polling period of this peripheral

The peripherals are connected from the peripherals manager, which opens after validation of the item of the Main / Parameters / Bluetooth menu.

The peripherals must be on and Bluetooth communication activated before a search is started.

This manager lists the peripherals previously or currently connected. The peripherals connected are preceded by the icon , while the peripherals that are not connected are preceded by .

**The F1, F2, and F3 keys associated with this menu have the following functions:**

	starts a search for Bluetooth peripherals; the peripherals already connected are kept. Those having the highest receive levels are added and connected until the 3 peripherals allowed are reached.
	starts an attempt to reconnect all of the peripherals in the list.
	closes the BT peripherals manager.

The Up/Down keys are used to select a peripheral in the list and display its Bluetooth address and the reading period of the peripheral.

**6.3.5. How are the Bluetooth peripherals chosen?**

A first search identifies, among the devices detected, those that are recognized by the camera (see § 6.3.3. [What peripherals does the camera recognize?](#)). The camera then favours the peripherals with the highest transmit levels.

If peripherals are already connected to the camera when the search is started, they will be kept. The list will be completed up to the 3 peripherals allowed, using those found previously.

**6.3.6. Replacing one peripheral with another**


1. Disconnect the peripheral to be removed by switching it off.
2. Wait until the disconnection takes effect on the camera (appearance of a message).
3. Switch on the new peripheral to be connected.
4. Start a new search (**F1** ) key) from the peripherals manager (Main/Parameters/Bluetooth/Peripherals menu), which will overwrite the current list (the peripherals which are connected are kept) and lead to addition of the new instrument.

**6.3.7. Changing the frequency of reading of a Bluetooth peripheral**


From the peripherals manager (above), it is possible to change the reading period of the selected peripheral:

the Right arrow is used to start the entry of a new reading period. The period is displayed on a blue ground with the symbol indicating that the Up/Down arrows can now be used to change its value. The **F2** key is then used to validate the entry, while the **F3** key or the Left arrow cancels it. The reading period can be set to between 0.3s and 50 minutes.

**6.3.8. Displaying the measurements of the various Bluetooth peripherals**

Once the peripherals are connected to the camera, it is possible to view all measurements read from the Main/Parameters/Bluetooth menu, by validating the  item.



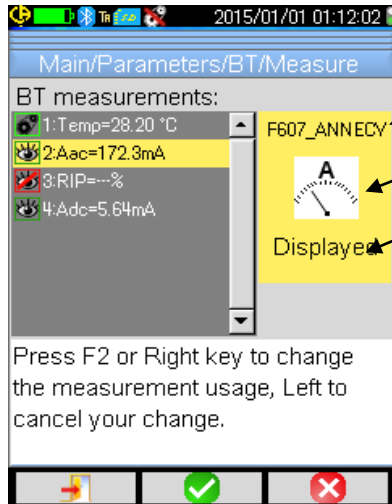







**Attention!** *To maintain consistency between the Bluetooth measurements and the image displayed, the measurements are refreshed in the measurements manager at each new acquisition. If acquisition is stopped (the image is frozen), there is no update of the measurements manager. Watch out in particular when you connect peripherals while the image is frozen: the measurements from these peripherals will not appear in the measurements manager until the next acquisition.*






Name of the peripheral making the measurement  
 Type of measurement  
 Use made of the measurement

This menu is used to list all Bluetooth measurements recovered on the peripherals connected to the camera during the last acquisition. When a measurement is selected (Up/Down arrows), the right-hand part identifies the peripheral that makes the measurement, an image indicates the type of measurement (here, a current), and finally the use made of this measurement (use indicated by the symbol in front of the measurement in the list).

**The possible types of measurement are:**

	temperature measurement in °C
	current measurement in Amperes
	power measurement in Watts
	voltage measurement in Volts
	frequency measurement in Hertz
	impedance measurement in Ohms
	capacitance measurement in Farads
	relative humidity measurement in %
	target distance measurement in metres
	other measurement


**Several uses are possible:**

hidden 	The measurement does not appear among the Bluetooth measurements displayed at the bottom of the main screen.
displayed 	The measurement is added to the list of Bluetooth measurements displayed at the bottom of the main screen (unless the Profile cursor is selected)
influence 	The measurement is added to the list of measurements displayed at the bottom of the main screen and can be used in the correction for the influencing factors (see § 6.3.9. <a href="#">Using a Bluetooth measurement as an influencing parameter</a> ).



**6.3.9. Using a Bluetooth measurement as an influencing parameter**

The three influencing quantities taken into account in the correction of the thermograms are the ambient **temperature**, the **distance** from the target, and the ambient relative **humidity**.

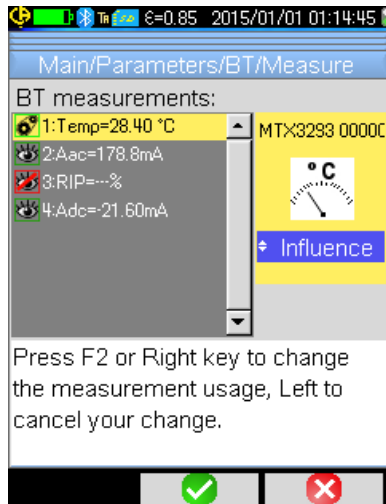If you have a Bluetooth sensor compatible with the camera and capable of making one of these measurements, the value read can be used in the calculation of the correction for the influencing parameters.




For the measurement to be used as an **influence**, the use "influence" must be assigned to it in the Bluetooth measurements viewing window (Main/Parameters/Bluetooth/Measurements menu):

- select the measurement concerned (Up/Down arrows) for the use of the measurement to be displayed, allowing modification with the Right arrow (the use is displayed on a blue ground with the  symbol),
- select the use "influence" (Up/Down arrows) and validate the entry by **F2** .

*Reminder: this use is proposed only for measurements of the following types:*

- temperature (in °C)
- distance (in metres)
- relative humidity [in % (from 0 to 100)].

Only one measurement per type can be used for the influence: if a measurement of the same type is already used as influence, its use is changed to "Displayed" and the new measurement becomes "Influence".

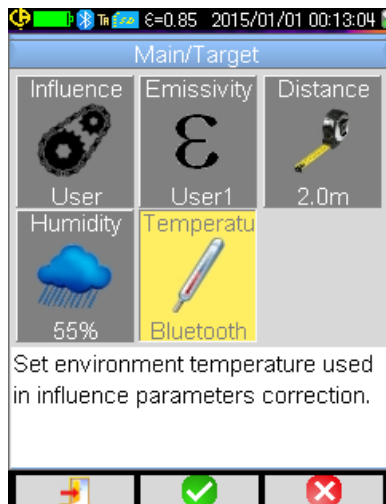

The measurements replace the user data entered in the Main/Target menu, provided that user influence is selected (see § 3.2.2. [Using the user compensation for the influencing factors](#)).

If a Bluetooth measurement is used as an influence, the corresponding influence value in the Main/Target menu takes the value "Bluetooth", indicating that it is in fact the measurement which is used in the correction.

The value actually applied is displayed on the main screen, in the list of Bluetooth measurements (index "i" after the measurement number).

**Note:** *the operator must make sure that the measurements chosen are consistent with the uses that are made of them.*

### 6.3.10. Displaying the Bluetooth measurements on the main screen

As described above, it is possible to assign a use to measurements.

If a measurement is "Displayed" or "Influence", it will appear in blue on the last line of the measurement zone of the screen (unless the profile cursor is activated, because of lack of space). If the number of measurements is too large, they are not all visible in continuous acquisition. However, if the image is frozen, all Bluetooth measurements corresponding to the acquisition scroll along the line.

For each measurement, the measurement number is displayed as it appears in the Bluetooth measurements window, possibly followed by an "i" if the measurement is used as an influence, followed by the separator ":", the name of the measurement, and its value. Measurements are separated by 2 spaces.

If the setup of the BT peripheral is modified (change to another measurement function), then the use of all measurements from this peripheral are forced to "hidden" on the camera and they disappear from the main screen. The operator must return to the Main/Parameters/Bluetooth/Measurements menu to request display once again.

### 6.3.11. Can the Bluetooth measurements be saved at the same time as an image?

**Yes**, the Bluetooth measurements are recorded when an image is saved.

They can be viewed when the file is recalled (see § 4.6. [Recalling an image](#)) by validating the item  in the Recall menu.


---



## 7. UPDATING THE FIRMWARE OF THE CAMERA

---

### 7.1. Where can the firmware version of the camera be read?

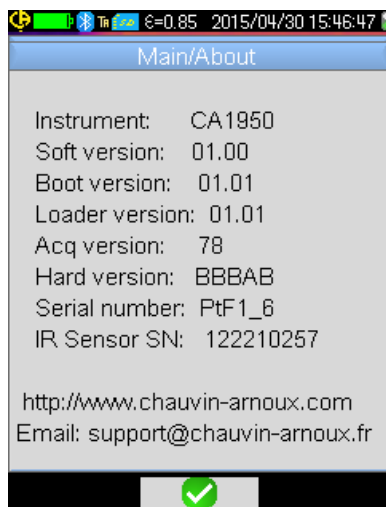---



The current version of the camera's firmware is available from the "Main" menu by validating with **F2**  → the  item. The version number appears on the "Soft version:" line of this menu.

### 7.2. How update the firmware?

---

- ↪ Software update is available on our website <http://www.chauvin-arnoux.com>, under the heading **C.A 1950** support.
- ↪ If an update is available on the website, please download and install it.

---

## 8. ARE YOU HAVING DIFFICULTIES?

---

### 8.1. The IR image I obtain is solid-colour

---

#### 8.1.1. The palette of colours is frozen

Make sure that the low and high temperature limits of your palette are consistent with the temperature range of your scene. To check this, unlock the palette (see § 2.7. [Freezing the colours representing the temperatures](#)).

#### 8.1.2. Inconsistent "user" influencing parameters

The entry of an incorrect emissivity value can lead to measurement errors of this type. Check your influencing parameters in the "Main/Target" menu. If there is any doubt, restore the "default" influencing parameters.

### 8.2. The contrast of my IR image is wrong

---

- Make sure that isothermal measurement is not activated.
- If the palette is frozen, make sure that the low and high temperature limits of your palette are consistent with the temperature range of your scene.  
If there is any doubt, unlock the palette (see § 2.7. [Freezing the colours representing the temperatures](#)).
- The temperature range of the image is very large (hot and cold points very far apart), so the linear distribution of the colours between the minimum and maximum temperatures is in larger steps, impairing the contrast of the image.  
Several solutions are possible:
  - either freeze the palette and set the limits according to the range of temperatures that interest you,
  - or arrange to keep the hot or cold point which does not interest you outside the field of view of the camera, so as to reduce the temperature range of the image.

### 8.3. I am unable to save the current image

---

- Make sure that the micro SD card is correctly inserted in its slot and displayed as being present in the status bar of the main screen (see § 1.4.1.1. [Status bar](#)).
- Make sure that your micro SD card is not full (with FAT16 formatting, watch out for the number of entries in the root; see § 1.5.7. [Changing the image backup location](#)).
- Make sure that your micro SD card is not corrupted and that you can read/modify its content on a PC via the USB cable or a card reader.

### 8.4. The file manager takes a very long time to respond

---

The access time to the SD is relatively long. To make it shorter, favour the creation of new directories to store your images and limit the number of files per directory. We suggest regularly uploading your images to a host PC via the USB cable or a card reader.

### 8.5. I cannot connect my headset

---

- Make sure that your headset is correctly powered and that it is not automatically connected to another instrument with which you have already paired it.
- Switch off your headset and repeat the operation as described in § 6.2.2. [Connecting a headset](#).
- If the problem persists, deactivate the Bluetooth function on the camera (see § 6.1. [Activating/deactivating the Bluetooth function](#)), re-activate it and then make another attempt to connect.

### 8.6. I cannot connect my Bluetooth peripheral


---

- Make sure that your peripheral is correctly powered, configured in Bluetooth mode, and not already used by another instrument.
- Switch off your peripheral and repeat the operation described in § 6.3.4. [Connecting a Bluetooth measurement peripheral](#).
- If the problem persists, deactivate the Bluetooth function on the camera (see § 6.1. [Activating/deactivating the Bluetooth function](#)), re-activate it, then make another attempt to connect.

---

## 8.7. My Bluetooth measurements are not displayed or are not refreshed in the measurements manager

---

- Make sure that acquisition has not been stopped. To preserve consistency between the image displayed and the Bluetooth measurements read on the peripherals at the time of acquisition, the measurements are refreshed only when there is a new acquisition. If a peripheral is connected, but acquisition has been stopped, its measurements will not be displayed until there has been another acquisition.
- Following an incorrect reading, the measurement read and the measurement expected may not be consistent. This can prevent refreshing. To eliminate the ambiguity, change the measurement function on the peripheral (rotary switch on clamps) and return to the initial position.
- If the problem persists:
  1. Switch off the BT peripheral.
  2. Wait until this disconnection is detected on the camera.
  3. Switch your peripheral back on (Bluetooth mode activated).
  4. Press **F2**  to try again to connect the instrument from the Bluetooth peripherals manager (Main/Parameters/Bluetooth/Peripherals menu).

If continuous acquisition is activated, your measurements must appear in the Bluetooth measurements manager (Main/Parameters/Bluetooth/Measurements menu).

---

## 9. SERVICING AND MAINTENANCE

---

### 9.1 Cleaning the housing and screen of the camera

---

- Cleaning the housing: to avoid any spattering on the lens, you must close the camera's lens protection flap. Use a cloth moistened with soapy water or with alcohol.
- Cleaning the screen: to avoid scratching, use a soft, lint-free cloth.

**WARNING! The camera is not immersion-proof.**

### 9.2 Cleaning the infrared optics

---



***The infrared lens has a very fragile coating.***

For this reason, great care must be taken to avoid leaving fingerprints. Insofar as possible, any rubbing of the lens will be avoided. If there is a dust deposit on the lens, favour non-contact methods, such as compressed dry nitrogen, an air bulb, etc., so as not to damage the lens coating.

If you must wipe the lens, always start by blowing away any dust as explained above, to avoid scratching by dust wiped across the surface, then use a special soft, absorbent, lint-free optical lens cleaning paper (such as KIMWIPE).

### 9.3 Metrological checking

---

Like all measuring or testing devices, the instrument must be checked regularly. This instrument should be checked at least once a year.

For checking and calibration, contact one of our accredited metrology laboratories (information and contact details available on request), at our Chauvin Arnoux subsidiary or the branch in your country.

### 9.4 Unpacking, re-packing

---

The mechanical and electrical condition of all of the equipment was checked before dispatching.

When you receive it, carry out a quick check for damage that may have occurred in transit. Should there be any, contact our sales department immediately and declare your reservations to the carrier.

For reshipping, it is best to use the original packaging.

### 9.5 Repair

---

The device can be repaired only by the manufacturer, which reserves the right either to repair the device or to replace it or part of it. If the equipment is returned to the manufacturer, carriage is paid by the customer.

For all repairs before or after expiry of warranty, please return the device to your distributor.

---

## 10. WARRANTY

---

Our warranty applies, except as otherwise stated, for **two years** after the date of availability of the equipment.

Extract from our General Terms of Sale, communicated on request.

The warranty does not apply in the following cases:

- Inappropriate use of the equipment or use with incompatible equipment
- Modifications made to the equipment without the explicit permission of the manufacturer's technical staff
- Work done on the device by a person not approved by the manufacturer
- Adaptation for a particular application not anticipated in the definition of the equipment or not indicated in the user's manual
- Damage caused by shocks, falls, or floods.

---


## 11. DELIVERY CONDITION

---


The **C.A 1950** thermal camera is delivered in a carrying case with:

- Battery charger
- 4 Ni-MH batteries
- BT headset
- USB cable
- µSD memory card
- Getting started guide in 5 languages (printed)
- CD including software and complete manuals (product & software)

# APPENDIX I – Menu tree (1/3)

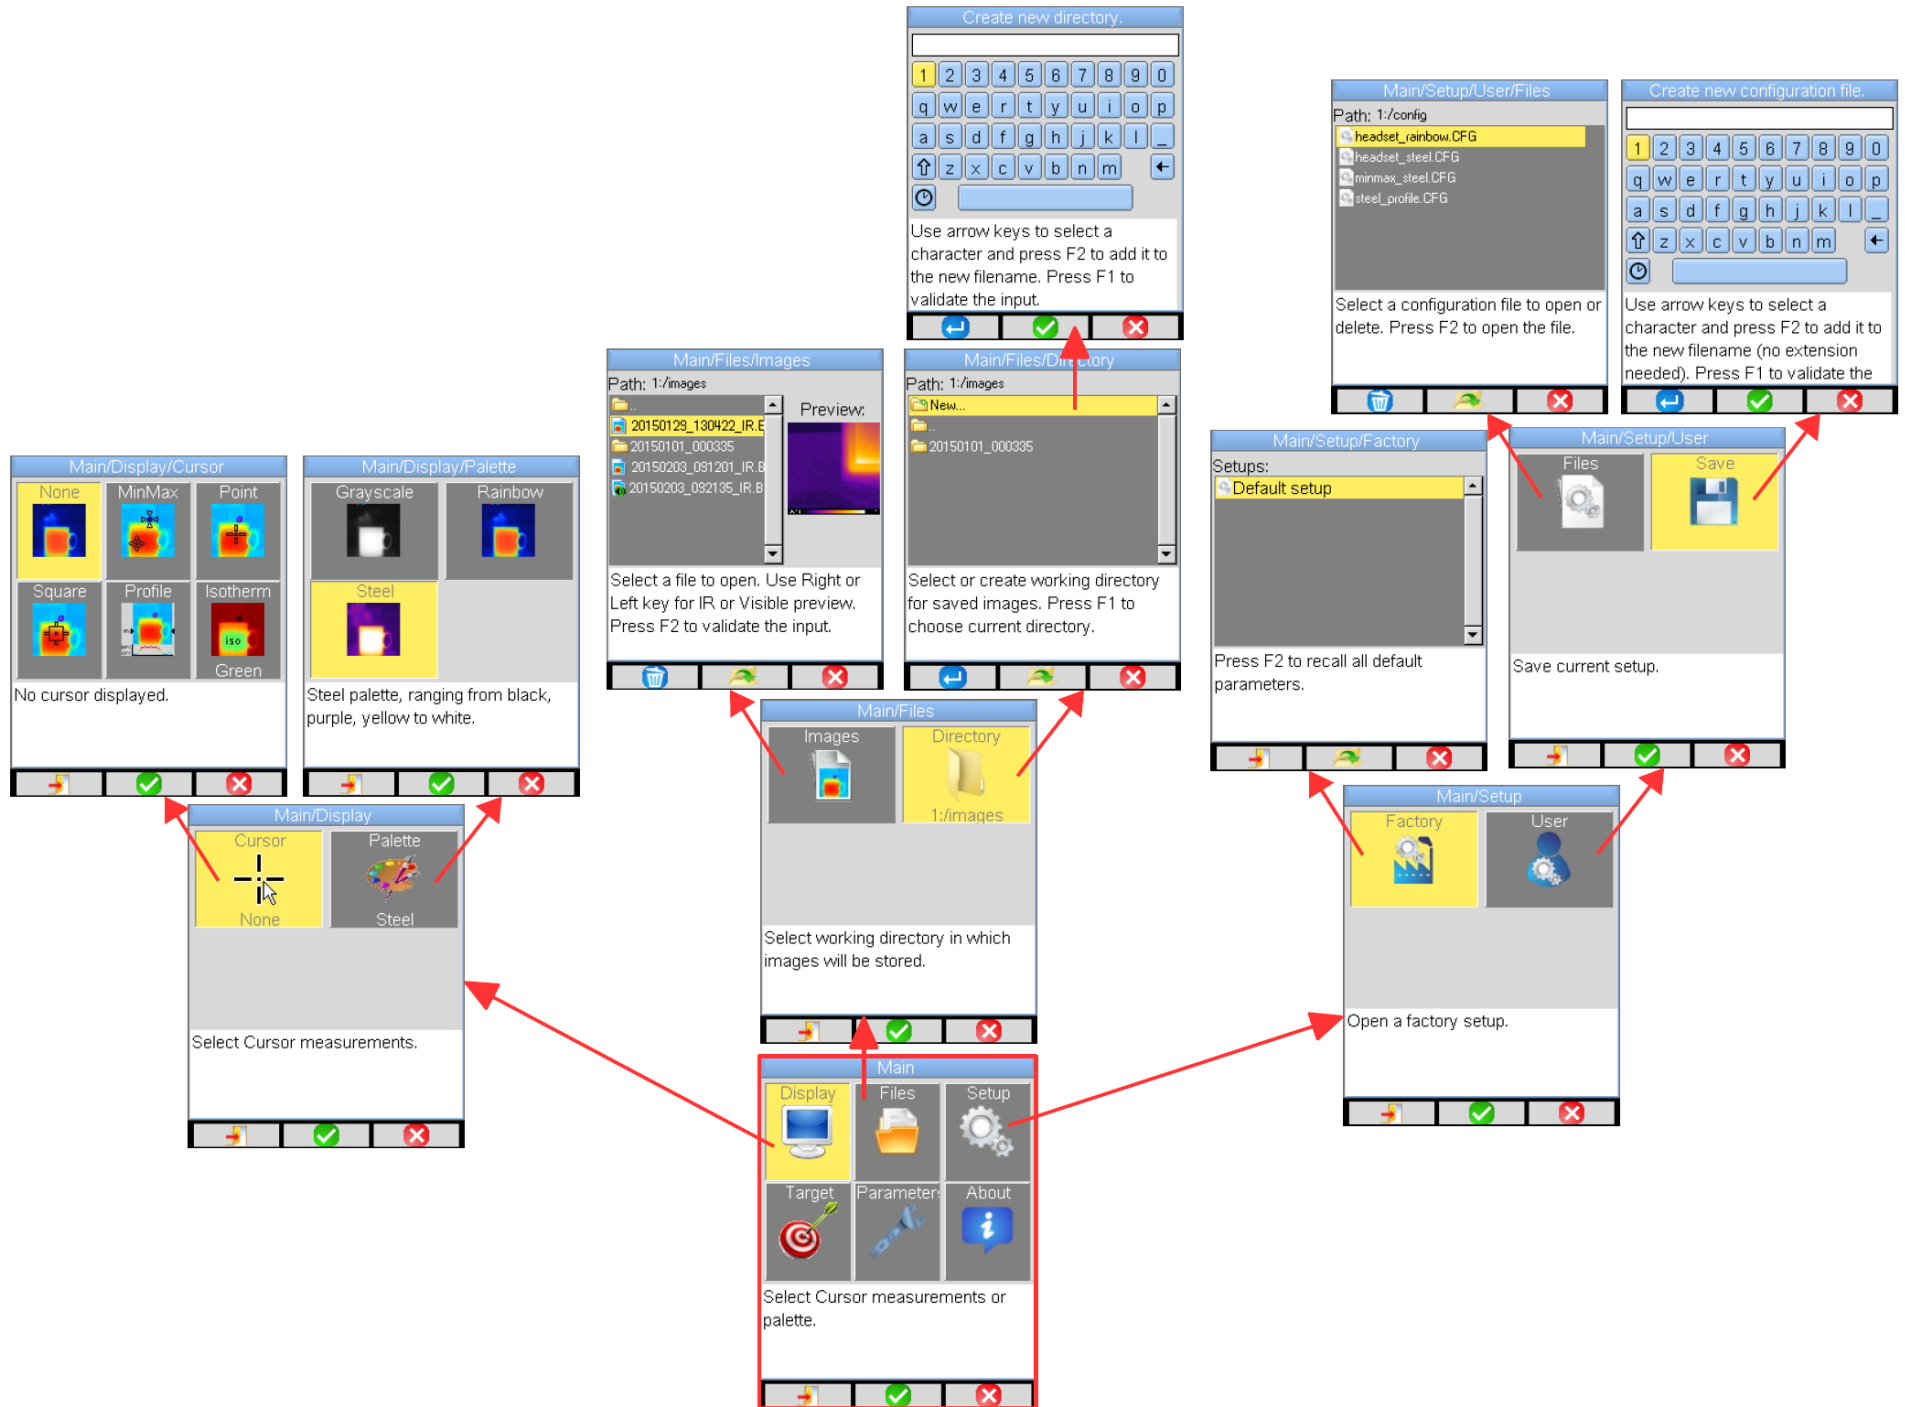

# APPENDIX I - Menu tree (2/3)

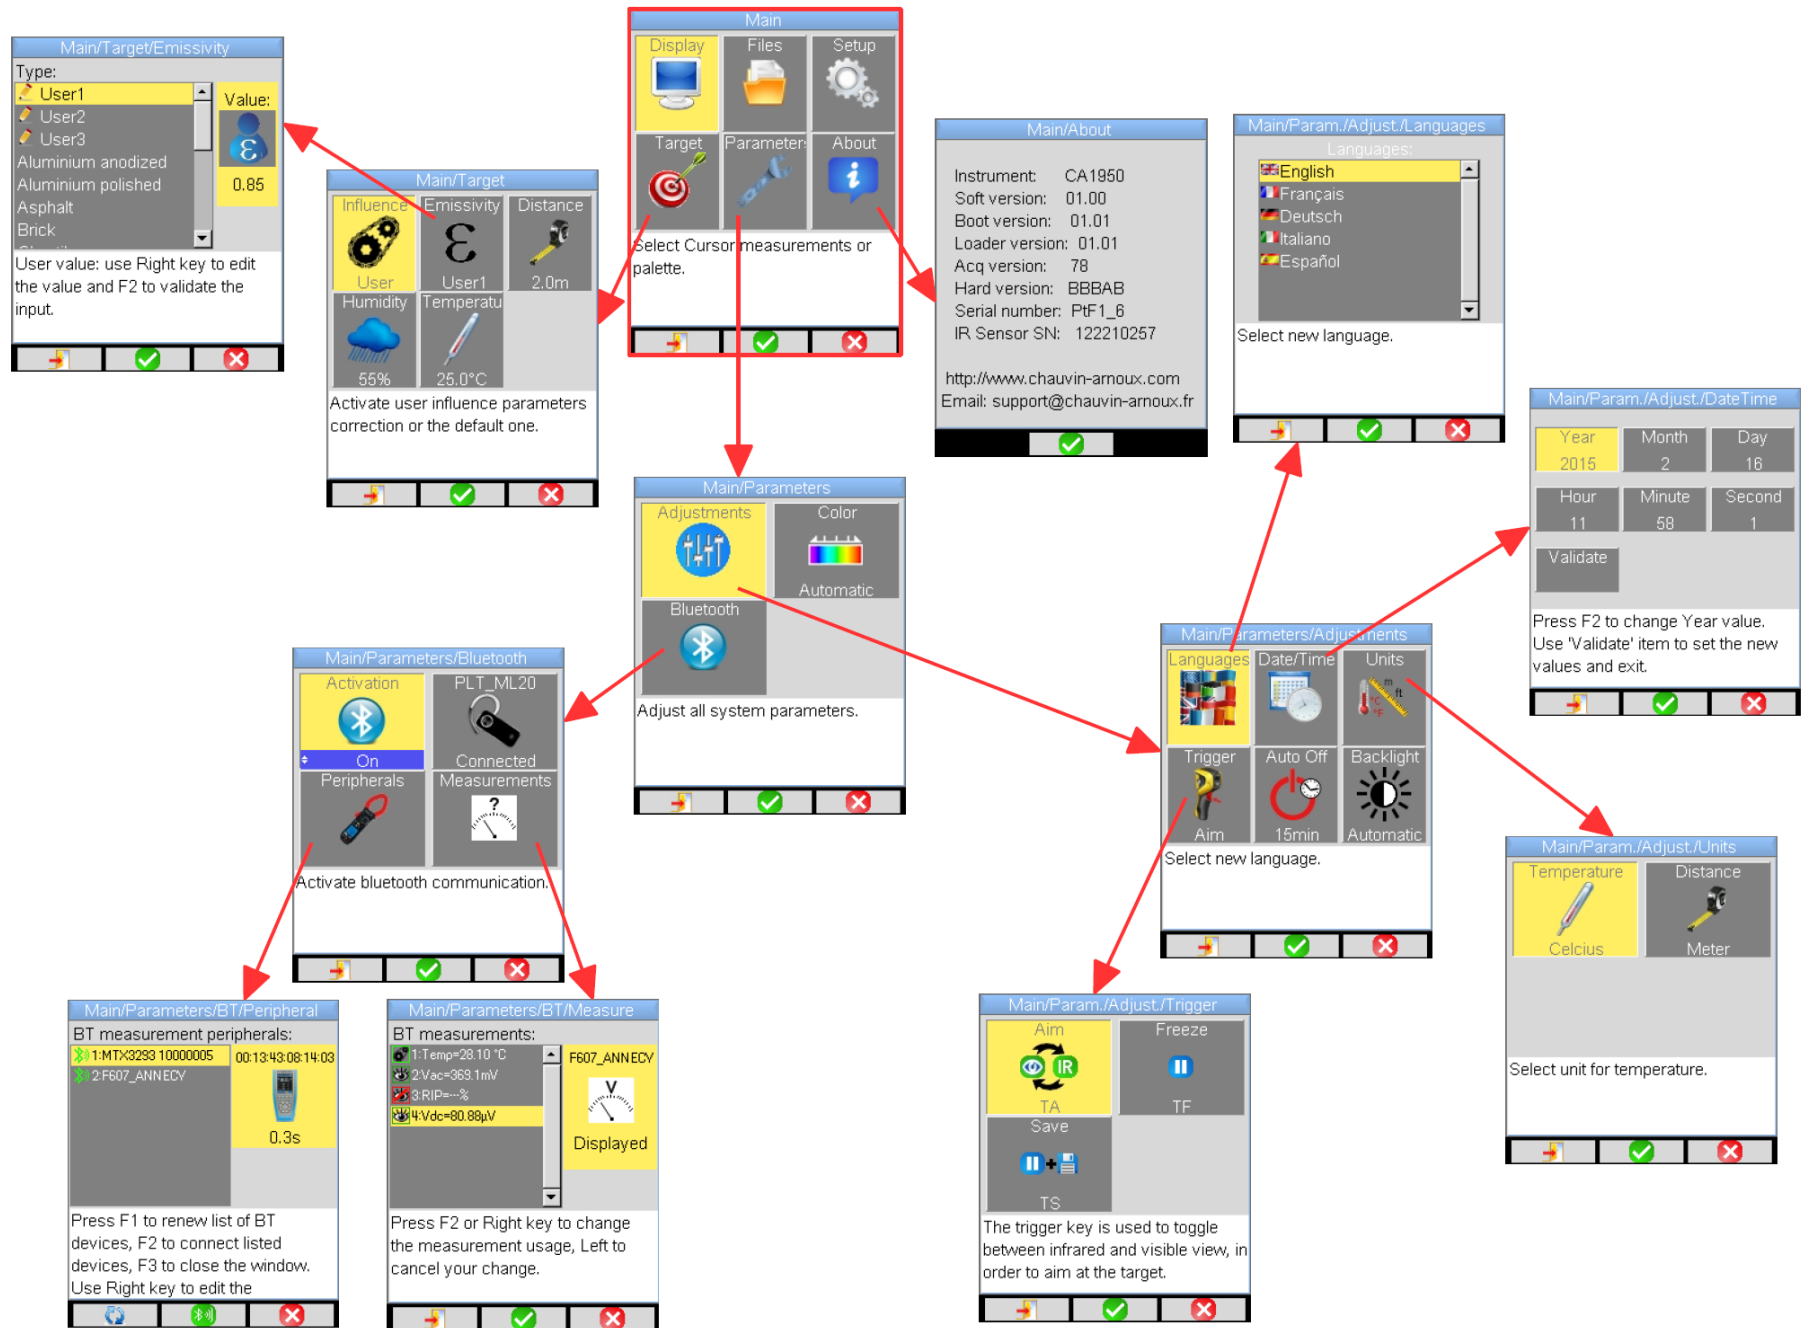


# APPENDIX I - Menu tree (3/3)

Recall/Cursor

None	MinMax	Point
Square	Profile	Isotherm
		Green

No cursor displayed.

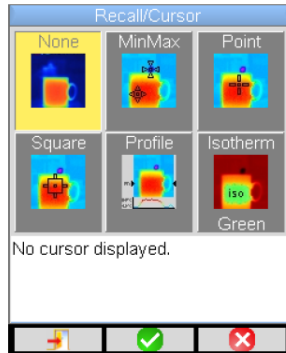

Recall/Palette

Grayscale	Rainbow
Steel	


Steel palette, ranging from black, purple, yellow to white.



Recall

Cursor	Palette	Show
None	Steel	IR
Save	Target	BT measur

Select palette

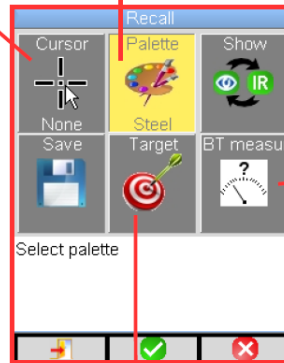

Recall/BT measurements


BT measurements:

- 1 Vac=--V
- 2 RIP=--%
- 3 Vdc=14.99mV

F607\_ANNECY

Displayed


Press F2 or Right key to change the measurement usage, Left to cancel your change.

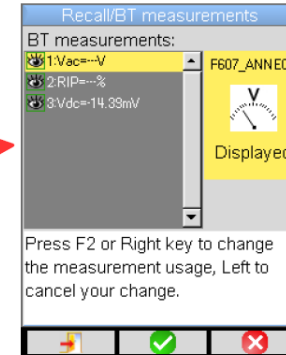

Recall/Target

Influence	Emissivity	Distance
User	User1	2.0m
Humidity	Temperatu	
55%	25.0°C	

Activate user influence parameters correction or the default one.

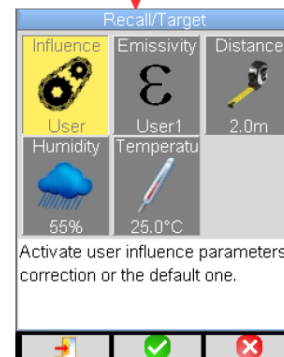

## APPENDIX II – Emissivity table

Material	Specification	Temp. °C	Spettro	Emissivity	Ref.
Stainless steel	18-8	25		0.16	
Stainless steel	304(8Cr, 18Ni)	215~490		0.44~0.36	
Stainless steel	310(25Cr, 20Ni)	215~520		0.90~0.97	
Nickel alloys	Nickel-chromium alloy wire (shiny) (refractory)	50~1000		0.65~0.79	
Nickel alloys	Nickel-chromium alloy	50~1040		0.64~0.76	
Nickel alloys	Refractory nickel-chromium	50~500		0.95~0.98	
Nickel alloys	Nickel-silver alloy	100		0.14	
Aluminium	Polished aluminium	100		0.09	
Aluminium	Commercial aluminium sheet	100		0.09	
Aluminium	Oxidized anodized aluminium-chromium	25~600		0.55	
Aluminium	Slightly oxidized aluminium	25~600		0.10~0.20	
Aluminium	Highly oxidized aluminium	25~600		0.30~0.40	
Aluminium	Anodized, light grey, matte	70	LW : 8 - 14 µm	0.97	9
Road asphalt		4	LLW : 6,5 - 20 µm	0.96	8
Concrete		20	T : spettro totale	0.92	2
Wood	planed oak	20	T : spettro totale	0.90	2
Brick	Red	20	T : spettro totale	0.93	2
Brick	Refractory brick	1100		0.75	
Calcimine		20		0.9	
Rubber	hard	20	T : spettro totale	0.95	1
Chromium	Polished chromium	40~1090		0.08~0.36	
Copper	Shiny copper	100		0.05	
Copper	Highly oxidized copper	25		0.78	
Copper	Liquid copper	1080~1280		0.16~0.13	
Copper	Oxidized	50	T : spettro totale	0.6 – 0.7	1
Water				0.96	
Enamel (white)		18		0.9	
Tin	Commercial tinplate	100		0.07	
Tin	High oxidation	0~200		0.6	
Iron and steel	highly oxidized	50	T : spettro totale	0.88	1
Graphite (carbon black)		96~225		0.95	
Brass	Shiny brass (extreme polishing)	28		0.03	
Brass	Brass oxide	200~600		0.61~0.59	
Magnesium	Magnesia	275~825		0.55~0.20	
Magnesium	Magnesia	900~1670		0.2	
Magnesium	Mercury	0~100		0.09~0.12	
Nickel	Polished by anodizing	25		0.05	
Nickel	Electrolyzed	20		0.01	
Nickel	Nickel wire	185~1,010		0.09~0.19	
Nickel	Nickel foil (oxidized)	198~600		0.37~0.48	
Nickel	Nickel oxide	650~1,255		0.59~0.86	
Gold	Shiny gold	230~630		0.02	
Paint	8 different colours and grades	70	LW : 8 - 14 µm	0.92 – 0.94	9
Plastic	PVC, plastic flooring, matte, structured	70	LW : 8 - 14 µm	0.93	9
Plaster	unfinished covering	20	T : spettro totale	0.91	2
Plaster	plaster tile			0.87	10
Lead	Pure lead (without oxidation)	125~225		0.06~0.08	
Lead	Slightly oxidized	25~300		0.20~0.45	
Terra cotta tile				0.88	10
Glass (surface)		23		0.94	
Refractory glass		200~540		0.85~0.95	
Zinc	Oxidation at 400°C	400		0.01	
Zinc	Shiny plate of galvanized iron	28		0.23	
Zinc	Oxidized zinc powder	25		0.28	

## APPENDIX III - Technical specifications

Description	Characteristics	C.A 1950
<b>IR detector</b>	Type	UFPA microbolometer
	Spectral range	8~14µm
	Resolution	80x80
<b>IR imaging performance</b>	NETD	80 mK at 30°C
	Frequency	9Hz
	Objective	20°x20°
	IFOV (spatial resolution)	4.4mrad
	Min. focal distance	0.4m
<b>Focusing</b>	Adjustment	Fixed focus
<b>Visual image</b>	Built-in digital video	240x240
	Illuminator	no
	Min. focal distance	0.05m
<b>Presentation of the images</b>	Images displayed	Infrared image, real image
	Video output	no
	LCD screen	2.8"
	Display of the images	Pseudo-colours, multiple palettes
<b>Functions</b>	Freezing of image	Moving or frozen image
	Storage of files	Micro SD and SD HC card, 2GB
<b>Measurement</b>	Temperature range	-20°C to 250°C
	Accuracy	±2°C or ±2%
<b>Analysis functions</b>	Analysis tools	point cursor area cursor temperature profile, min max, and isothermal
	Temperature alarm	no
	Adjustment	Automatic or manual adjustment of the min. max. palette
	Correction	Emissivity, Distance, Ambient temperature, Relative humidity
	Display of isotherms	Display in colour of a temperature range adjustable by the user
	Vocal remarks	Yes, BT headset provided
<b>Software</b>	Analysis software	Report writing software
<b>Laser pointer</b>	Type	no
<b>Battery system</b>	Type	Ni-MH, low self-discharge
	Life	13h30 typical 11h min.
<b>Conformity</b>	Electromagnetic compatibility	EN61326-1
	Safety	EN61010-1-Ed.02
<b>Environmental specification</b>	Temperature range, operation	-15°C to 50°C (-4°F to 122°F)
	Temperature range, storage	-40°C to 70°C (-40°F to 158°F)
	Humidity	10% to 95%
	Drop resistance	2m on all sides
	Impact resistance	25G
	Vibration resistance	2G
<b>Physical characteristics</b>	Protection	IP54
	Mass	700g with batteries
	Dimensions	225 x 125 x 83 mm



09 - 2015  
X04112B02 - Ed. 1

**DEUTSCHLAND - Chauvin Arnoux GmbH**  
Straßburger Str. 34 - 77694 Kehl/Rhein  
Tel: (07851) 99 26-0 - Fax: (07851) 99 26-60

**UNITED KINGDOM - Chauvin Arnoux Ltd**  
Unit 1 Nelson Ct - Flagship Sq - Shaw Cross Business Pk  
Dewsbury, West Yorkshire - WF12 7TH  
Tel: 01924 460 494 - Fax: 01924 455 328

**ITALIA - Amra SpA**  
Via Sant'Ambrogio, 23/25 - 20846 Macherio (MB)  
Tel: 039 245 75 45 - Fax: 039 481 561

**ÖSTERREICH - Chauvin Arnoux Ges.m.b.H**  
Slamastrasse 29/2/4 - 1230 Wien  
Tel: 01 61 61 9 61-0 - Fax: 01 61 61 9 61-61

**SCANDINAVIA - C.A Mätssystem AB**  
Sjöflygvägen 35 - SE 18304 TÄBY  
Tel: +46 8 50 52 68 00 - Fax: +46 8 50 52 68 10

**SCHWEIZ - Chauvin Arnoux AG**  
Moosacherstrasse 15 - 8804 AU/ZH  
Tel: 044 727 75 55 - Fax: 044 727 75 56

**CHINA - Shanghai Pujiang Enerdis Instruments Co. Ltd**  
3 Floor, Building 1 - N° 381 Xiang De Road  
Hongkou District - 200081 SHANGHAI  
Tel: +86 21 65 21 51 96 - Fax: +86 21 65 21 61 07

**ESPAÑA - Chauvin Arnoux Ibérica S.A.**  
C/Roger de Flor, 293 - 1a Planta - 08025 Barcelona  
Tel: 902 20 22 26 - Fax: 934 59 14 43

**MIDDLE EAST - Chauvin Arnoux Middle East**  
P.O. BOX 60-154 - 1241 2020 JAL EL DIB (Beirut) - LEBANON  
Tel: (01) 890 425 - Fax: (01) 890 424

**USA - Chauvin Arnoux Inc - d.b.a AEMC Instruments**  
200 Foxborough Blvd. - Foxborough - MA 02035  
Tel: (508) 698-2115 - Fax: (508) 698-2118

**中国 - 上海浦江埃纳迪斯仪表有限公司**  
上海市虹口区祥德路381号3号楼3楼  
Tel: +86 21 65 21 51 96 - Fax: +86 21 65 21 61 07

<http://www.chauvin-arnoux.com>

190, rue Championnet - 75876 PARIS Cedex 18 - FRANCE  
Tél.: +33 1 4485 4485 - Fax: +33 1 4627 7389 - [info@chauvin-arnoux.fr](mailto:info@chauvin-arnoux.fr)  
Export: Tel.: +33 1 4485 4486 - Fax: +33 1 4627 9559 - [export@chauvin-arnoux.fr](mailto:export@chauvin-arnoux.fr)



AC/DC Motors & Generators



Electrical Engineering



Mechanical Engineering



Condition Monitoring



Precision Machining



Marine Electronics



Elec & Mech Product Supply



Calibration and Rental Services



Quality Coatings



Transformers



Control Panels



Compressors



Auxiliary Power Systems

To differentiate our organisation in order to achieve continuous, sustainable growth, TDC endeavours to fully understand and exceed the expectations of our customers, and to work proactively to deliver **Engineering Excellence.**



t: +44 (0)1224 710077 | e: [info@tdcaberdeen.co.uk](mailto:info@tdcaberdeen.co.uk) | w: [www.TDCaberdeen.co.uk](http://www.TDCaberdeen.co.uk)

a: TDC Aberdeen Ltd | Bankhead Industrial Estate | Bankhead Avenue | Bucksburn | Aberdeen | AB21 9ET