



TEST EQUIPMENT RENTAL SERVICES

When you rent Test Equipment from TDC, we want you to know that you will have a dedicated personal service from start to finish. Our Customer Service team is here to support you throughout your rental period.

TDC are independent specialists promoting all high quality manufacturers and instrument types. Equipment can be delivered Next Day or Same Day to suit your requirements.

When you are finished, simply contact us to arrange your equipment collection or alternatively you can despatch it back to us – we make it easy.

RENTING FROM TDC JUST MAKES SENSE

By using TDC Test Equipment Rental Solutions, you benefit from our extensive rental inventory that is second to none. We constantly refresh our equipment range with branded equipment manufacturers such as Megger, FLUKE, Chauvin Arnoux, OMICRON, FLIR, b2 HVA, Agilent Technologies, Dranetz BMI, Fujikura, JDSU, Ametek Jofra, GE DRUCK, RAE Systems, TSI Airflow, Rohde & Schwarz, NORBAR, PANAMETRICS, Tektronix and many more.

You can utilise our rental equipment to suit your own requirements, from one week to as many months as you need. You only pay for what you use down to the day. Renting with TDC is straightforward and easy. Our expert Sales and Applications Engineers will find the best solution to suit your application.

Delivery & Collection is arranged by us - we make it hassle free and easy.

TDC 6 POINT RENTAL GUARANTEE - OUR REPUTATION MATTERS



1 SAME DAY DISPATCH

Many of our customers operate to very strict deadlines. Providing the order is placed and confirmed before 3pm, your equipment will be despatched the same day.



2 QUALITY

All Equipment is checked prior to dispatch to ensure it is servicable and in safe working order. Certification checks are standard.



3 SUPPORT

We will provide you with enough information to make an informed choice of the correct equipment required for your application.



4 PRICE

We offer a simple price match promise. We'll match any genuine competitor quote.



5 CUSTOMER SERVICE

We can promise that throughout your rental period, we will do our utmost to provide you with the best customer service. All information we provide is in good faith and free of charge. We will provide a quote for any consultancy or professional advice that may be required.



6 REPUTATION

We know we are only as good as our last job. We don't just want regular customers - we want to build loyal customers.



For all enquiries, please contact: Gordon Thow (Test Equipment Rental Manager)

t: +44 (0)1224 710077 | e: gordon.thow@tdcaberdeen.co.uk | w: www.TDCaberdeen.co.uk

a: TDC Aberdeen Ltd | Bankhead Industrial Estate | Bankhead Avenue | Bucksburn | Aberdeen | AB21 9ET



TEST EQUIPMENT RENTAL SERVICES

HVA28TD VLF High Voltage Test Set

User Manual/Datasheet



HVA28TD

User Manual

ENGLISH

DHV0053 Rev01

b2 High-Voltage
is a business division
of
b2 electronic GmbH

Riedstraße 1
6833 Klaus
AUSTRIA

Tel. +43 (0)5523 57373
Fax + 43 (0)5523 57373-5

www.b2hv.com
info@b2hv.com



Subject to alternations-
errors excepted
Illustrations are not binding



**Ultra-compact and universal
VLF High Voltage Test Set
with Tangens Delta**

Table of Contents

1	FORWARD	4
1.1	Regarding this Document	4
1.2	Documentation Conventions	5
1.3	Legal Considerations	6
2	SAFETY	7
2.1	General Safety	7
2.2	Work Safety	7
2.3	Appropriate Applications	9
2.4	Operator Qualifications	9
3	GENERAL DESCRIPTION	10
3.1	Technical Specifications ¹	10
3.2	Design Features	11
3.3	Materials	12
4	DESIGN AND CONSTRUCTION	13
4.1	Control Elements	13
4.2	User Interface	16
4.3	Instrument Set-up	18
4.4	Operation Modes	23
5	TEST PROCEDURE	26
5.1	Equipment Set-up	26
5.2	Manual Test Mode	28
5.3	Automatic Test Mode	33
5.4	Interrupting a Test	38
6	TANGENS DELTA	39
6.1	Application	39
6.2	Equipment Set-up	39
6.3	Tangens Delta Test	41
6.4	PC Software HVA28TD	43
6.5	Bluetooth® Setup and Config Procedure	47
7	DISCONNECTION PROCEDURE	64
8	INSTRUMENT CARE	66
9	GLOSSARY AND ABBREVIATIONS	67
10	DECLARATION OF CONFORMITY	68

1 Forward

Purpose

This operating manual serves to ensure the proper and safe use of the HVA28TD test instrument.

1.1 Regarding this Document

Target User

This operating manual is designed to inform various user groups. The scope and depth of the information provided may not be appropriate for all users. However, it is important that all users familiarize themselves with this document in full. The following is a guideline indicating the most significant information as a function of the user's responsibilities.

User	Responsibilities	Focus
HVA Operator	<ul style="list-style-type: none"> To connect the equipment To carry out manual or pre-programmed test sequence To verify validity of HVA application To adjust instrument settings To program automatic test sequences in accordance with particular testing standards 	All Sections Particular focus on all safety messages
Procurement, Management	<ul style="list-style-type: none"> To assure that the workplace is safe and has all required equipment To assure that HVA operators are qualified technicians To assure that operators fulfil their responsibilities 	Particular focus on safety messages and information regarding general product description.

Safekeeping



NOTICE

This manual should always be on hand when using the HVA28TD test instrument

1.2 Documentation Conventions

The following explain the **symbols**, and **safety messages** found in this document. The employment of safety symbols and signal words are according to the American National Standards Institute standard ANSI Z535.6 "Product Safety Signs and Labels".

Safety Messages

Danger

DANGER

Indicates a hazardous situation which if not avoided will result in death or serious injury

Warning

WARNING

Indicates a hazardous situation which if not avoided could result in death or serious injury.

Caution

CAUTION

Indicates a hazardous situation which if not avoided could result in minor or moderate injury.

Notice

NOTICE

Indicates suggested practices to protect equipment and property.

Symbols



Yellow triangle, framed in black: Used to indicate a potential hazard. Only used in conjunction with description of the possible hazard! Detailed symbol may correspond to this specific hazard.



Red outlined circle with red diagonal line: Used to indicate forbidden practices. The described handling practice must not be carried out!



Blue circle with white exclamation mark: Used to indicate recommended precautionary measures or a situation that can lead to property damage.

1.3 Legal Considerations

Warranty

b2 provides a one-year warranty from the original purchase date of instrument for all necessary parts and labor. This warranty is void in the event of abuse, incorrect operation or use, unauthorized modification or repairs, or failure to perform the specified maintenance as indicated in this operation manual. This warranty does not include normal consumable items such as lamps, paper rolls, printer ribbons, batteries or other auxiliary items.

This warranty and our liability are limited to replacing or repairing defective equipment, at our discretion. Equipment that is returned to b2 must be packed in original packaging. All shipped items must be prepaid and insured. No other warranties are expressed or implied.

Contact Information

b2 electronic GmbH
Riedstrasse 1, Klaus
Vorarlberg, Austria
T: +43 (0)5523 57373
F: +43 (0)5523 57373-5
www.b2hv.at
info@b2hv.at

Copyright

©2012 b2 electronic GmbH
All rights reserved.

No part of this publication may be reproduced, transmitted, stored, or translated in hardcopy or electronic form without the written consent of b2.

Your opinion matters!

Your comments and suggestions are of value. We are dedicated to supporting your needs. Offering you optimal documentation is part of our promise of quality.

Improvement suggestions regarding this manual may be sent to:

office@b2electronic.at

Thank you for your feedback!

2 Safety

Safety is **priority!** Respect all **safety information**; only use the HVA28TD for **appropriate applications** and ensure that operators possess the required **operator qualifications**.

2.1 General Safety



NOTICE

Operation Manual

Before carrying out any high voltage test with this instrument, read this Operating Manual in its entirety.

2.2 Work Safety



DANGER

Electric Shock Hazard

Never assume that equipment is safe to handle without using the necessary safety equipment and earthing procedures.

- All procedures must comply with local safety regulations
- Always treat exposed connectors and conductors as potential electric shock hazards.
- DUT must be earthed, de-energized and isolated from all power sources.
- All auxiliary electrical apparatus such as switchgear, surge arresters etc. must be isolated from the test power source and the DUT.
- All cables and connectors must be inspected for damage before use. Damaged equipment must not be used.
- Earth connections must be made first and removed last!
- DUT must be discharged and earthed before disconnecting the test lead.
- Avoid testing alone. In the event of an emergency another person's presence may be essential.



DANGER

Authorized Personnel Only

The test area must be secured to keep non-qualified personnel off the premises!

- Signs must warn all persons of the high voltage test area.
- Only qualified electrical technicians should have access to the test area.
- Other persons must be accompanied by qualified electrical technicians and must be informed of the risks involved.

**WARNING****Radiation Hazard**

Testing vacuum bottles, above their voltage rating, with DC can produce dangerous X-rays.

**NOTICE****Equipment Handling**

DUT must have clean connections.

Test instruments must only be repaired or modified by authorized b2 personnel.

**NOTICE****If required according to local safety regulations**

Wear high voltage gloves when handling high voltage cables and equipment.

2.3 Appropriate Applications

The HVA28TD test instrument is designed to perform high voltage insulation testing of various types of highly capacitive loads.

Appropriate DUTs

DUT Type	Examples
Cables	<ul style="list-style-type: none"> • Extruded cables (e.g. XLPE) • Laminated cables (e.g. PILC) • Insulated cables • Cable jacket / sheath
Other highly capacitive loads	<ul style="list-style-type: none"> • Generators • Switchgear • Transformers • Rotating machines • Insulators • Bushings

Appropriate Measurements

Measurement	Examples
Test	<ul style="list-style-type: none"> • Capacitance • Resistance • Dielectric breakdown voltage • RMS current • Applied voltage



NOTICE

Other Applications

Before proceeding, contact b2 to validate appropriate use!

2.4 Operator Qualifications

HVA operators must be **qualified electrical technicians!** Proof of necessary qualifications for working in high voltage domain is mandatory. It is highly recommended that operators have completed an emergency rescue training program.

3 General Description

3.1 Technical Specifications¹

Characteristic	HVA28TD
Input Voltage	100 – 240 V 50/60 Hz (400 VA)
Output Voltage [Max.]	Sinusoidal: 0 – 28 kV peak, 20 kV rms DC: ± 0 – 28 kV Squarewave: 28 kV, Accuracy: ± 1% Resolution: 0.1 kV
Output Current	0 – 20 mA (Resolution 1 µA) Accuracy: ± 1%
Resistance Range	0.1 MΩ...5 GΩ
Output Frequency	0.01 – 0.1 Hz in steps of 0.01 Hz (default 0.1 Hz) – auto frequency selection
Output Load	0.5 µF @ 0.1 Hz @ 20kV rms 5.0 µF @ 0.01 Hz @ 20 kV rms 10.0 µF maximum Capacitance!1
Sheath Test	Unmax: 10 kV Duration: 1 min – 15 min Trip Current: 0.1 mA – 5.0 mA
Sheath Fault Location ²	Unmax: 10 kV Duration: 1 min – 60 min Pulse/Period: 1:3/4 s, 1:5/4 s, 1:5/6 s, 1:9/6 s
Test Modes	AC (VLF) Symmetrical and load independent across full range, DC (plus or negative polarity), Burn-/ Fault Condition or Fault Trip Mode, Jacket / Sheath Testing
Safety	50 Hz – 12 kV Feedback Protection / Dual Discharge Device (internal)
Record Storage	Built in Memory: up to 50 reports , 40 Test sequences USB Memory Flash drive: Unlimited
Metering	Voltage and Current (True rms and / or peak), Capacitance, Resistance, Time, Flashover Voltage
Tangens Delta measurement optimal accuracy	± 1 x 10 ⁻⁴
Duty	Continuous! No thermal limitation for operating time
PC Software [included]	“HVA Control Center” for Windows XP / Vista / 7
Computer Interfaces	Bluetooth and USB
Weight	14 kg
Dimensions [Peli Case 1430]	430mm x 240mm x 340mm
Environment	Storage Temperature: -25°C to 70°C (-13F to 158F) Operation Temperature: -5°C to 45°C (23F to 113 F) Humidity: 5-70 % non-condensing;

¹ Technical Specifications are subject to change. b2 reserves the right to modify values in accordance with future HVA28TD development.

² in combination with locating device (not in scope of supply)

3.2 Design Features









To assure that the workplace is safe and that operators can fulfil their responsibilities with ease, the HVA28TD provides the following features.

Feature	Purpose / Application	Advantage
Optimized Frequency Selection / Automatic load measurement	<ul style="list-style-type: none"> To test capacitive loads No instrument restart necessary 	<ul style="list-style-type: none"> Facilitates testing Limits number of connections to the DUT
Fully Automatic Test Sequences	<ul style="list-style-type: none"> To test according to IEEE or other standards 	<ul style="list-style-type: none"> Facilitates complex testing Facilitates test repetition
Real Time Display	<ul style="list-style-type: none"> To indicate instantaneous output voltage display. 	<ul style="list-style-type: none"> Facilitates testing
Load independent output	<ul style="list-style-type: none"> To indicate true symmetrical sinusoidal and square wave waveforms output 	<ul style="list-style-type: none"> Facilitates testing
Built in Memory	<ul style="list-style-type: none"> To save test sequences To save test reports 	<ul style="list-style-type: none"> Facilitates test repetition Facilitates documentation
Arc Management	<ul style="list-style-type: none"> To provide short-circuit protection To allow for fault conditioning 	<ul style="list-style-type: none"> Limits test interruptions commonly encountered when using conventional HV test instruments that immediately trip on arc detection.
Automatic load measurement	<ul style="list-style-type: none"> To limit connections to the DUT 	<ul style="list-style-type: none"> Facilitates testing
Intelligent Design	<ul style="list-style-type: none"> To avoid moving parts and need for lubrication 	<ul style="list-style-type: none"> Reduces maintenance Improves instrument durability and reliability
Instrument Lock-Key switch (7)	<ul style="list-style-type: none"> To prevent against unauthorized use 	<ul style="list-style-type: none"> Improves safety
Local and remote emergency off switches	<ul style="list-style-type: none"> To shutdown operations in emergency situation 	<ul style="list-style-type: none"> Improves safety
Fully integrated discharge and transient circuit	<ul style="list-style-type: none"> To ground the DUT after testing To protect the unit from transient over voltages 	<ul style="list-style-type: none"> Improves safety Protects instrument
Initial load clearance test at reduced voltages	<ul style="list-style-type: none"> To check automatically for shorts or grounds, during load measurement, before test initiation 	<ul style="list-style-type: none"> Improves safety
Return Voltage Indication	<ul style="list-style-type: none"> To monitor external high voltage greater than 100V (AC or DC) 	<ul style="list-style-type: none"> Improves safety
Discharge Status Indication	<ul style="list-style-type: none"> To indicate when DUT is not fully discharged. LED Red (3) lights when residual voltage greater than 100V 	<ul style="list-style-type: none"> Improves safety during normal disconnection procedures
USB	<ul style="list-style-type: none"> To store test reports To upload test sequences 	<ul style="list-style-type: none"> Facilitates documentation Facilitates Test repetition
Bluetooth	<ul style="list-style-type: none"> To send test reports To upload test sequences 	<ul style="list-style-type: none"> Facilitates documentation Facilitates Test repetition
IP67 (with closed lid)	<ul style="list-style-type: none"> To avoid damage during transport or storage To protect instrument from water 	<ul style="list-style-type: none"> Protects instrument Improves functionality

3.3 Materials

Shipment Content

Items included upon delivery of the HVA28TD are listed below. The * marking specifies items that are country specific. For inquiries, please contact b2.

Art. No.	Item	Description	Qty
GH0584	HVA28TD HV Anschlusskabel		1
GH0522	Earthing Cable Transparent 6mm ² / 4m; with 400A clamp		1
KEC0007	Power On Key Spare key for Key switch (7)		1
KEK0038*	Main Cable (Europe) EURO 3m sw EN60320 / C13		1*
KDD0012	USB Stick Flash Drive b2		1
VK0046	HVA28TD Transport Box 475 x 365 x 555 mm		1
VKR0027	HVA28TD Laptop bag b2		1
VS0002	HVA28TD riser for Peli Case		1
DHV0053	HVA28TD Operation Manual		1
	HVA28TD PC Software		1

4 Design and Construction

4.1 Control Elements

HVA28TD control and connection components are located on the front panel.




Orientation	Description
Front Panel	<ul style="list-style-type: none">• Test controls and emergency shutdown• HV status information• Cable and power source connections• Air vent• USB

Switches and Controls












Pos.	Name	Description
1	Emergency OFF	Activates emergency shutdown. Operation is only possible when Emergency OFF is deactivated. <ul style="list-style-type: none"> To Activate Emergency Off → Press in To Deactivate Emergency Off → Release latch and rotate
2	LED green	Indicates HV status. *Green light indicates → High Voltage is OFF
3	LED red	Indicates HV status. *Red light indicates → High Voltage is ON (possible DANGER) → DUT not discharged (residual voltage >100V)
4	Display screen	Displays menu, options and status information.
5	Navigation knob	Enables user to select options and functions shown on display. See 4.2 User Interface <ul style="list-style-type: none"> To scroll selection up or down → Rotate To enter selection → Click (push in)
6	HV switch [on/off]	Activates high voltage. <ul style="list-style-type: none"> To activate HV output → Press within 10 seconds after START See 5.2 Manual Test Procedure See 5.3 Automatic Test Procedure

Pos.	Name	Description
7	Key switch [on/off]	Locks the unit to prevent against unauthorized use. <ul style="list-style-type: none"> To disable unit → Remove key from the OFF Position To reactivate unit → Replace key and turn to ON Position.
8	Earthing connector	Serves as connection point from HVA to earth.
9	Power supply plug	Serves as connection point from the HVA to the 100V – 240V, 50/60 Hz powers source.
10	HV output connector	Serves as connection point from the HVA to the HV test lead. To connect → Screw the HV test lead into the HV output connector and tighten
11	Air Vent	Air inlet with filter, for cooling of electronic elements.
12	Air Vent	Air outlet, for cooling of electronic elements.
13	Communication port	Serves as connection point from the HVA to a USB device. 

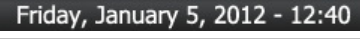4.2 User Interface


Main Screen



	Element	Description
Title		After activating the unit, display shows "Main Menu"
Unit		Indicates type of unit operated
Date and Time		Indicates day, date and time
USB		Indicates if USB is enabled (green) or disabled (red)
Bluetooth		Indicates if Bluetooth is enabled (green) or disabled (red)
Scroll Button		If active, scroll up or down the screen
Up and Down Arrow		Navigate with these arrows up and down if a Control Box is active.
Control Box Active		Box is active, chose given selections
Control Box Inactive		Box inactive, no selections to be chosen

Display Navigation

The navigation knob (5) enables the user to select or change options shown on the HVA display screen (4).

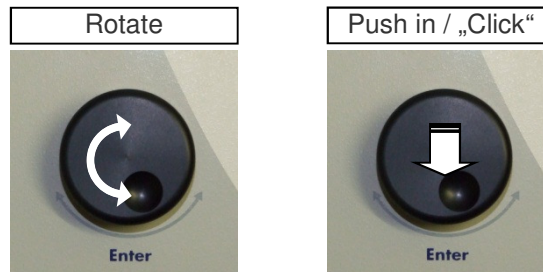

- To move to another item in a menu list or to any other field possible on the actual displayed screen → Rotate the knob.
- To scroll through options or to change value displayed of an active field → Rotate the knob.
- To select marked option or to accept set value accept → Push in / “click”


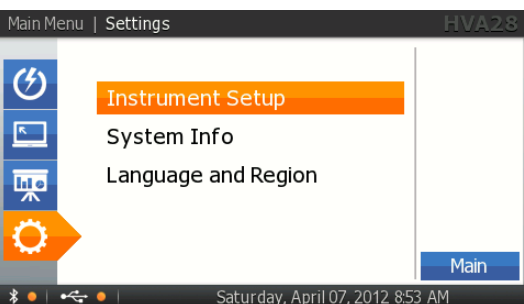
4.3 Instrument Set-up




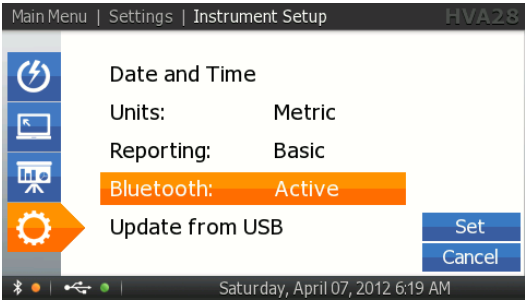
The HVA28TD instrument settings should be established prior to first utilization and can be modified at anytime thereafter. "Instrument Settings" is found in the main menu.



Instrument Setup

Steps IS1- IS7 describe how to **do the Instrument Setup**.

Step	Procedure (Instrument Setup)
<p>IS1: Settings</p> 	<p>Select "Settings"</p>
<p>IS2: Instrument Setup</p> 	<p>Select "Instrument Setup"</p>

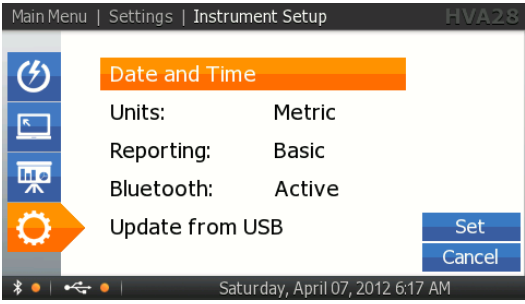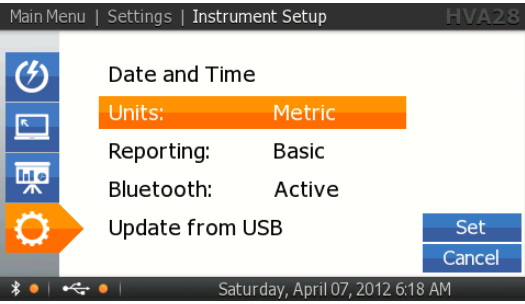Step	Procedure (Instrument Setup)
<p>IS3: Set Date and Time</p> 	<p>To set Date and Time, select “Date and Time” on “Settings” screen</p>
<p>IS4: Units</p> 	<p>Choose between Metric and Feet.</p>
<p>IS5: Reporting</p> 	<p>Choose one of the reporting types:</p> <ul style="list-style-type: none"> • Basic (detailed report information can be entered) • Extended (only Report Title is entered)
<p>IS6: Bluetooth</p> 	<p>Activate or deactivate Bluetooth</p>

Step

IS7: Finish Setup



Procedure (Instrument Setup)

Put the USB flash drive into the Communication Port (13) and the take updates from the USB stick.

System Information

Steps **SI1- SI3** describe how to do find the **System Information**.

Step


SI1: Settings




Procedure (System Information)

Select "Settings"

SI2: System Information

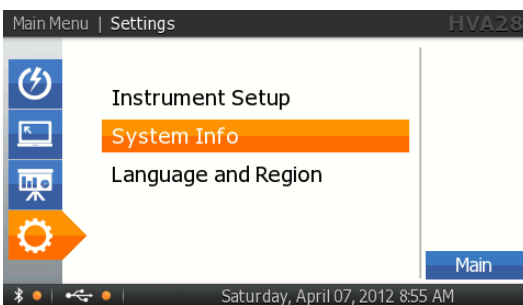

Select "System Info"

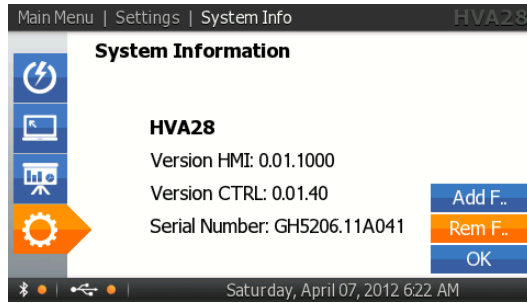



Step**SI3: See System Information****Procedure (System Information)**

“System Information” displays HVA characteristics. This information cannot be modified by the operator:

- Version HMI
- Version CTRL:
- Serial number: HVA unit serial number

Language and Region

Steps L1 – L4 describe how to do set **Language and Region**.

Step	Procedure (System Information)
<p>L1: Settings</p> 	<p>Select "Settings"</p>
<p>L2: System Information</p> 	<p>Select "Language and Region"</p>
<p>L3: Language</p> 	<p>Choose Language:</p> <ul style="list-style-type: none"> • English • German • Dutch • French • Spanish • Russian • Chinese
<p>L4: Region</p> 	<p>Choose Region:</p> <ul style="list-style-type: none"> • Europe • UK • USA • Russia • China • South Africa • Asia • International

4.4 Operation Modes

The following describes the scope of each HVA28TD operation modes: **Test Modes**, **Output Modes** (Waveform), **Arc Management Modes**, and **Data Transfer Modes**.

Test Modes

The HVA28TD can be operated in “Manual” or “Automatic” mode. For detailed procedure, see 5.2 - Manual Test Mode, and 5.3 - Automatic Test Mode.

Test Mode	Characteristics
Manual	<p>Designed to facilitate rapid testing. Test Parameters of the last manual test appear as the default setting.</p> <ul style="list-style-type: none"> • Test parameters can be changed immediately before activating a test. • Basic reporting most appropriate setting. (Extended reporting will generate a report with most fields left blank)
Automatic	<p>Designed for testing with predefined configuration in order to satisfy specific requirements (e.g. IEEE, IEC standards).</p> <ul style="list-style-type: none"> • Test sequence must be configured and saved at any time before testing. • Extended reporting most appropriate setting.

Output Modes


The HVA can carry out HV28TD test in the following output modes:

Output Mode	Characteristics
DC [- /+]	<p>Single polarity output. DUT is polarized (negative / positive) with respect to ground.</p> <ul style="list-style-type: none"> • Not recommended for testing extruded cables (e.g. XLPE cables). • Measured valued: Dielectric loss of the DUT (including leakage current across terminations) • DC - : Most commonly used DC output mode
VLF Sinewave	<p>Default waveform</p> <ul style="list-style-type: none"> • Suitable for testing extruded cables (e.g. XLPE cables). • Measured valued: RMS
VLF Squarewave	<ul style="list-style-type: none"> • Suitable for testing extruded cables (e.g. XLPE cables). • Measured valued: RMS
Vacuum Bottle Testing	<ul style="list-style-type: none"> • Not suitable for testing with DC above DUT voltage rating (X-ray Hazard) • Possible in Manual and Automatic test modes • Trip current and rise rate are user defined • Measured valued: kV

Output Mode	Characteristics
Sheath Test	<ul style="list-style-type: none"> • Suitable for Sheath Test • Duration is user defined • Unmax 10 kV
Sheath Fault Location Mode	<ul style="list-style-type: none"> • Suitable for Sheath Fault Location • Duration is user defined • Pulse user defined (1:3/4 s, 1:5/4 s, 1:5/6 s, 1:9/6 s)

Arc Management Modes

If a fault is detected during a HV test, the arc management mode determines how the failure is managed. The “Burn on Arc” mode will condition the fault whereas the “Trip out on Arc” mode will immediately switch HV off.

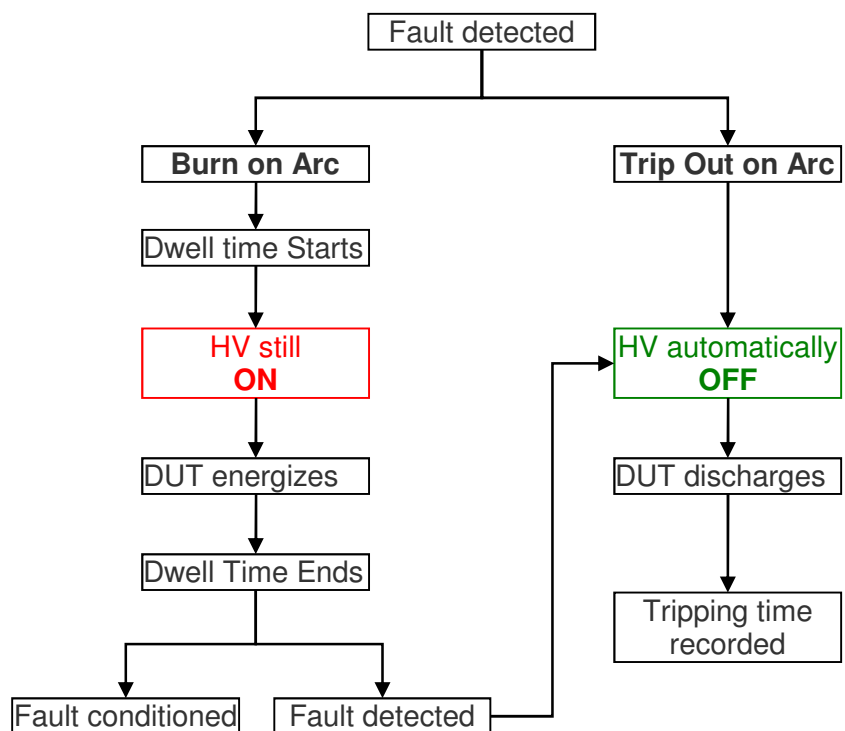

Data Transfer Modes

The HVA28TD built in memory can save up to 100 reports and 80 test sequences. Data storage location and transfer capability depends on the configuration of the communication port (13).

Configuration	Characteristics
USB	<ul style="list-style-type: none"> • During testing, put the USB Flash Drive into the communication port (13) • When connected, left hand corner of main menu displays “USB” enabled (green). • Test sequences are directly saved to HVA28TD memory • New reports are directly saved to USB stick inserted • All reports saved in HVA28TD memory, can be transferred to the linked USB stick: • During testing, USB adapter and stick are connected to communication port (13) • When connected, left hand corner of main menu displays “USB”. • Test sequences are directly saved to HVA28TD memory • New reports are directly saved to USB stick inserted • Reports saved on the USB stick can be retrieved and viewed on the HVA28TD display. • All reports saved in HVA28TD memory, can be transferred to the linked USB stick:

5 Test Procedure



DANGER

Electric Shock Hazard!


All procedures must comply with local safety regulations.

- Before operating the HVA28TD, equipment set-up procedure must be completed!
- Cables must be connected in the proper sequence!
- Before, turning on the power supply and before activating the HVA28TD, verify that all system elements are properly grounded!
See 5.1 Equipment Set-up: Steps S1 –S7

5.1 Equipment Set-up

Steps **S1-S7** describe the **Equipment Set-up** procedure. When carrying out multiple tests, the earth and power supply connections must always remain intact. The HV test lead must be reconnected before each subsequent test (i.e. repeat procedure as of step S3).

Connection Diagram: Cable Testing

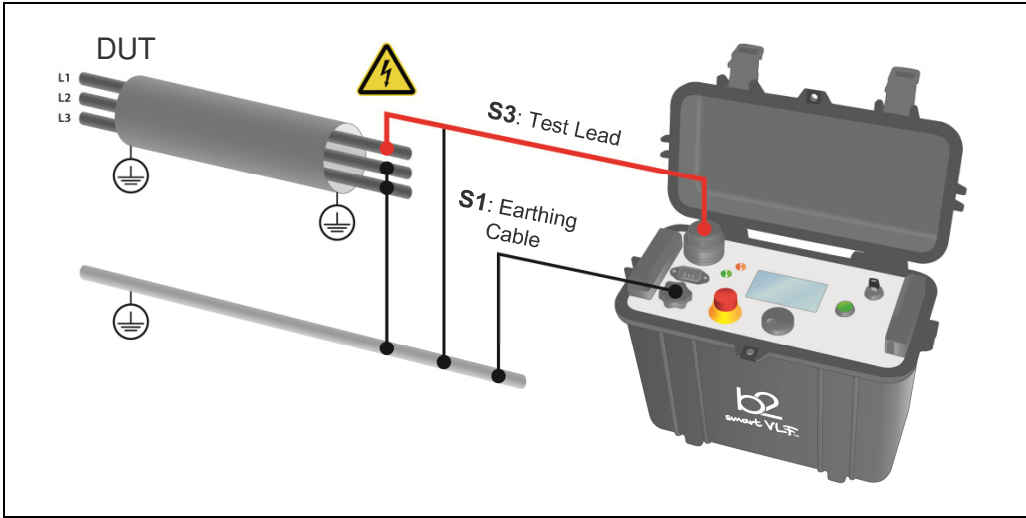

Step	Procedure
S1	Connect Earthing Cable <ul style="list-style-type: none"> • Connect earthing cable to the HVA earthing connector (10) • Connect earthing cable to the DUT ground
S2	Connect Power Supply Cable <ul style="list-style-type: none"> • Connect the power supply cable to the HVA power supply plug (9)




Step	Procedure
S3	Connect HV Test Lead <ul style="list-style-type: none">• Screw the HV test lead into the HVA HV output connector (11)• Connect the HV cable shield to earth.• Connect other end of HV test lead (clamp including screen protector) to the DUT.
S4	Verify Connections <ul style="list-style-type: none">• Check that all cables are attached securely.
S5	Configure communication port (13) For USB Data Transfer Mode: <ul style="list-style-type: none">• Connect the USB Flash adapter• Insert USB stick Otherwise: Verify that RS232 cable is not connected to the HVA!
S6	Turn key switch (7) to the "ON" position
S7	The HVA system automatically boots. <ul style="list-style-type: none">• Start-up default screen appears "Start Test" screen Select appropriate option from default screen and proceed to appropriate section for further instructions: <ul style="list-style-type: none">• See 5.2 Manual Test Mode or See 5.3 Automatic Test Mode





5.2 Manual Test Mode

This HVA28TD test mode facilitates rapid testing. If the default is the “Manual Mode Screen”, a test with the same settings as the previous test can be started directly after activating the system.

Setting Manual Test Parameters

Steps **MS1-MS11** describe how to **set manual mode test parameters**.

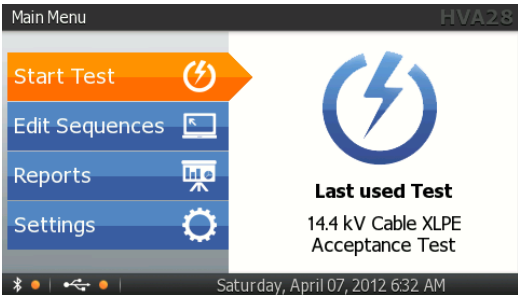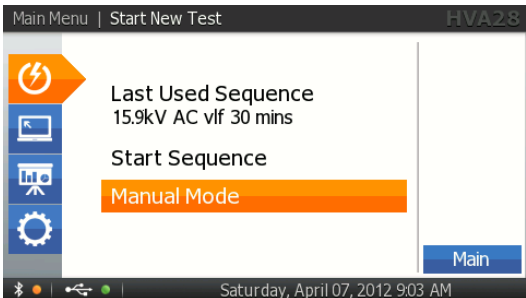Step	Procedure (Set Manual Test Parameters)
<p>MS1: Start new Test</p> 	<p>Select “Start Test”</p>
<p>MS2: Start Manual Mode</p> 	<p>Select “Manual Mode”</p>
<p>MS3: SETUP</p> 	<p>To set the waveform, frequency, or test duration, select “SETUP” on bottom of “Manual Test” screen</p>

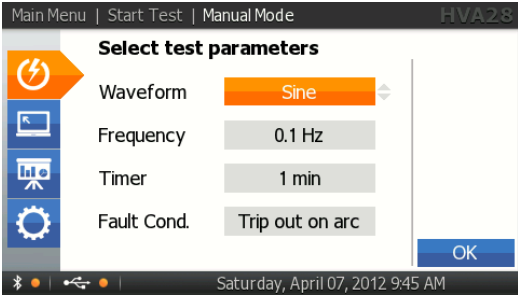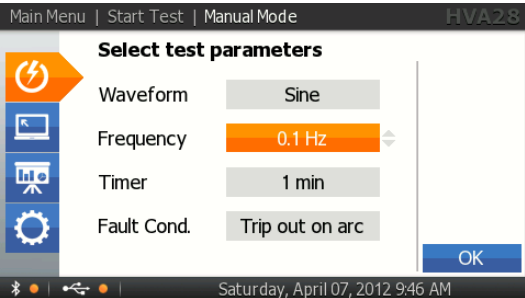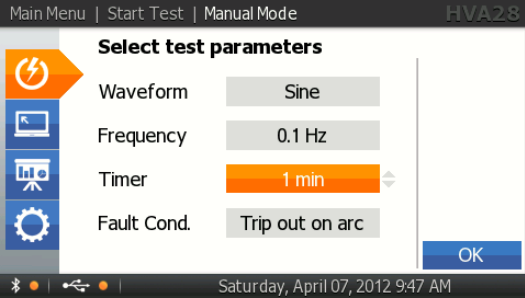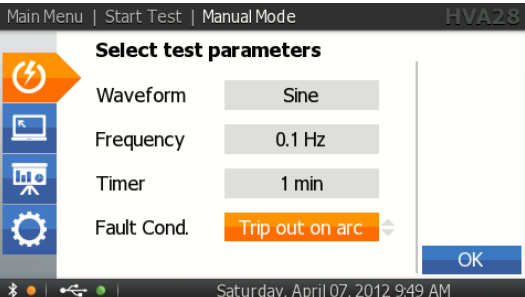Step	Procedure (Set Manual Test Parameters)
<p>MS4: SETUP: Waveform</p> 	<p>Select one of the following output modes:</p> <ul style="list-style-type: none"> • Sine wave • Square wave • DC+ • DC- • Vacuum Bottle Test • Sheath Test • Sheath Fault Location
<p>MS5: SETUP: Frequency Sinewave, Squarewave</p> 	<p>Set the frequency to as close to 0.1Hz as possible.</p> <ul style="list-style-type: none"> • 0.1 Hz/Auto: Recommended setting that automatically maintains the frequency as close to 0.1Hz as possible <p>To correct entry select “CANCEL” at bottom of display.</p>
<p>MS6: SETUP: Duration (Not applicable Vacuum Bottle Test)</p> 	<p>To modify the duration, rotate navigation knob (5). To accept value, push in knob.</p> <ul style="list-style-type: none"> • Min. test duration = 1 minute • Max. test duration = 24 hours <p>To return to “Manual Mode” screen, select “OK”</p>
<p>MS7: Arc Management Mode</p> 	<p>Rotate navigation knob (5) until the field on bottom of the screen is highlighted. To change the mode, push in the knob. One of the following modes will be displayed:</p> <ul style="list-style-type: none"> • Trip out on Arc • Burn on Arc

Step**MS8: Preset Test Voltage:**

(optional-voltage can be set once test has been initiated!)

**Procedure (Set Manual Test Parameters)**

Entering the test voltage before activating the manual mode test “START” is **optional**.

In manual mode, voltage can be set once test has been initiated!

To set the test voltage before activating the manual mode test “START”:


Rotate navigation knob (5) until voltage field is framed. The dot in upper right hand corner indicates that the test voltage is in preset mode. To modify the value, rotate navigation knob (5).

- Min. test voltage = 0.0kV
- Max. voltage = 20.0kVrms (VLF), 28.0kV (DC)


To accept the value, push in knob (5). The dot in upper right hand disappears indicating that the test voltage is set.

Running a Manual Test

Steps **MR1-MR8** describe how to **run a test in the manual mode.**

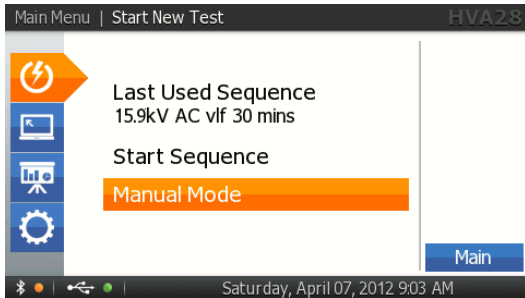Step	Procedure (Run Manual Test)
<p>MR1: Start new Test</p>  <p>The screenshot shows the 'Main Menu' with four options: 'Start Test' (highlighted in orange), 'Edit Sequences', 'Reports', and 'Settings'. On the right, it displays 'Last used Test: 14.4 kV Cable XLPE Acceptance Test'. The status bar at the bottom shows 'Saturday, April 07, 2012 6:32 AM'.</p>	<p>Select "Start Test"</p>
<p>MR2: Start Manual Mode</p>  <p>The screenshot shows the 'Start New Test' screen. It displays 'Last Used Sequence: 15.9kV AC vlf 30 mins' and 'Start Sequence: Manual Mode' (highlighted in orange). There are 'Main' and 'Setup' buttons at the bottom right. The status bar shows 'Saturday, April 07, 2012 9:03 AM'.</p>	<p>Select "Manual Mode"</p>
<p>MR3: START Test</p>  <p>The screenshot shows the 'Manual Mode' screen with '0.0 kv rms' displayed prominently. Below it is a 'START' button. Other text includes 'Sine 0.1 Hz Timer: 1 min' and 'Trip out on Arc'. There are 'Setup' and 'Main' buttons at the bottom right. The status bar shows 'Saturday, April 07, 2012 9:11 AM'.</p>	<p>Start the test when test parameters displayed on the "Manual Test" screen are correct. Rotate navigation knob (5) until the "START" field is highlighted. To run the test, push in knob (5)</p>
<p>MR4: HV Activation</p>  <p>The screenshot shows a warning screen with the text 'ATTENTION! High Voltage!' and 'Press I/O Button to switch ON High Voltage.' A yellow high voltage warning symbol is on the right. The status bar shows 'Saturday, April 07, 2012 6:35 AM'.</p>	<p>Once the activation screen appears,</p> <ul style="list-style-type: none"> • Press the HV switch (6) within 10 seconds. <p>If the HV switch is not activated within the 10 second window, the "Manual Mode" screen will reappear.</p>


MR5: Test Start up

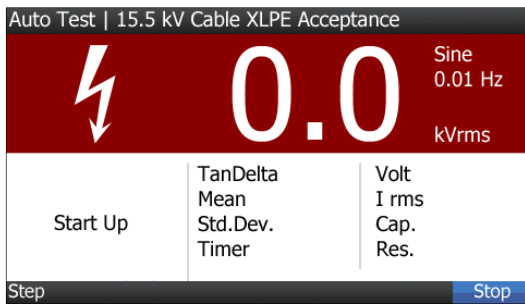

“Startup” appears on the screen to indicate that the HVA is initializing the test

MR6: Set Test Voltage


(if not preset in step MS 8)

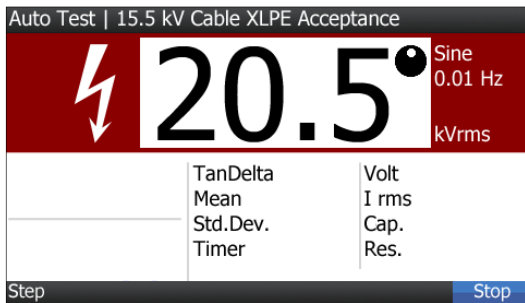

Rotate navigation knob (5) to modify the voltage value.

- Min. test voltage = 0.0kV
- Max. voltage = 20.0kV rms (VLF), 28.0kV (DC)

MR7: Test

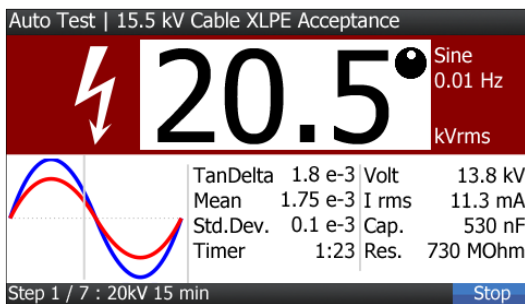


Test begins automatically

The bottom of the screen indicates the lapsed time

T: lapsed time / total test duration

MR8: Test End

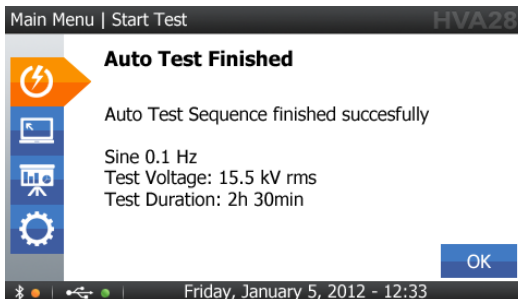


Display indicates end of Manual Test

5.3 Automatic Test Mode


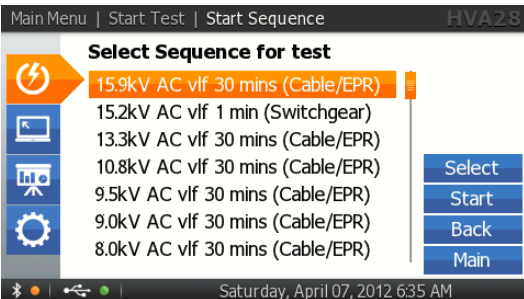

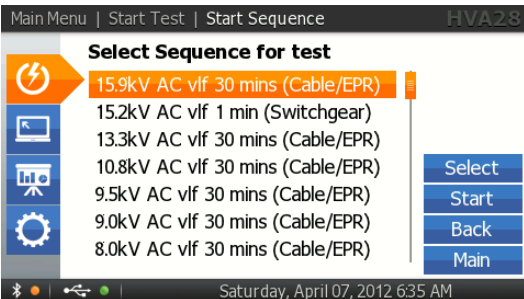
This HVA28TD test mode facilitates testing in order to satisfy specific requirements (e.g. IEEE, IEC standards). The test sequence can be configured, modified and saved at any time before testing.

Configuring Auto Test. Sequence- Overview

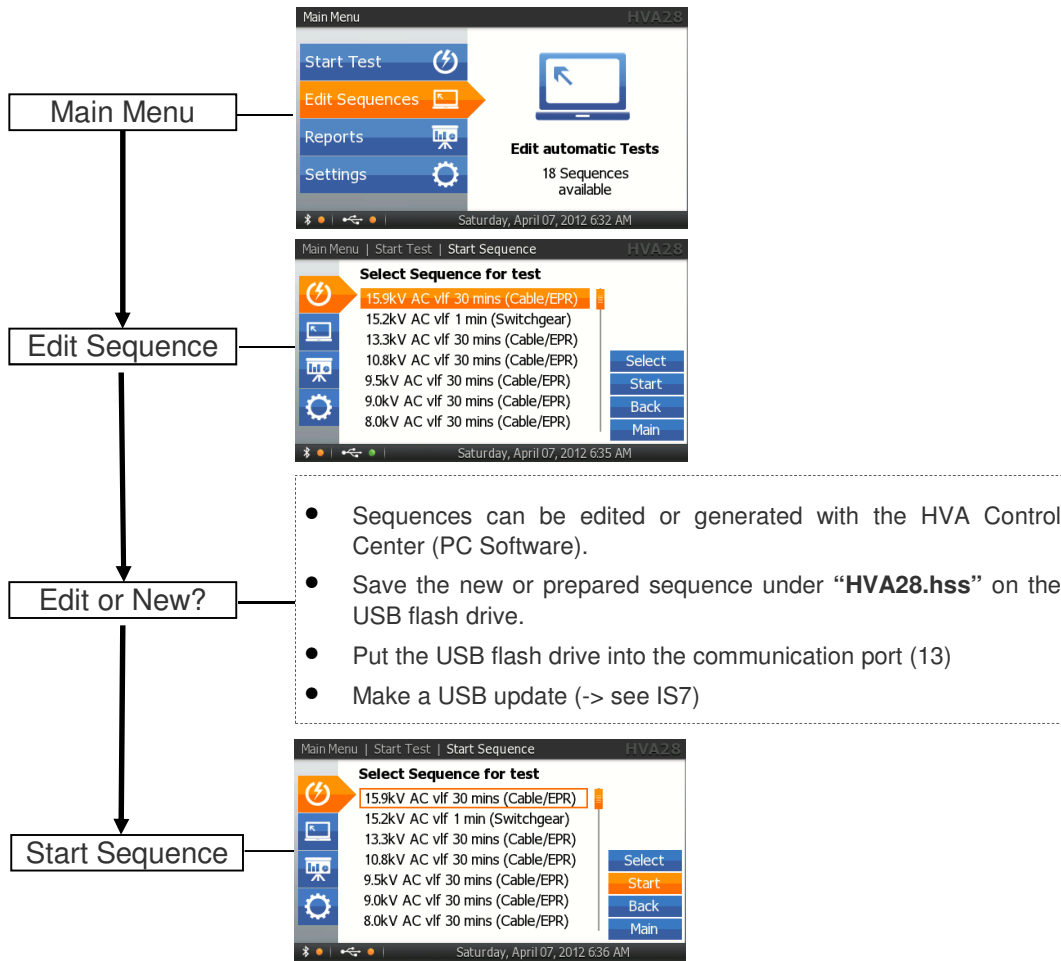


Configuring Auto Test. Sequence- Detailed Steps

Steps **AS1-AS3** describe how to **configure a test sequence**.

Step	Procedure (Configure Automatic Sequence)
<p>AS1: Edit Sequences</p> 	<p>Select "Edit Sequences"</p>
<p>AS2: EDIT or NEW?</p> 	<p>To edit or generate new test sequences change to the HVA28 Control Center (PC Software)</p> <ul style="list-style-type: none"> • Edit or make a new test sequence on the HVA28 Control Center • Save the sequence on the USB flash drive <div style="border: 1px solid black; background-color: #0070C0; color: white; padding: 5px; text-align: center; margin: 10px 0;">NOTICE</div> <p> The file must be saved under "HVA28.hss" on the USB flash drive.</p> <ul style="list-style-type: none"> • Put the USB flash drive into the communication port (13) • Make a USB update (Settings -> see IS7) <p>The sequence is found in the "Edit Sequences" Menu display</p>
<p>AS3: DUT</p> 	<p>Select one of the Sequences which are already stored in memory.</p>

Running an Automatic Test - Overview

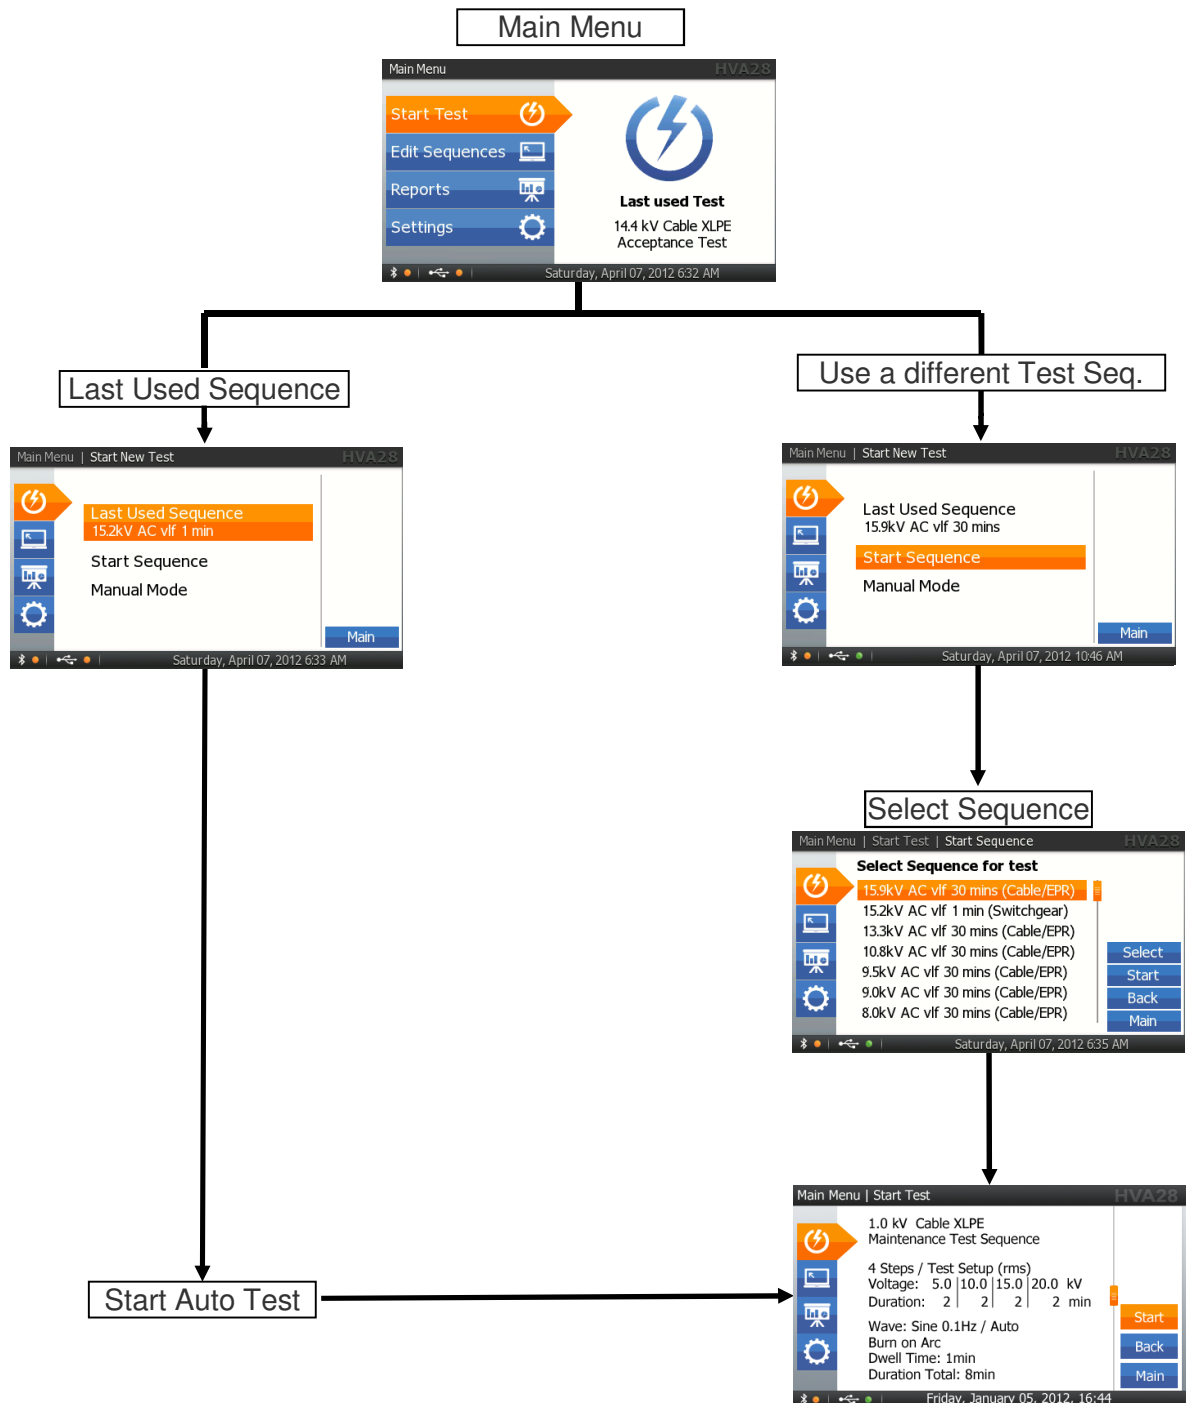

Running an Automatic Test - Detailed Steps

Steps **AR1 - AR8** describe how to **run a test in the Automatic Mode.**

Step	Procedure (Run Automatic Test)
<p>AR1: Use Last Seq. or Start New Test</p> 	<p>Select "Start Test"</p>
<p>AR2: Chose Test</p> 	<p>To repeat the previous test sequence:</p> <ul style="list-style-type: none"> • Select "Last Used Sequence" from "Main Menu" • Proceed to Step AR 4 <p>Otherwise, select:</p> <ul style="list-style-type: none"> • "Start Sequence"
<p>AR3: Sequence</p> 	<p>Select one of the Sequences</p>
<p>AR4: Sequence</p> 	<p>All information about the chosen sequence are displayed.</p>

Step

Procedure (Run Automatic Test)

AR5: HV Activation




Once the activation screen appears,

- Press the HV switch (6) within 10 seconds.


If the HV switch is not activated within the 10 second window, the “Start Auto Test Seq. “screen will reappear.

AR6: Test Start up

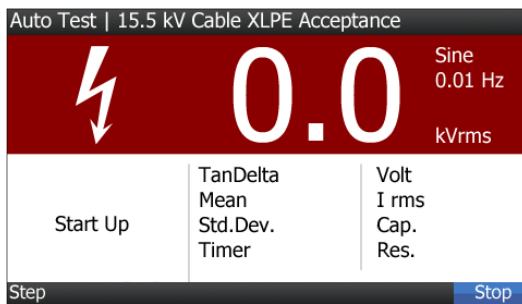

“Startup” appears on the screen to indicate that the HVA is initializing test

AR7: Test

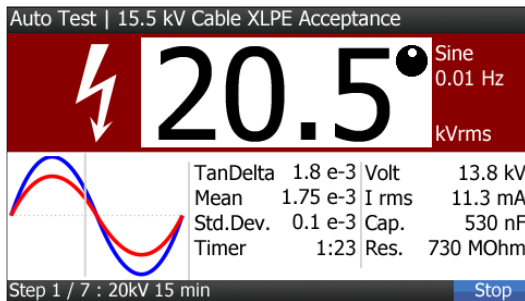


Test begins automatically

The bottom of the screen indicates the lapsed time

T: lapsed time / total test duration

AR8: Test End

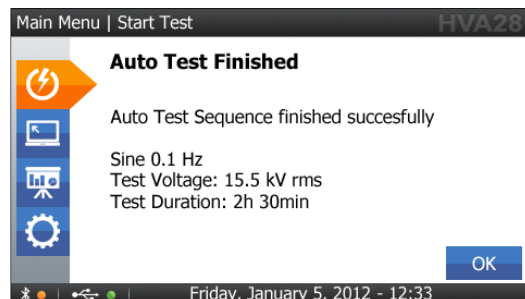




Display indicates end of Auto Test

If reporting is active, the user can immediately view the report.

5.4 Interrupting a Test

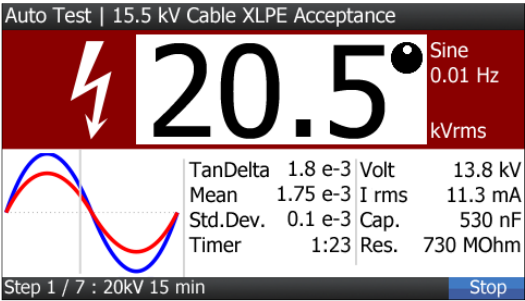Once a test has started, it can be interrupted at any time. It is recommended to select the appropriate method corresponding to the situation

Situation	Procedure
<p>Routine STOP (No emergency)</p> 	<p>When a test is in progress, “STOP” on the display screen is highlighted. To interrupt the test, push in / click the navigation knob (5)</p> <ul style="list-style-type: none"> • HVA28TD software deactivates HV • Test stops
<p>Alternative</p> 	<p>When a test is in progress, press the HV switch (6) to deactivate high voltage.</p> <ul style="list-style-type: none"> • HVA28TD hardware deactivates HV • Test stops
<p>Emergency Stop</p> 	<p>In an emergency situation, press the Emergency Off (1) to shutdown the system.</p> <ul style="list-style-type: none"> • HVA28TD hardware deactivates HV • Test stops

6 Tangens Delta

6.1 Application


The HVA28TD provides the testing and commissioning engineer/technician with a versatile high voltage tan delta measuring system suitable for testing medium voltage electrical insulation systems such as cables (including: XLPE, PE, EPR, PILC etc), capacitors, switchgear, transformers, rotating machines, insulators and bushings.

Tan Delta testing enables the cable test engineer to detect insulation defects before the cable fails in service. The HVA28TD is a HVA test unit with an integrated tangens delta measuring system. The tan delta test results of the test object can now be easily measured, recorded and screen on the display. The results can be stored easily via USB flash drive.

Additional it is the HVA28TD PC Software in scope of delivery. With this PC Software the test results can be easily stored on a standard PC or Laptop for analysis, trending or quality control. This enables the cable engineer to now make tangens delta testing a routine maintenance test.

6.2 Equipment Set-up

Connection Diagram: Cable Testing

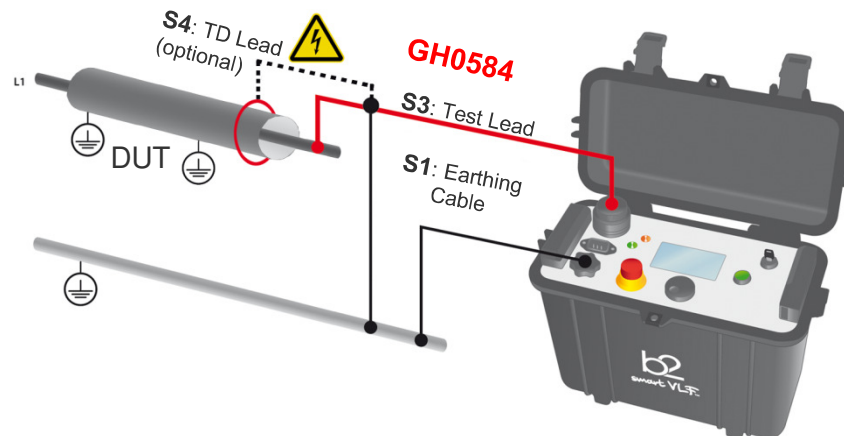

Step	Procedure
S1	Connect Earthing Cable <ul style="list-style-type: none"> • Connect earthing cable to the HVA earthing connector (10) • Connect earthing cable to the DUT ground
S2	Connect Power Supply Cable <ul style="list-style-type: none"> • Connect the power supply cable to the HVA power supply plug (9)

Step	Procedure
S3	<p>Connect HV Test Lead</p> <ul style="list-style-type: none"> Screw the HV test lead into the HVA HV output connector (11) Connect the HV cable shield to earth. Connect other end of HV test lead (clamp including screen protector) to the DUT.
S4	For 90% it is sufficient to clean the terminations. If necessary connect the external guard like it's shown in the pictures below (GH0584).
S5	<p>Verify Connections</p> <ul style="list-style-type: none"> Check that all cables are attached securely.
S6	Configure communication port (13)
S7	Turn key switch (7) to the "ON" position
S8	<p>The HVA system automatically boots.</p> <ul style="list-style-type: none"> Start-up default screen appears "Start Test" screen <p>Select appropriate option from default screen and proceed to appropriate section for further instructions:</p> <ul style="list-style-type: none"> See 5.2 Manual Test Mode or See 5.3 Automatic Test Mode




6.3 Tangens Delta Test

Running a Manual Test with Tangens Delta

Steps **TD1 – TD8** describe how to **run a test in the manual mode with Tangens Delta**.

Step	Procedure (Run Manual Test)
<p>TD1: Start new Test</p> 	<p>Select "Start Test"</p>
<p>TD2: Start Manual Mode</p> 	<p>Select "Manual Mode"</p>
<p>TD3: START Test</p> 	<p>Start the test when test parameters displayed on the "Manual Test" screen are correct. Rotate navigation knob (5) until the "START" field is highlighted. To run the test, push in knob (5)</p>
<p>TD4: HV Activation</p> 	<p>Once the activation screen appears,</p> <ul style="list-style-type: none"> • Press the HV switch (6) within 10 seconds. <p>If the HV switch is not activated within the 10 second window, the "Manual Mode" screen will reappear.</p>


TD5: Test Start up

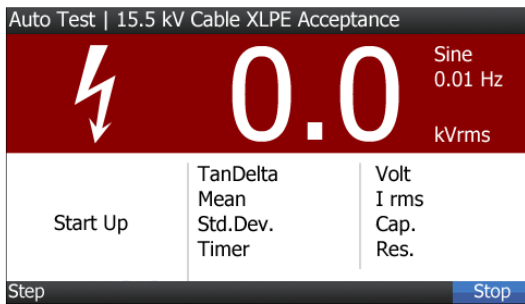

“Startup” appears on the screen to indicate that the HVA is initializing the test

TD6: Set Test Voltage


(if not preset in step MS 8)

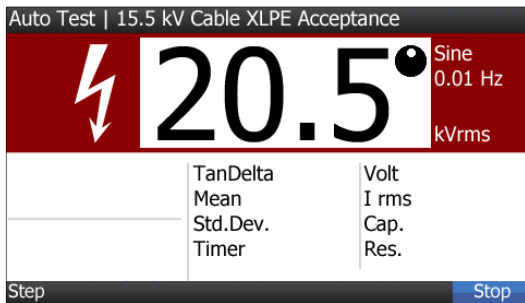

Rotate navigation knob (5) to modify the voltage value.

- Min. test voltage = 0.0kV
- Max. voltage = 20.0kV rms (VLF), 28.0kV (DC)


TD7: Test

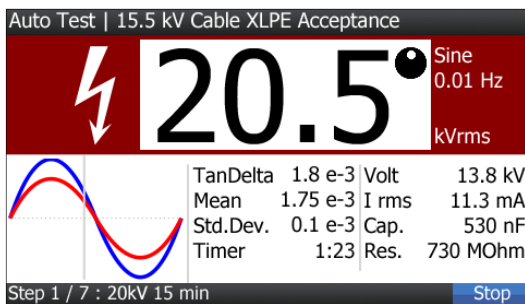

Test begins automatically
The bottom of the screen indicates the lapsed time

T: lapsed time / total test duration

TD8: Test End

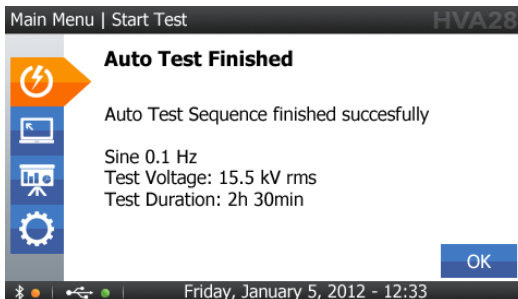

Display indicates end of Manual Test

6.4 PC Software HVA28TD

The HVA28TD system is delivered with a set of Windows based software tools that are packaged into a software package. This software connects, records, analyses and reports the test results from the HVA28TD test instrument.

Description of Elements of the Main Screen:

System Information, Title Bar

The Title Bar shows connection status information like the serial of the HVA28TD system that is paired to the current PC.

Information Selection Tabs

Use these Tabs to switch between the various information you want to view.

Phase A-C: Show detailed TD measurement information of Phase A or B or C. If the corresponding Phase under “Currently Measured” is selected all new measurements will automatically be inserted under the selected tab.

Wave View: If a measurement is in progress, this tab shows a slightly delayed real-time display of the data acquired by the TD measurement system. Voltage and Current are shown. These values are not to scale. The graph is updated after each finished waveform period.

Graph TD vs. Voltage:

Graphical display of the TD test results as a function of applied voltage. The values of all three phases can be viewed and compared. The diagram is completely auto-scaling and extracts the mean TD value from the most recent voltage block for a particular phase.

Current HVA28TD Value

This field shows the currently measured TD value or the last value if measurement has stopped. Helpful if not in Phase-View, so the current TD value can always be observed.

Report Phase Detail

Each Phase Measurement Report consists of header which includes the HVA28TD serial number it was acquired from, and the filename that it was stored under.

Report Block Header

For every detected voltage change during measurement the system automatically creates a new block in the corresponding Phase Tab. Each Block starts with a header, which gives information like the Start Time of the measurement and the updated mean values of this block.

The “Change Phase” Button enables the user to move a selected block to another Phase or to completely remove it from the Report. This is useful if phase test data was mistakenly recorded under the incorrect phase number. This can happen if the user starts a measurement under one phase but does not change the “Currently Measured Phase Selection”. Then the whole block can be easily moved after the full measurement block has been completed.

Report Block Measurements

This grid shows the detailed individual test measurements for each distinct voltage. Each column is described with units in the grid header row.

Test Report File Functions – Load, Save, Print ...

Use these buttons to Load, Save and Print a test report.

The Print function can also be used to create PDF document reports if a PDF Writer or a similar PDF Printer Driver is installed.

Report Specific Functions

Clear Report

Clear the current active report test data. Be sure to save your test data before you clear a test report. This function is useful if you want to start a new test and want to “clean” test sheet.

Edit Report Information

This Form enables the user to save detailed information with the report data.

Cable/Line ID (if cable as DUT is selected)

The user can enter a unique identifier for the Device Under Test (DUT). This Text will also be used (by default) as the title for this Report on the Summary and Printout.

Store As Default

The user can store certain fields that are not likely to change from one test to another as default start-up fields. These fields are then easily and automatically inserted into any new test reports.

Fields stored: Station, Company, Region and Operator

Use filename as report title

If this box is checked, the report filename will be used as the report title instead of the Cable/Line ID field.

Currently Measuring..... Phase Selection

The phase that is currently being tested by the HVA28TD needs to be selected.


All new measurement data will be put into the corresponding report phase section (tab).

If the operator changes the phase during an active HVA28TD measurement, the change will only occur when the current HVA28TD voltage block is finished to avoid splitting up of the respective HVA28TD measurement data block. The block “under the wrong” phase tab can then be moved to the correct phase section using the “Change Phase” button in the block header as a later stage.

Graphical View / Diagram

This screen provides a graphical diagram of the Mean HVA28TD measurement data versus the applied test voltage.

The values of all three phases can be viewed and compared. The graph automatically scales and draws the mean HVA28TD values for each voltage block.

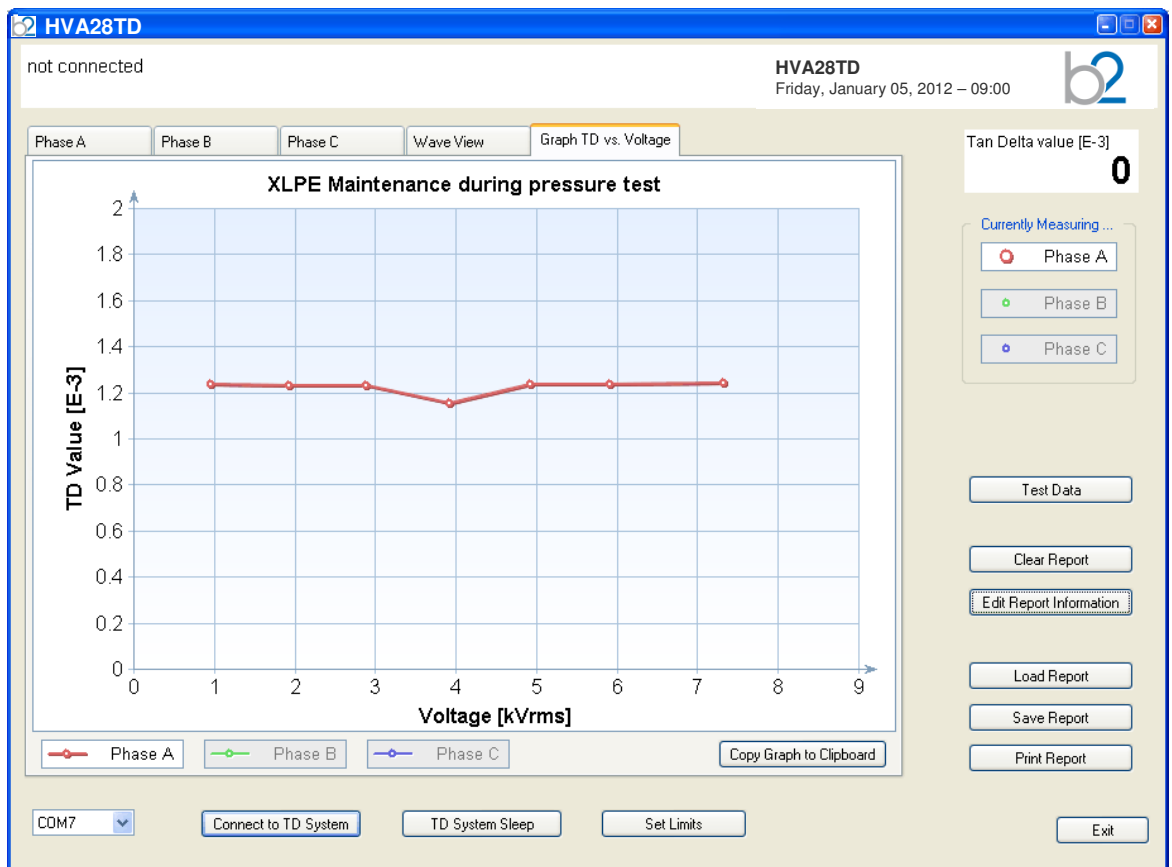

Phase Selection for Diagram View

Toggle ON/OFF the various phases to display / block out the relevant phase information.

Copy Graph to Clipboard

Use this function to make a copy the currently shown HVA28TD diagram into the Windows Clipboard. It can then be easily put into many other applications (like Word, Excel) by selecting Paste in the target program.

6.5 Bluetooth® Setup and Config Procedure

A Bluetooth USB dongle is shipped with every TD30 system. This dongle is tested to work with the TD unit and can be used if your Computer/Notebook has no built in integrated Bluetooth Hardware. Since there are various ways to use and configure Bluetooth under Windows operating systems, the following procedures are provided to setup and use Bluetooth wireless TD measurement system. You will need Administrator Privileges to install the drivers on certain secure networks.

Communication Parameters for Bluetooth Setup (Advanced Users)

- Bluetooth v1.1 compliant
- Serial Port Profile, only this profile and the corresponding outbound COM port needed
- COM 3 to COM30 are supported
- Secure and unsecure communication and pairing supported
- Passkey used is “welcome”, lowercase, (for pairing this is also the PIN-code)

To install the communication three steps have to be done

- **Step 1:** Installation of Bluetooth driver support on your computer (if not already built-in)
- **Step 2:** Configure Bluetooth support (Initial usage, only has do be done once)
- **Step 3-A/B:** Setting up the TD Communication Port
A: With use of External Dongle or B: Windows Supported Hardware
There are 2 different ways to set up a communication port, one is with Windows directly supported, one is using the external dongle. See below which procedure is to use with your computer.

Check Bluetooth Hardware

First check if your computer has a built in Bluetooth communications hardware like most of the newer Notebooks have. Normally they are then already configured to use Bluetooth.

In this case you will not need to use the external USB dongle nor should you install the Bluetooth driver CD supplied.

If you are not sure if Bluetooth is installed and running please check with your system administrator to verify if Bluetooth is supported on your computer system.

Installed drivers show a white on blue B-Icon in the system tray on the right bottom side of the desktop (Taskbar). Some Notebooks have separate pushbuttons to switch it on/off.



If Bluetooth is already supported you can go directly to Step 3-B Setting up TD Communication (Windows supported). If your system uses a different driver as shown in this manual use the above mentioned parameters to set up Communication.

Step 1 Installation of Bluetooth support on your computer


If your computer does not have a built in or existing Bluetooth Hardware you can use the Bluetooth Dongle and CD which is shipped with your TD System. This dongle has been tested to work with the TD unit and has a range of approximately 50 feet / 15 meters.

DO NOT INSTALL THE BLUE TOOTH DONGLE BEFORE YOU INSTALLING THE DRIVERS AS DESCRIBED BELOW.


Start Installation

Start the installation process by inserting the driver CD supplied. The Setup should start automatically, if not locate the CD/DVD drive on "My Computer" and start Setup.exe in the driver folder.


Due to possible technologically changes in drivers and the Windows operating system, certain messages shown below may vary slightly to what you may find on your computer.

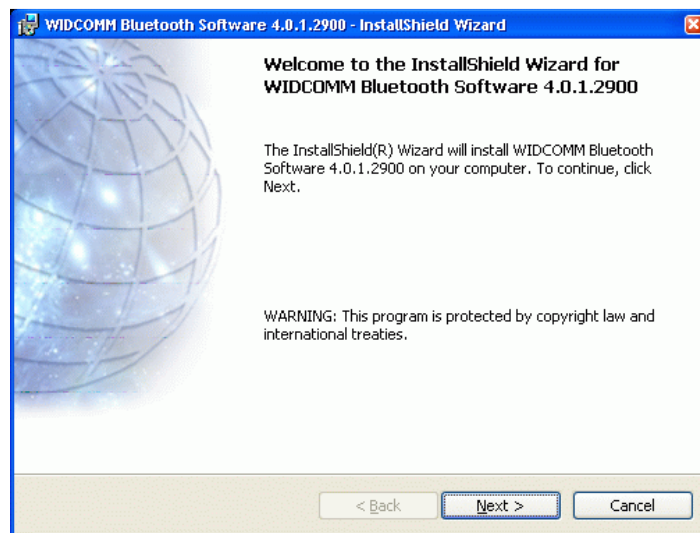


Driver Setup Start Screen

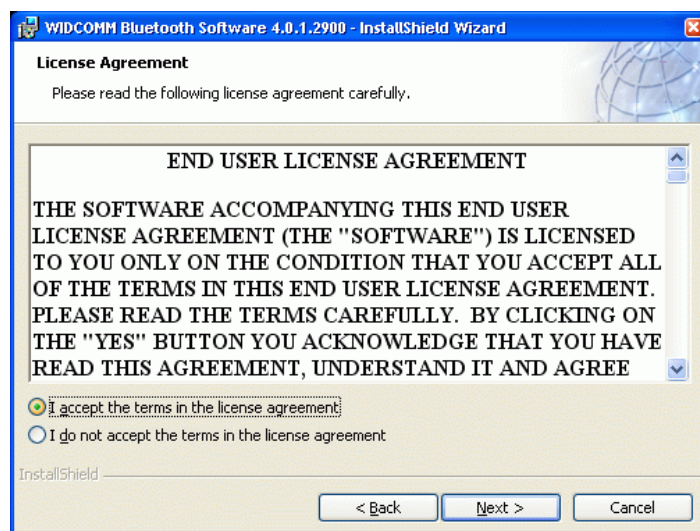


Accept License agreement

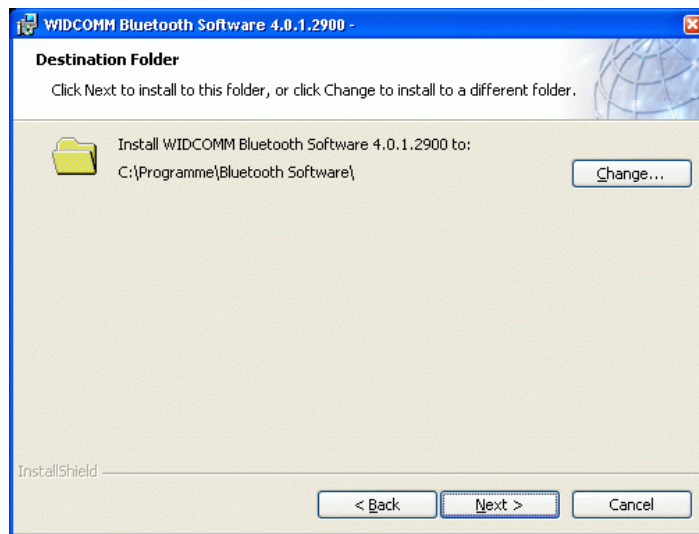


Choose Driver Software Destination. We suggest to use the defaults.

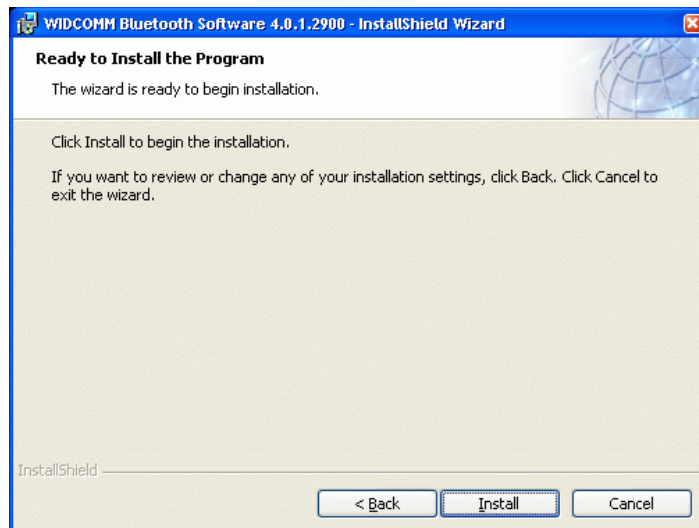


Begin Installation

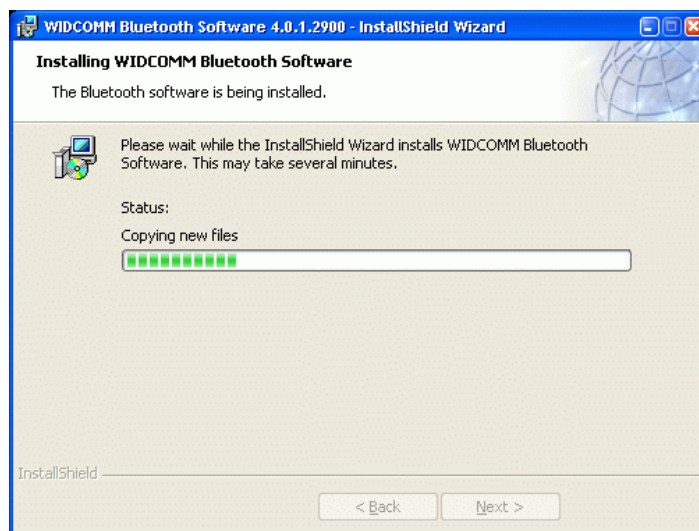


Installation has started

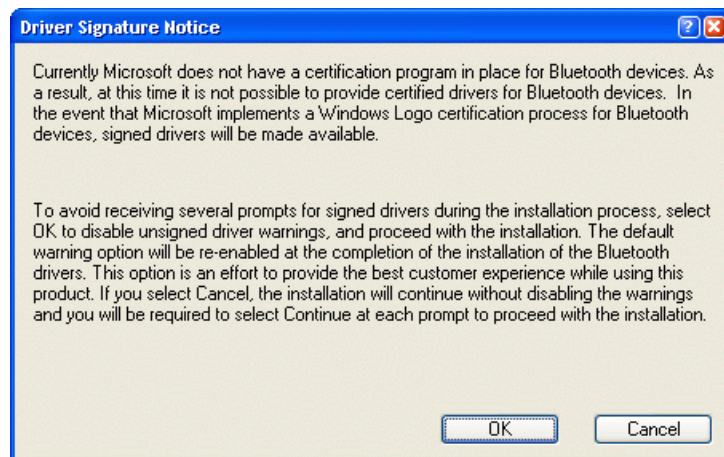


Press OK to accept this driver

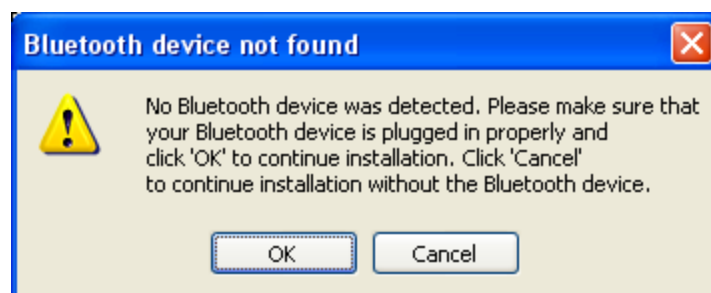

*The driver now needs to have the Bluetooth dongle inserted.
Plug the dongle into a free USB port. The windows Hardware Installation
will now run and some further information windows will appear.
Please wait until the Hardware Detection has finished.
This screen will then disappear automatically*

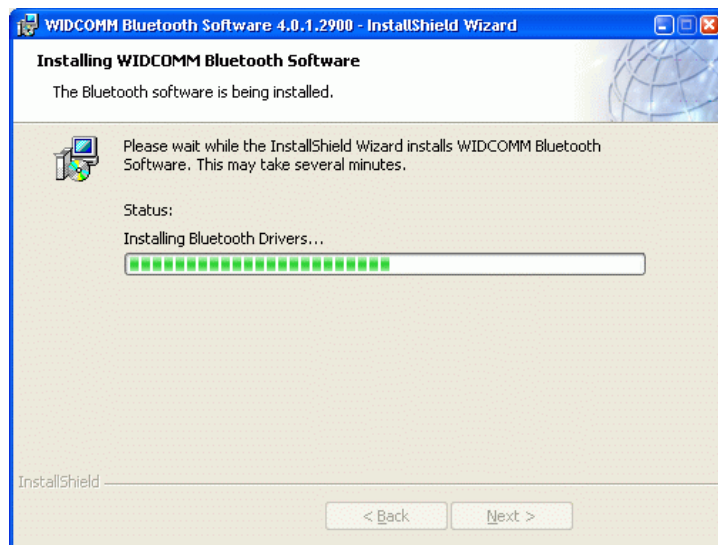

Installation of Bluetooth support on your Computer. Other information messages may appear. Please wait until the Installation completes.

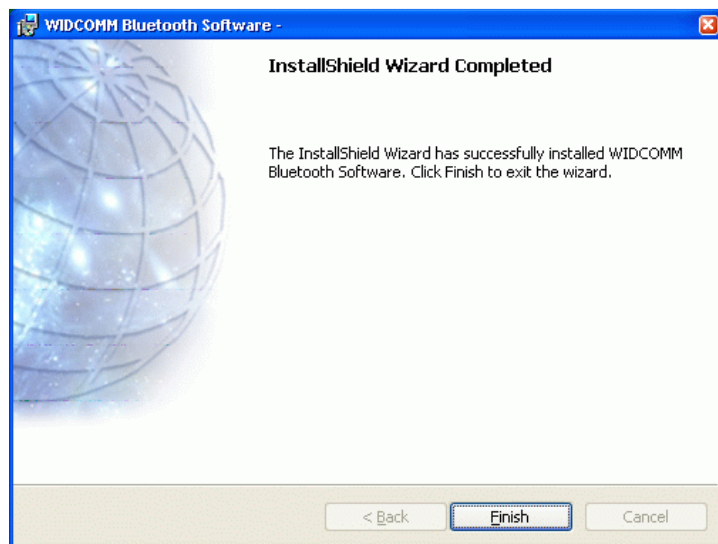

Installation of Bluetooth support finished.

The above mentioned white on Blue "B"-Bluetooth icon now appears in the system tray.

Step 2 Configure Bluetooth Support (First Time Users)

After successful driver installation a white on blue Bluetooth icon appears in the system tray on the right bottom side of your desktop and a new Icon “My Bluetooth Places” appears on your desktop:



Configure Bluetooth Support using external dongle

Please follow this instruction to set up a communication port to the TD system if you are using the external dongle with the above mentioned driver (not windows built in support).


First usage configuration

After the new installation of the Bluetooth support on your computer, you have to configure the type of service your computer uses.

Double click on the Bluetooth icon in the system tray or the “My Bluetooth Places” icon on your desktop to bring up the configuration wizard:




Initial Bluetooth configuration (only has to be done once)

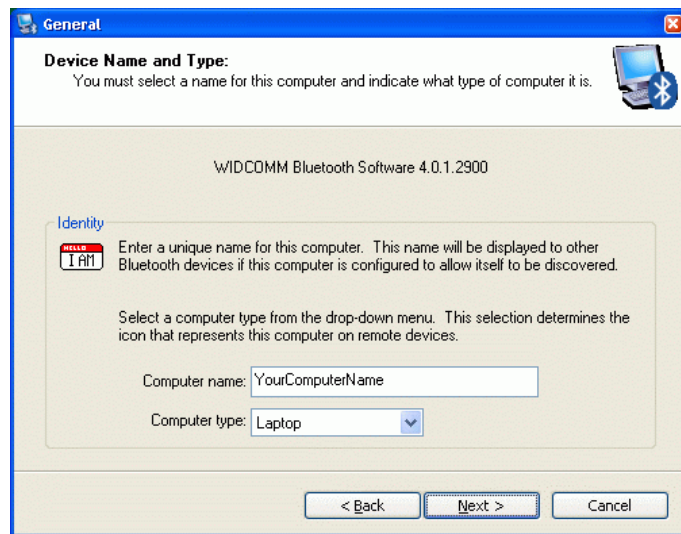


Type in the name and type of your computer



Start Configuration

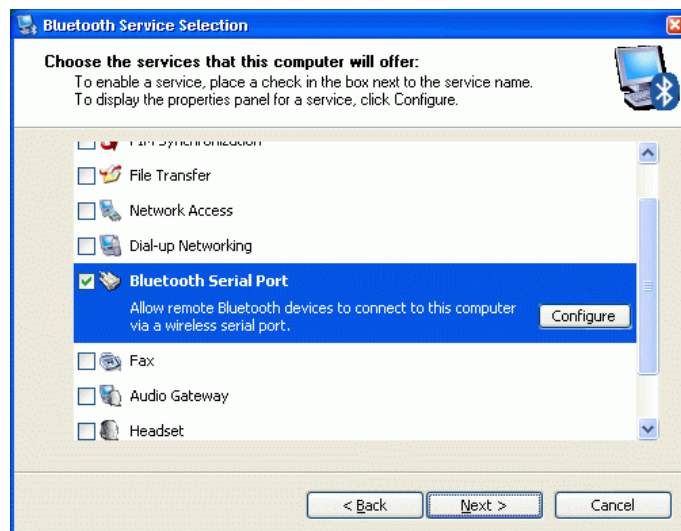

Check or uncheck those Bluetooth services you want to use.

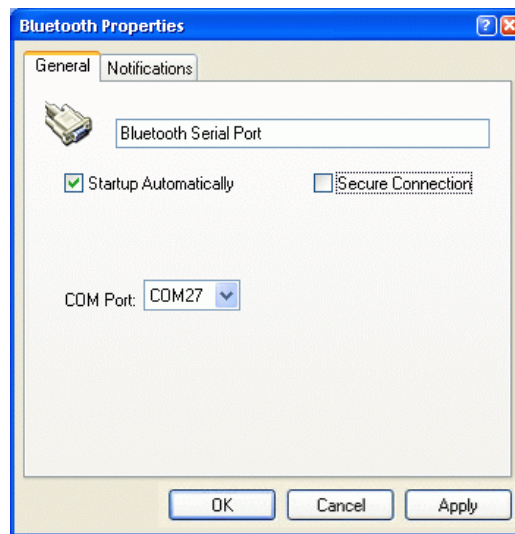

Bluetooth Serial Port Configuration. Leave as suggested. Take note of the serial port number.



Press Skip to tell the system that you will connect to the TD system at a later stage.



Finished Initial Setup of Bluetooth Support.

Step 3-A: Setting up a TD Communication Port (External Dongle)

After installation and configuration of the Bluetooth drivers and hardware dongle, an icon called “My Bluetooth Places” gives you access to all Bluetooth specific properties and configurations.

All configured devices are listed under the “My Bluetooth Places”.




Switch on the TD system

Before connecting, reset the TD System by switching the main power switch off and then ON again.

Make sure the TD system is within 50 foot / 15 meters of the connecting computer. Since the Bluetooth RF signals can be affected by other wireless systems and obstructions such as WLAN or other RF devices, try moving the TD system closer to your computer if you cannot get a “pairing” connection from following the procedure below.

Setup the Communication Port to connect to the TD30


Start to set up a communication port to the TD system by double-clicking on the “My Bluetooth Places” icon.

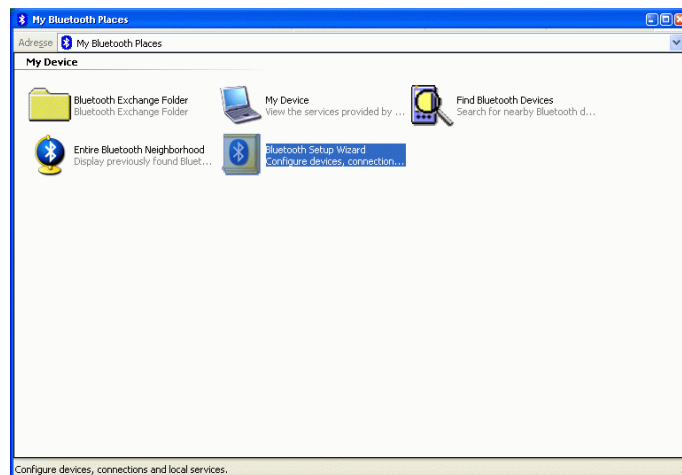


*My Bluetooth Places:
Select Bluetooth Setup Wizard to connect to TD system.*




Select "I want to find a specific Bluetooth device ..." to find the TD system

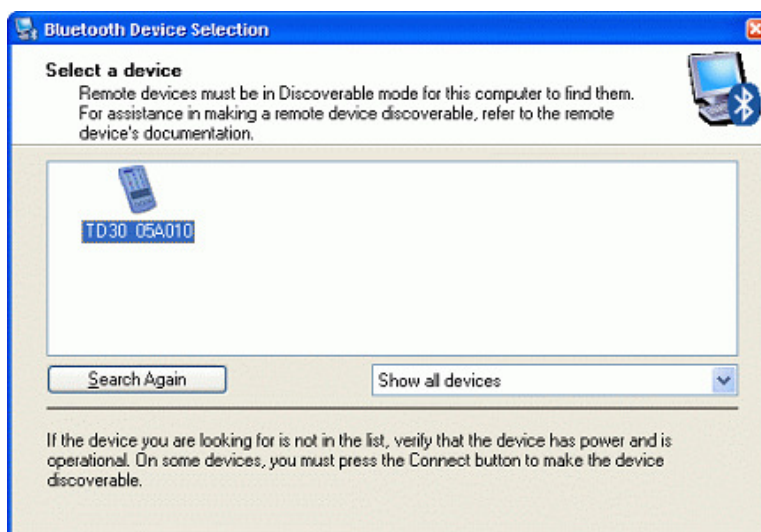


All available Bluetooth devices are listed.
 TD systems are shown with the last 6 digits of the Serial number.
 Select the TD unit you want to connect to.

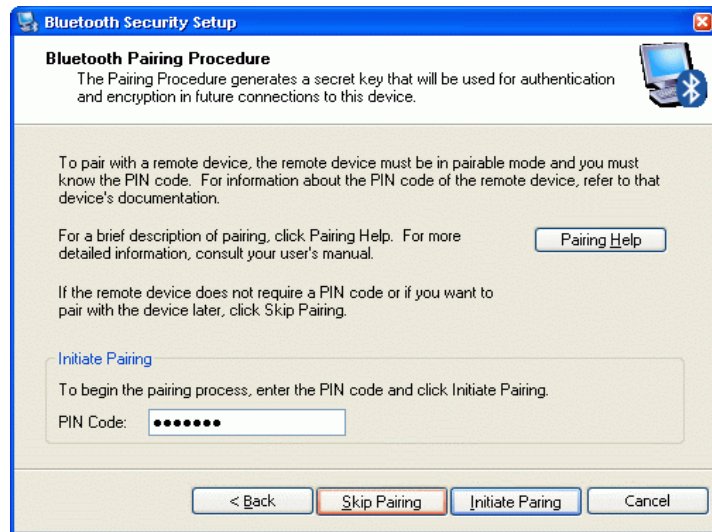


Pair the device. Type in the PIN code "welcome" and press "Initiate Pairing".
A message "No Com port available" may be appear. Just quit with ok.

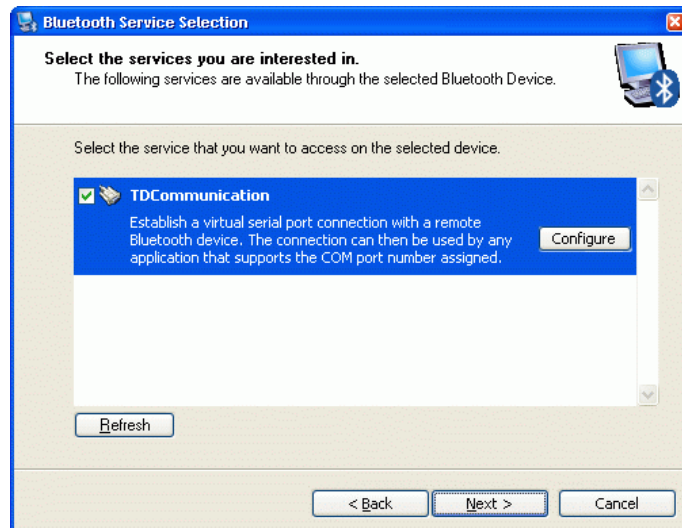


Check the "TDCCommunication" service to use. A message to configure the port will appear.

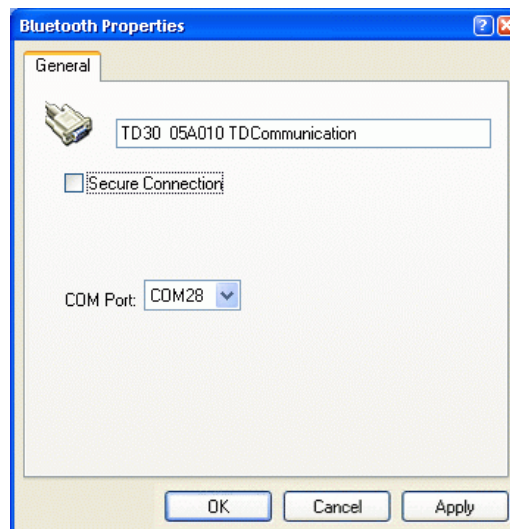

Leave default setting for this port. Make note of it. You can use either Secure or Unsecured Connection.

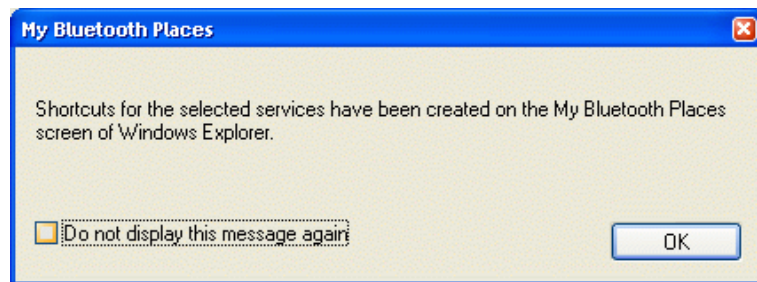

Successful Setup of communication port!

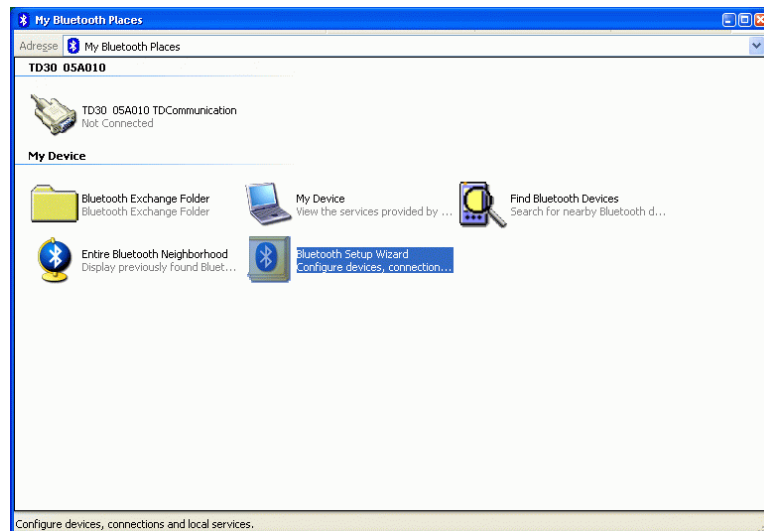


The TD system is now shown as an icon in "My Bluetooth Places"

Initial Connection to the TD unit (Establish and Test connection)

To establish the connection and to fix the settings of the COM-port you have to perform an initial connection to the TD unit. This is also verifies a correct setup.

Double click the TD System icon.

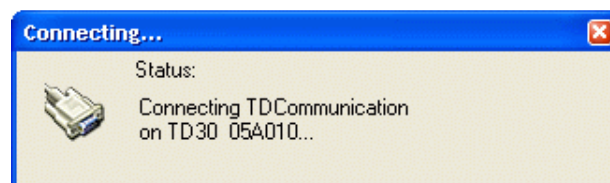

Connecting to the TD System



Established Connection!

Read the information and note the COM-Port Number.


This number is used by the TD ControlCenter to communicate with the TD unit.

You can use the 3rd page of the manual to write down this

Configuration number for later reference purposes.

Close (disconnect) the Test connection

Right click on the TD System icon and select Disconnect.

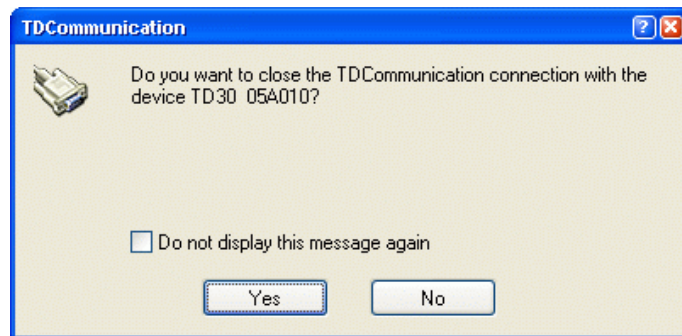

Disconnecting

It is also possible to switch off the TD system and the connection will automatically be closed.

The System is now configured and you can start working with the TD ControlCenter. You will use the given COM-Port number to set in the ControlCenter and press the connect button.

Step 3-B: Setting up a TD Communication Port (Windows Supported)

If your Windows operating System already supports your Bluetooth Hardware you can use the Windows Bluetooth System instead of a separate driver to set up the communication.

Windows shows you the Bluetooth icon in the System Tray on the right bottom side of your desktop. This gives you access to all Bluetooth specific properties and configurations.




Switch on the TD system

Before connecting reset the TD System by switching the main power switch off and on.

Make sure the TD system is within the range of 50 feet / 15 meters to the computer. Internal integrated Bluetooth devices often have closer working ranges than external. So you maybe have to reduce the distance to get good connectivity.

Setup the Communication Port


Start to set up and allocate a communication port to the TD system by double-clicking on the Bluetooth icon in the system tray.

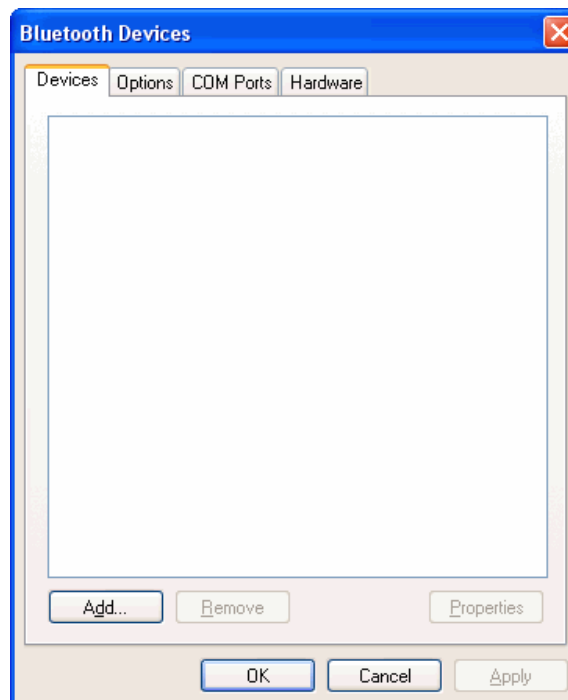

Bluetooth Devices, press Add to start




Check Device is switched on and ready to discover

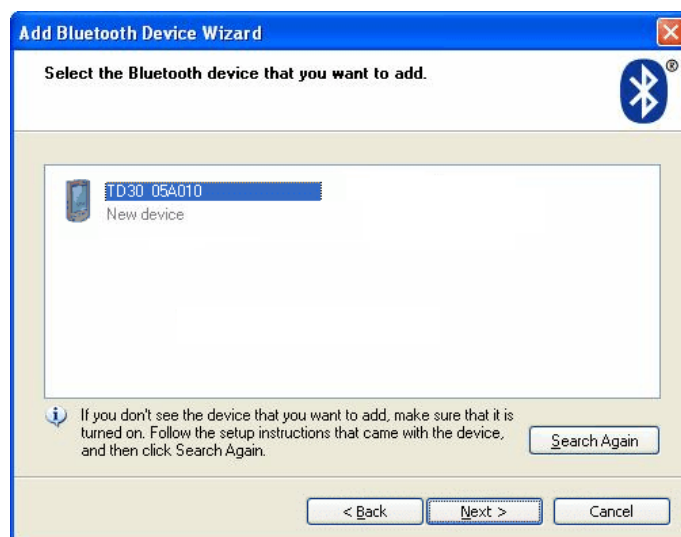

*All available Bluetooth devices are listed.
TD systems are shown with the last 6 digits of the Serial number.
Select the TD unit you want to connect to.*




Select "Use Passkey from documentation" and enter "welcome" to use as key

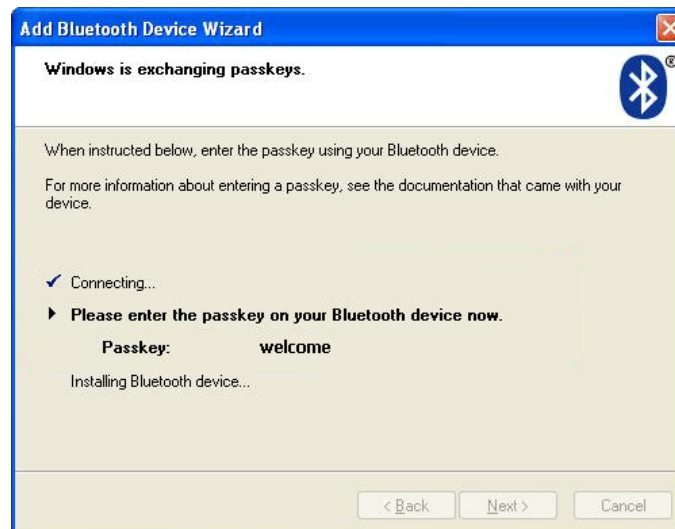

Windows connects to the TD System and installs the relevant drivers.



Read the information and note the "outgoing/outbound" COM-Port Number. This number is used by the TD ControlCenter to communicate with the TD unit. You can use the 3rd page of the manual to write down this Configuration Com Port number for later reference purposes.

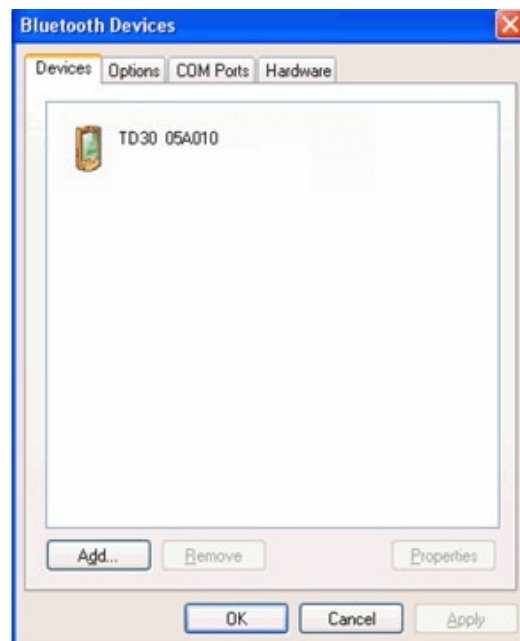

The System is now configured.

You can start working with the TD ControlCenter.

Use the given COM-Port number in the TD ControlCenter and press the connect button.

7 Disconnection Procedure



DANGER


Electric Shock Hazard

Never assume that equipment is safe to handle without using the necessary safety equipment and earthing procedures.

Disconnection procedures must comply with local safety regulations.




- Before disconnecting test lead, DUT must be discharged and earthed.
- Earth connections must be removed last!

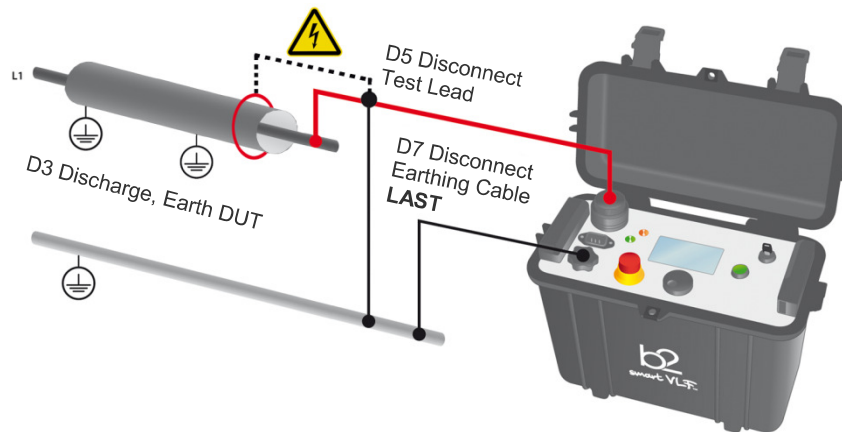

Disconnection



Normal Conditions

Steps **D 1- D 8** describe the **normal disconnection** procedure.

Step	Procedure (Normal Disconnection)	
D1		Press Emergency OFF (1)
D2		Verify HV status <ul style="list-style-type: none"> • Wait until LED red (3) light deactivates (indicates residual voltage < 100V)
D3		Discharge and earth the DUT complying with local safety regulations
D4		Lock HVA in disabled state to prevent against unauthorized use: <ul style="list-style-type: none"> • Turn Key switch (7) to OFF Position and remove Key
D5		Disconnect the Test Lead <ul style="list-style-type: none"> • Disconnect the test lead from the DUT • Unscrew the test lead from the HV output connector (11)


Step	Procedure (Normal Disconnection)
D6 	Disconnect power supply cable from power supply plug (9)
D7 	Disconnect Earth <ul style="list-style-type: none"> • Disconnect the earthing cable from the HVA earthing connector (10) • Disconnect the earthing cable from the DUT.

System Failure

In case of errors or failure due to a loss of power during testing, additional precaution is required. The HVA LED red (3) light cannot indicate when residual voltage is less than 100V. To guarantee that the residual voltage has dissipated before removing the test lead, the DUT must be de-energized using a discharge stick.

Steps **D 1*-D 7*** describe the **disconnection** procedure in case of **system failure**.

Step	Procedure (System Failure Disconnection)
D1*	Switch HVA OFF <ul style="list-style-type: none"> • Press Emergency OFF (1) • Turn the HVA main switch (8) off • Lock HVA in disabled state to prevent against unauthorized use: Turn Key switch (7) to OFF Position and remove Key
D2*	<ul style="list-style-type: none"> • Verify correct functioning of discharge stick
D3*	Discharge and earth the DUT complying with local safety regulations <ul style="list-style-type: none"> • Discharge DUT using a discharge stick
D4*	Before disconnecting test lead, wait until residual voltage has dissipated. <ul style="list-style-type: none"> • Required wait time depends on the resistance of the discharge stick. (A) • Rule of thumb: For standard discharge sticks, wait a minimum of 20 seconds afterwards earth the cable immediately.
D5*	Disconnect the Test Lead <ul style="list-style-type: none"> • Disconnect the test lead from the DUT • Unscrew the test lead from the HV output connector (11)
D6*	Disconnect power supply cable from power supply plug (9)
D7*	Disconnect Earth <ul style="list-style-type: none"> • Disconnect the earthing cable from the HVA earthing connector (10) • Disconnect the earthing cable from the DUT.

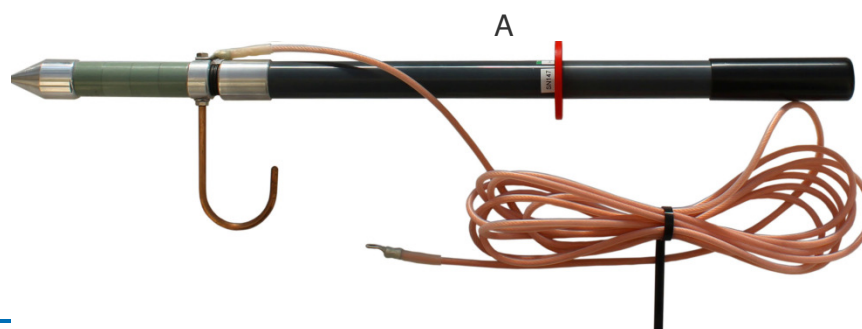

8 Instrument Care

Cleaning



DANGER

Electric Shock Hazard!

Only clean the instrument when turned off!

HV Cable

Clean the HV Cable connection points, after use, before storing



Storage



CAUTION

Instrument Damage

Do not store the HVA28TD outdoors!
Keep the HVA28TD away from liquids!

HVA should be stored indoors in the following environmental conditions:

- Temperature: -25°C to 70 °C (-13F to 158F)
- Humidity: 5-85% non condensing

Maintenance and Repairs



NOTICE

Authorized personnel only!


Repairs and maintenance should only be performed by authorized b2 personnel.



One yearly inspection by authorized b2 personnel is recommended

9 Glossary and Abbreviations

The following explains abbreviations and selected terms used in this document in alphabetical order.

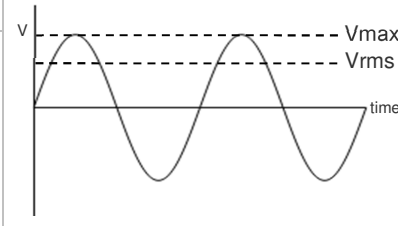Term	Explanation
Arc	Self-maintained gas conduction for which most of the charge carriers are electrons supplied by primary-electron emission (source: IEC)
Auto Adjust Frequency "0.1 Hz/Auto"	Mode that maximizes output frequency to highest allowable value <ul style="list-style-type: none"> • Greatest allowable frequency depends on the test load and test voltage applied • For loads greater than 1μF, the instrument automatically reduces the frequency
DUT	Device under Test
Duty (continuous)	Load state in which the relay remains energized for a period long enough to reach thermal equilibrium
Fault	An unplanned occurrence or defect in an item which may result in one or more failures of the item itself or of other associated equipment (source: IEC)
Frequency[Hz]	Number of cycles per unit of time ; $f=1/$ Period (Time), units=Hz 1Hz = 1cycle / 1 second 0.1 Hz = 1cycle / 10 second , etc.
Hipot	High potential (voltage)
HV	High Voltage (tension) <ul style="list-style-type: none"> • Extremely high voltage: typically 220kV or 380kV • High voltage: typically 110kV
IEC	International Electrotechnical Commission
Peak value	Maximum Voltage = V_{max}
RMS value	Root Mean Square voltage <ul style="list-style-type: none"> • $V_{rms} = V_{max} / \sqrt{2}$
	
To Short	Forcing the electric potential differences between two or more conductive parts to be equal to or close to zero (Infinite current flows in a short circuit)
To Trip	Opening the circuit (no current flows in open circuit)
VLF	Very Low Frequency <ul style="list-style-type: none"> • Typically between 0.01 -0.1 Hz

10 Declaration of Conformity

The HVA28TD is CE certified and has met the following requirements of the European Council:

Category	Standard
EMC	IEC61004-2 , ESD Level 4 (8/15kV) IEC61004-4 , Burst 4kV 5kHz EN55011
Safety	EN60950 EN50191 EN61010-1


HVA28 TD

Ultra-compact and universal VLF High Voltage Test Set with integrated TD Diagnostics

The b2 electronic GmbH high voltage testing and diagnostics device **HVA28TD** offers outstanding features in terms of size, weight, ruggedness, safety and ease of use. Testing and diagnostics of medium voltage cables, rotating machines and transformers was never that easy.

Short Facts

- VLF and DC Output
- Tan Delta Diagnostics (TD)
- Sheath Test
- Sheath Fault Location
- Vacuum Bottle Test

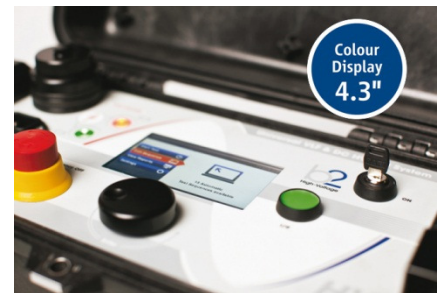

Features

- Output voltage 28kV_{peak} 20kV_{rms}
- Pure sinusoidal output voltage (load-independent)
- Output current 20mA max.
- Highest test capacity of 10µF
- Ultra light and compact weight (14kg)
- Total protection – unbreakable, watertight, dustproof, chemical resistant and corrosion proof case
- Protection class IP67 (with closed lid)
- Unlimited and continuous duty cycle
- Large Colour display (4,3")
- Internal TD measurement with high accuracy (1×10^{-4})
- Tan Delta measurement with various frequency (0,01 – 0,1 Hz)
- Cable testing according: CENELEC HD 620/621, IEEE 400.2-2004, IEEE 400-2001, etc.
- Programmable test sequences
- USB and Bluetooth connections
- Upgradable with partial discharge diagnostic system (optional)
- Integrated 12kV transient protection (50Hz)
- Dual Discharge Device (DDD®), both integrated and automatic discharge devices
- Easy exchangeable HV cable
- Intuitive menu operation
- Sheath Test
- Sheath Fault Locating (in combination with Earth Fault Locator)
- Vacuum Bottle Test

HVA28 TD

Type	HVA28 TD	
Article number	SH0216	
Input Voltage	100 – 240 V 50/60 Hz /400 (VA)	
Output Voltage	Sinusoidal	0 – 28 kV peak, 20 kV rms
	DC	± 0 – 28 kV
	Squarewave	0 - 28 kV
	Accuracy	± 1%
	Resolution	0.1 kV
Output Current	0 – 20 mA (Resolution 1 µA) Accuracy: ±1%	
Resistance Range	0.1 MΩ...5 GΩ	
Output Frequency	0.01 ... 0.1 Hz in steps of 0.01 Hz (default 0.1 Hz) - auto frequency	
Output Load	0.5 µF @ 0.1 Hz @ 20kV rms 5.0 µF @ 0.01 Hz @ 20 kV rms 10.0 µF maximum Capacitance! ¹	
Sheath Test	Max Test Voltage	10 kV
	Trip Current	0.1 mA – 5.0 mA
Sheath Fault Location ²	Max Test Voltage	10 kV
	Pulse/Period	1:3 / 4 s, 1:5 / 4 s, 1:5 / 6 s, 1:9 / 6 s
Output Modes	AC (VLF) Symmetrical and load independent across full range, DC (plus or negative polarity), Burn-/Fault Condition or Fault Trip Mode, Jacket / Sheath Testing	
Safety	50Hz 12kV Feedback Protection / Dual Discharge Device (internal)	
Memory	50 Test Records Stored	
Metering	Voltage and Current (True rms and / or peak), Tan Delta, Capacitance, Resistance, Time, Flashover Voltage	
Tangens Delta accuracy	Load > 10 nF	± 1 x 10 ⁻⁴
Duty	Continuous! No thermal limitation for operating time.	
HV Cable	4 m with Alligator clamps	
Software	"HVA Control Center"	
Computer interfaces	Bluetooth	standard
	USB	standard
Environmental conditions	Storage: -25°C to + 70°C, Operating: -5°C to + 45°C Humidity: 5-85% non condensing	
Dimensions L x W x H	Peli Case 1430, 430 x 240 x 340 mm	
Weight	14 kg	
Upgrades (Optional)	Partial Discharge System	

¹ At lower frequency and voltage

² in combination with locating device (not in scope of supply)

Options

- Partial Discharge Diagnostics System PD30

Scope of delivery

- HVA28 TD Testing Device
- HV cable 4 m
- Power and earthing cable
- Accessory bag
- USB stick
- Operating manual



b2 High-Voltage is a business division of

b2 electronic GmbH
Riedstrasse1, 6833 Klaus, Austria, Telephone +43 (0)5523 57373
Fax +43 (0)5523 57373-5, info@b2hv.com, www.b2hv.com



DHV1299 Rev00
ENGLISH

Subject to alternations.
Errors excepted,
Illustrations are not binding.



AC/DC Motors & Generators



Electrical Engineering



Mechanical Engineering



Condition Monitoring



Precision Machining



Marine Electronics



Elec & Mech Product Supply



Calibration and Rental Services



Quality Coatings



Transformers



Control Panels



Compressors



Auxiliary Power Systems

To differentiate our organisation in order to achieve continuous, sustainable growth, TDC endeavours to fully understand and exceed the expectations of our customers, and to work proactively to deliver **Engineering Excellence.**



t: +44 (0)1224 710077 | e: info@tdcaberdeen.co.uk | w: www.TDCaberdeen.co.uk

a: TDC Aberdeen Ltd | Bankhead Industrial Estate | Bankhead Avenue | Bucksburn | Aberdeen | AB21 9ET